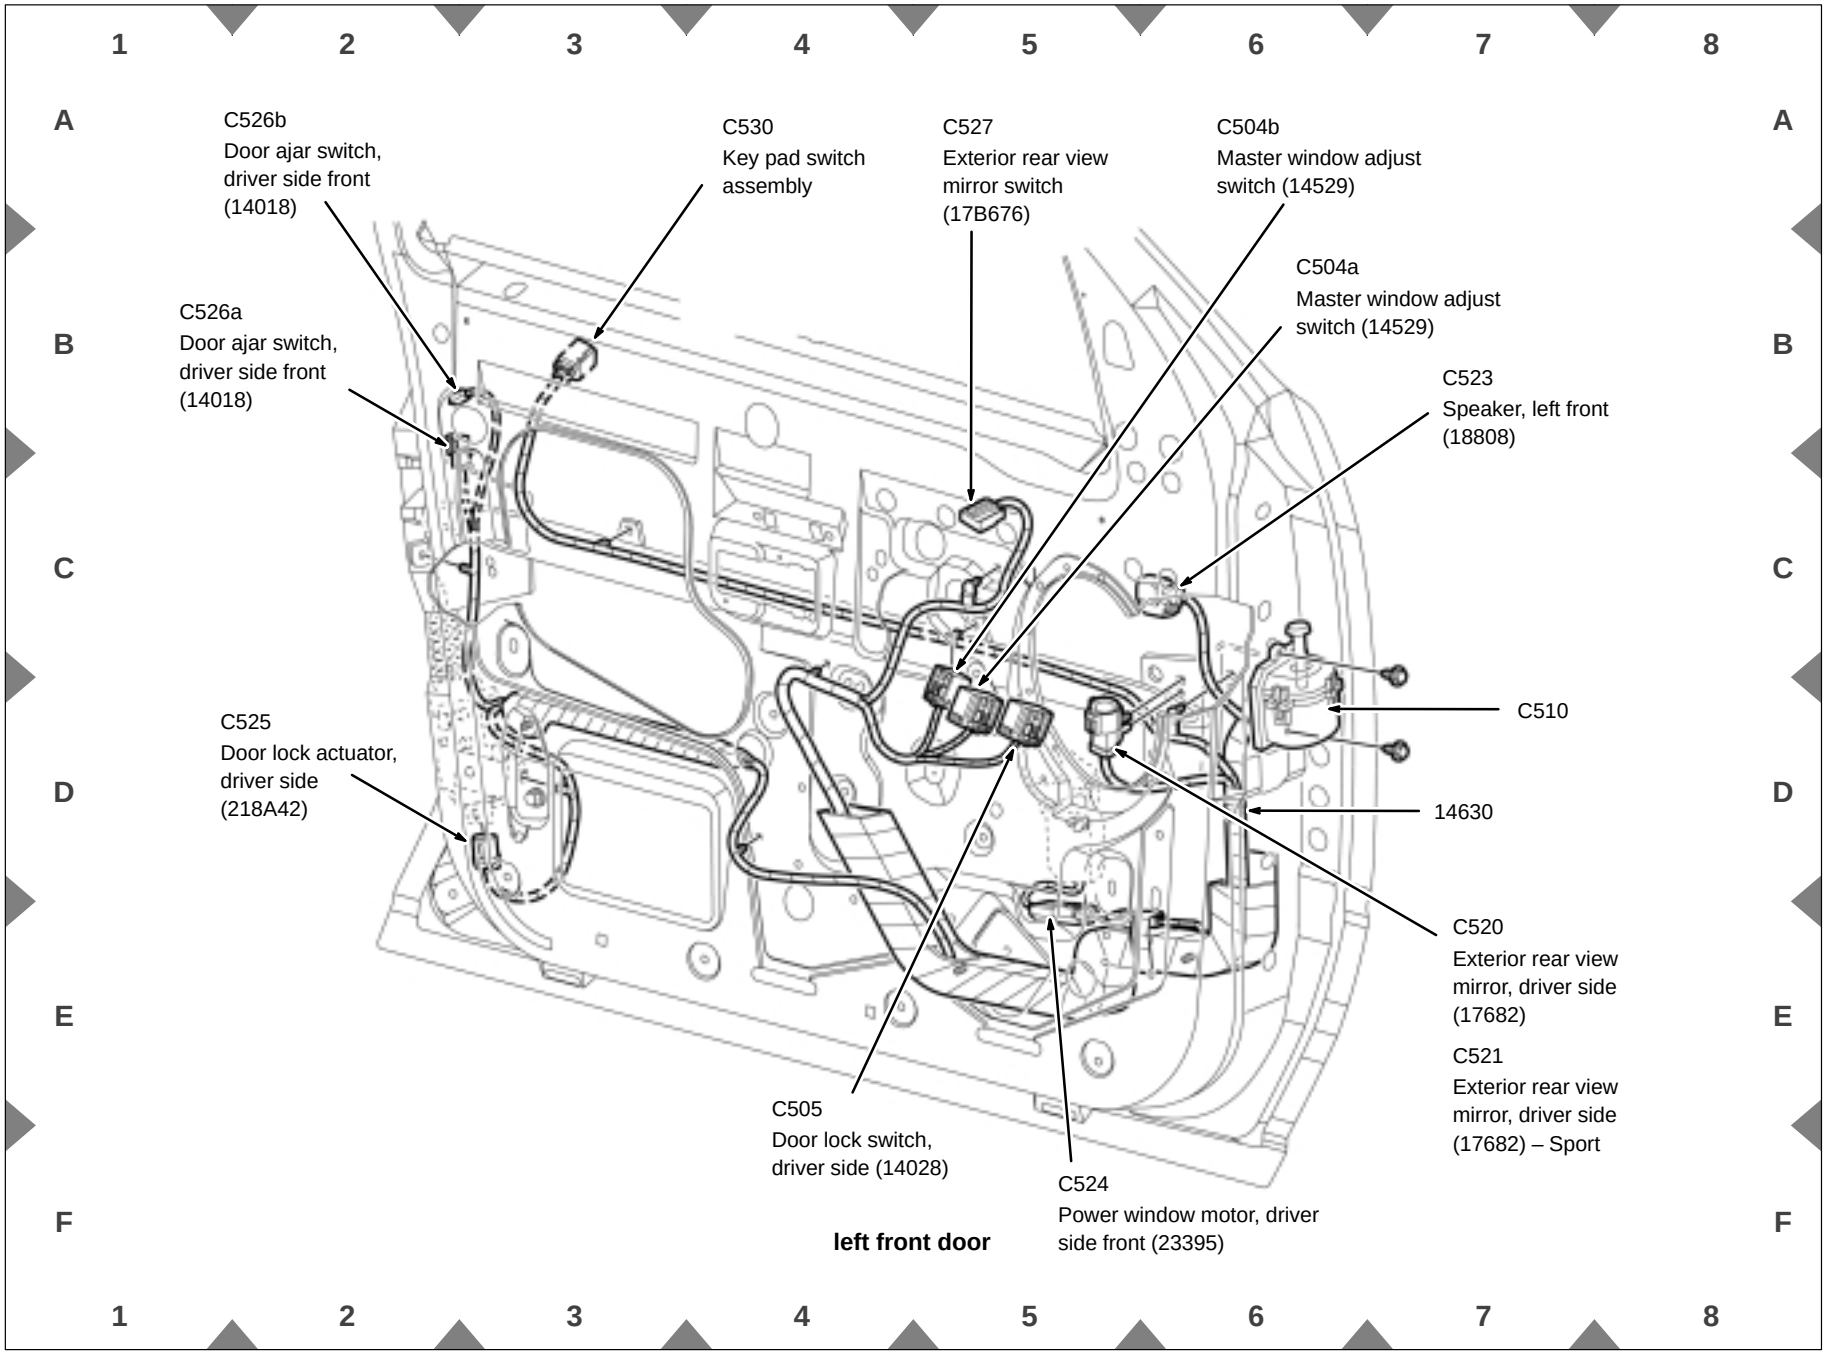

1
2
3
4
5
6
7
8
A
B
C
D
E
F
C526b
Door ajar switch, driver side front (14018)
C530
Key pad switch assembly
C527
Exterior rear view mirror switch (17B676)
C504b
Master window adjust switch (14529)
C504a
Master window adjust switch (14529)
C526a
Door ajar switch, driver side front (14018)
C523
Speaker, left front (18808)
C510
C525
Door lock actuator, driver side (218A42)
14630
C520
Exterior rear view mirror, driver side (17682)
C521
Exterior rear view mirror, driver side (17682) – Sport
C505
Door lock switch, driver side (14028)
C524
Power window motor, driver side front (23395)
left front door