87-1 AUTOLAMPS/DELAYED EXIT

2001 CONTINENTAL
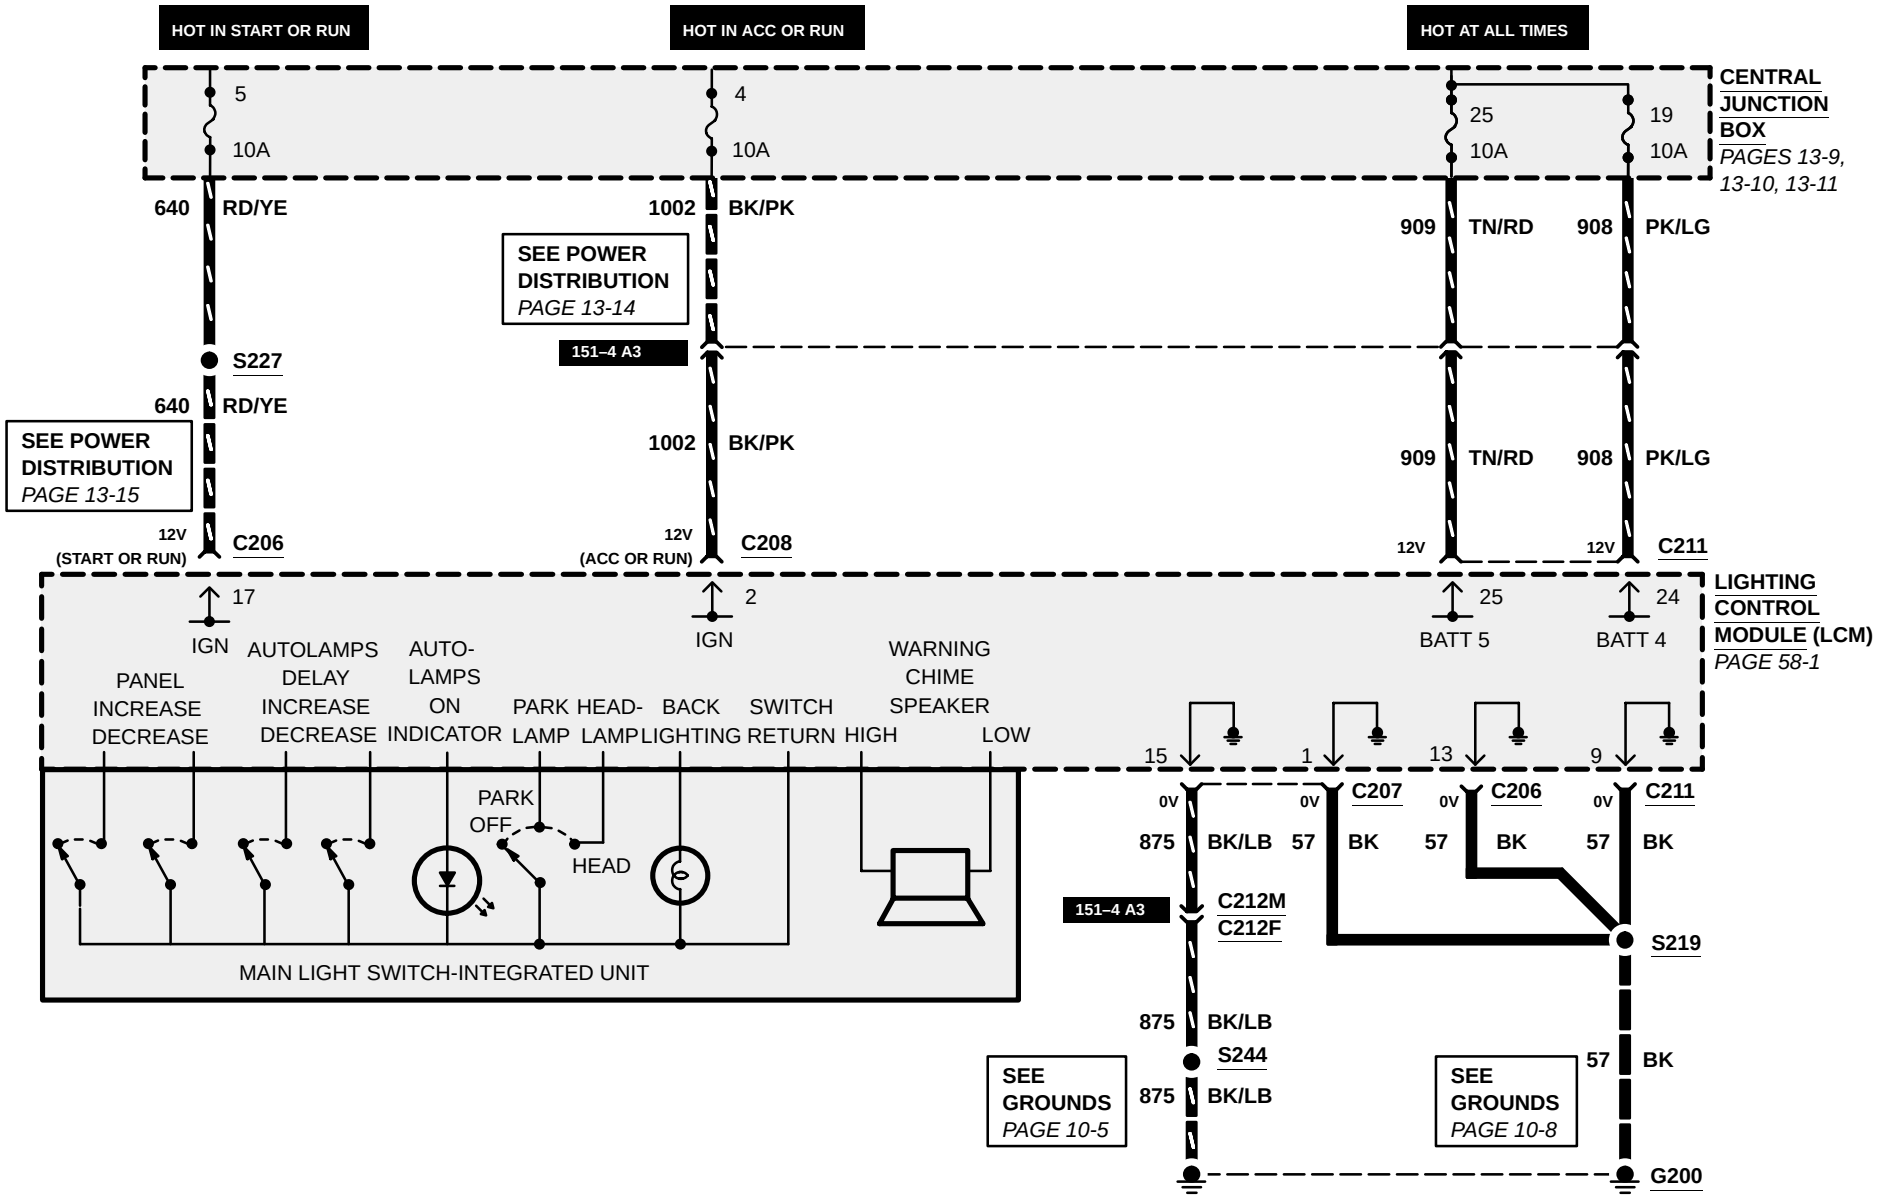
For diagnostic information, refer to Sections 417-01 and 417-02 of the Workshop Manual.