C503

14A488

N440
Memory set switch
(14776)

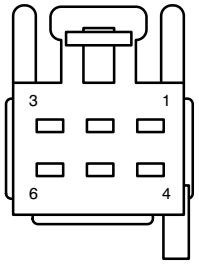

F06167

Pin	Circuit	Circuit function
1	270 (BN/OG)	Memory set switch (14776)
2	268 (BK/OG)	Memory set switch (14776), position 2
3	267 (BN/LG)	Memory set switch (14776), position 1
4	566 (DG)	Voltage supplied at all times (overload protected)
	1205 (BK)	Ground
5	272 (WH/OG)	Memory set switch (14776), Illumination, input
6	1203 (BK/LB)	Ground

C504a (BU)

14A488

N447
Master window adjust switch (14529)

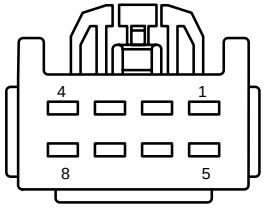

F08167

Pin	Circuit	Circuit function
1	–	not used
2	1205 (BK)	Ground
3	314 (TN/LB)	Window switch, feed, right front, Down
4	313 (WH/YE)	Window switch, feed, right front, Up
5	–	not used
6	400 (LB/BK)	Accessory relay, switched power, output
7	991 (TN/LB)	Master window adjust switch (14529), feed, Down
8	992 (WH/BK)	Master window adjust switch (14529), feed, Up