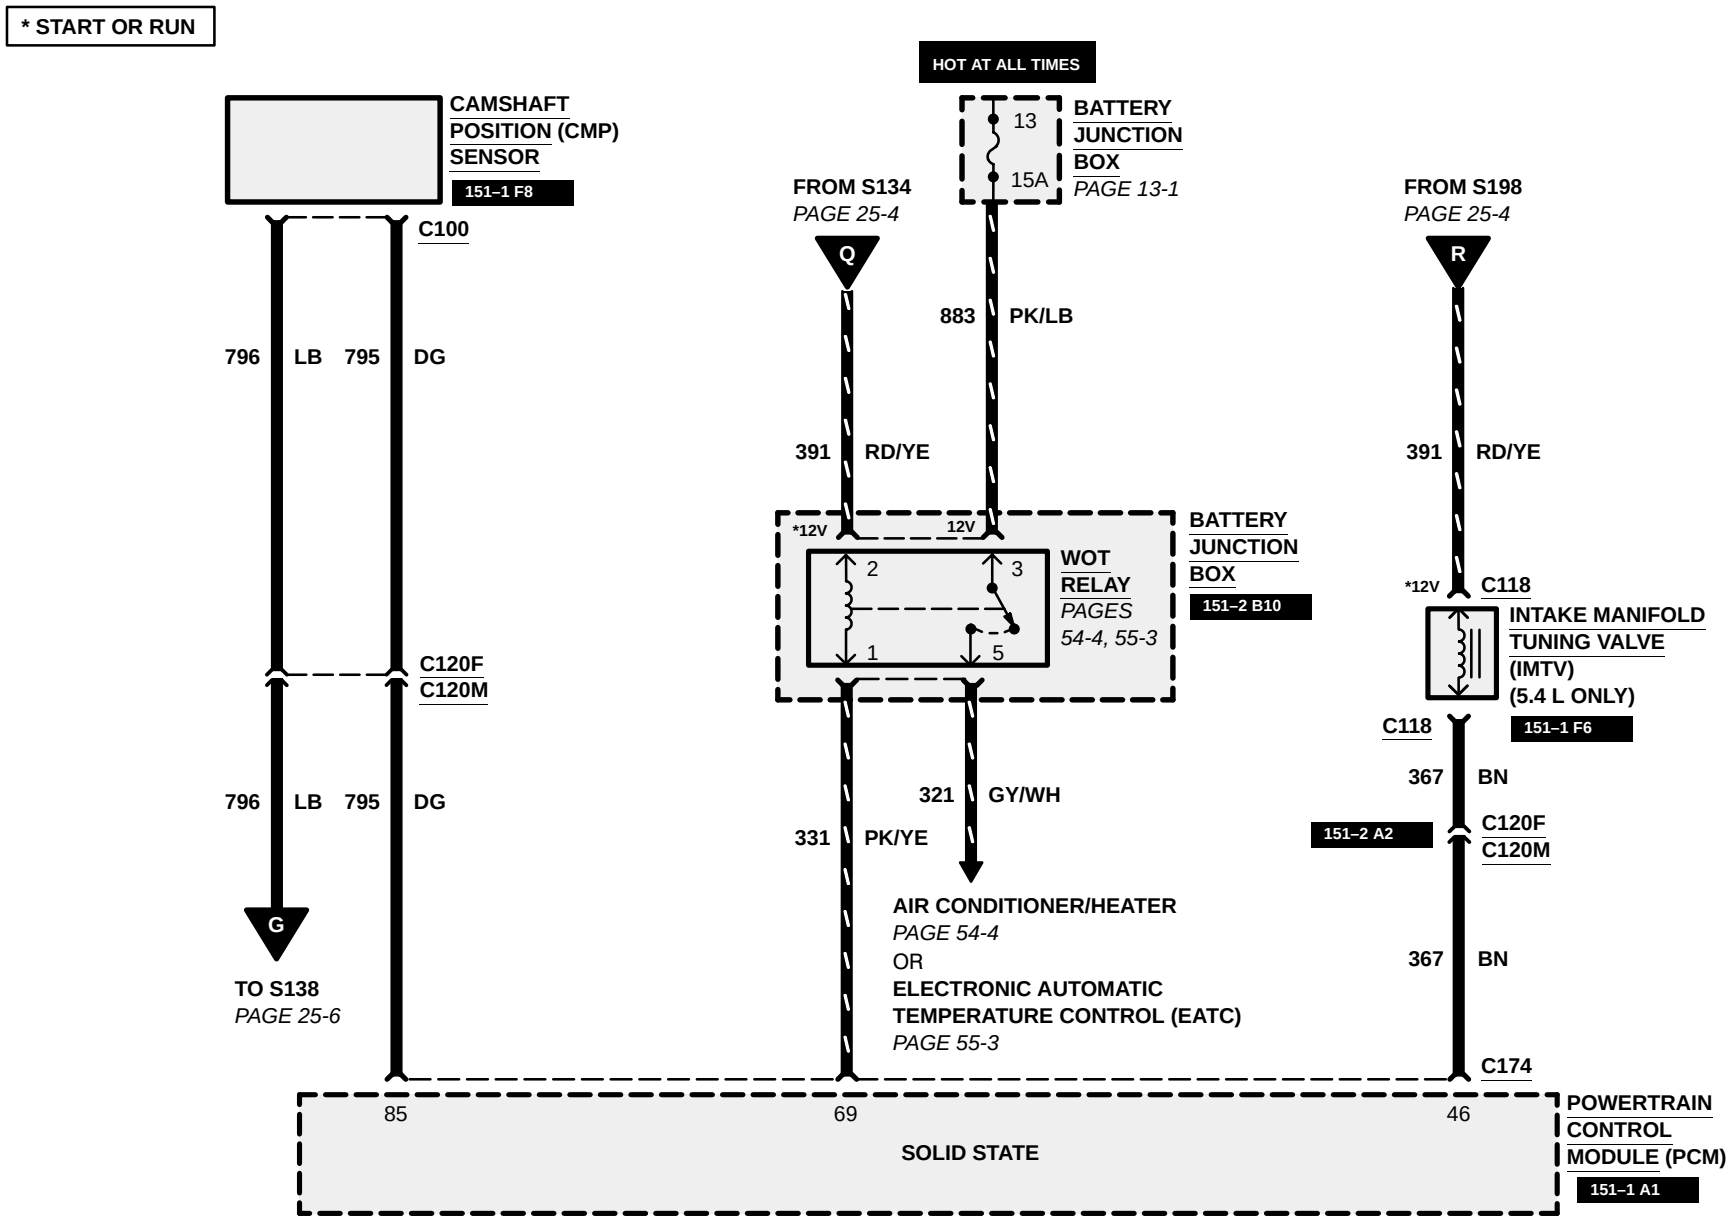
* START OR RUN
HOT AT ALL TIMES
CAMSHAFT POSITION (CMP) SENSOR
151–1 F8
C100
796 LB
795 DG
C120F
C120M
796 LB
795 DG
G
TO S138
PAGE 25-6
FROM S134
PAGE 25-4
13
15A
BATTERY JUNCTION BOX
PAGE 13-1
Q
883 PK/LB
391 RD/YE
*12V
12V
2
3
1
5
WOT RELAY
PAGES 54-4, 55-3
BATTERY JUNCTION BOX
151–2 B10
321 GY/WH
331 PK/YE
AIR CONDITIONER/HEATER
PAGE 54-4
OR
ELECTRONIC AUTOMATIC TEMPERATURE CONTROL (EATC)
PAGE 55-3
FROM S198
PAGE 25-4
R
391 RD/YE
*12V
C118
INTAKE MANIFOLD TUNING VALVE (IMTV)
(5.4 L ONLY)
151–1 F6
C118
367 BN
151–2 A2
C120F
C120M
367 BN
C174
85
69
46
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A1