-2

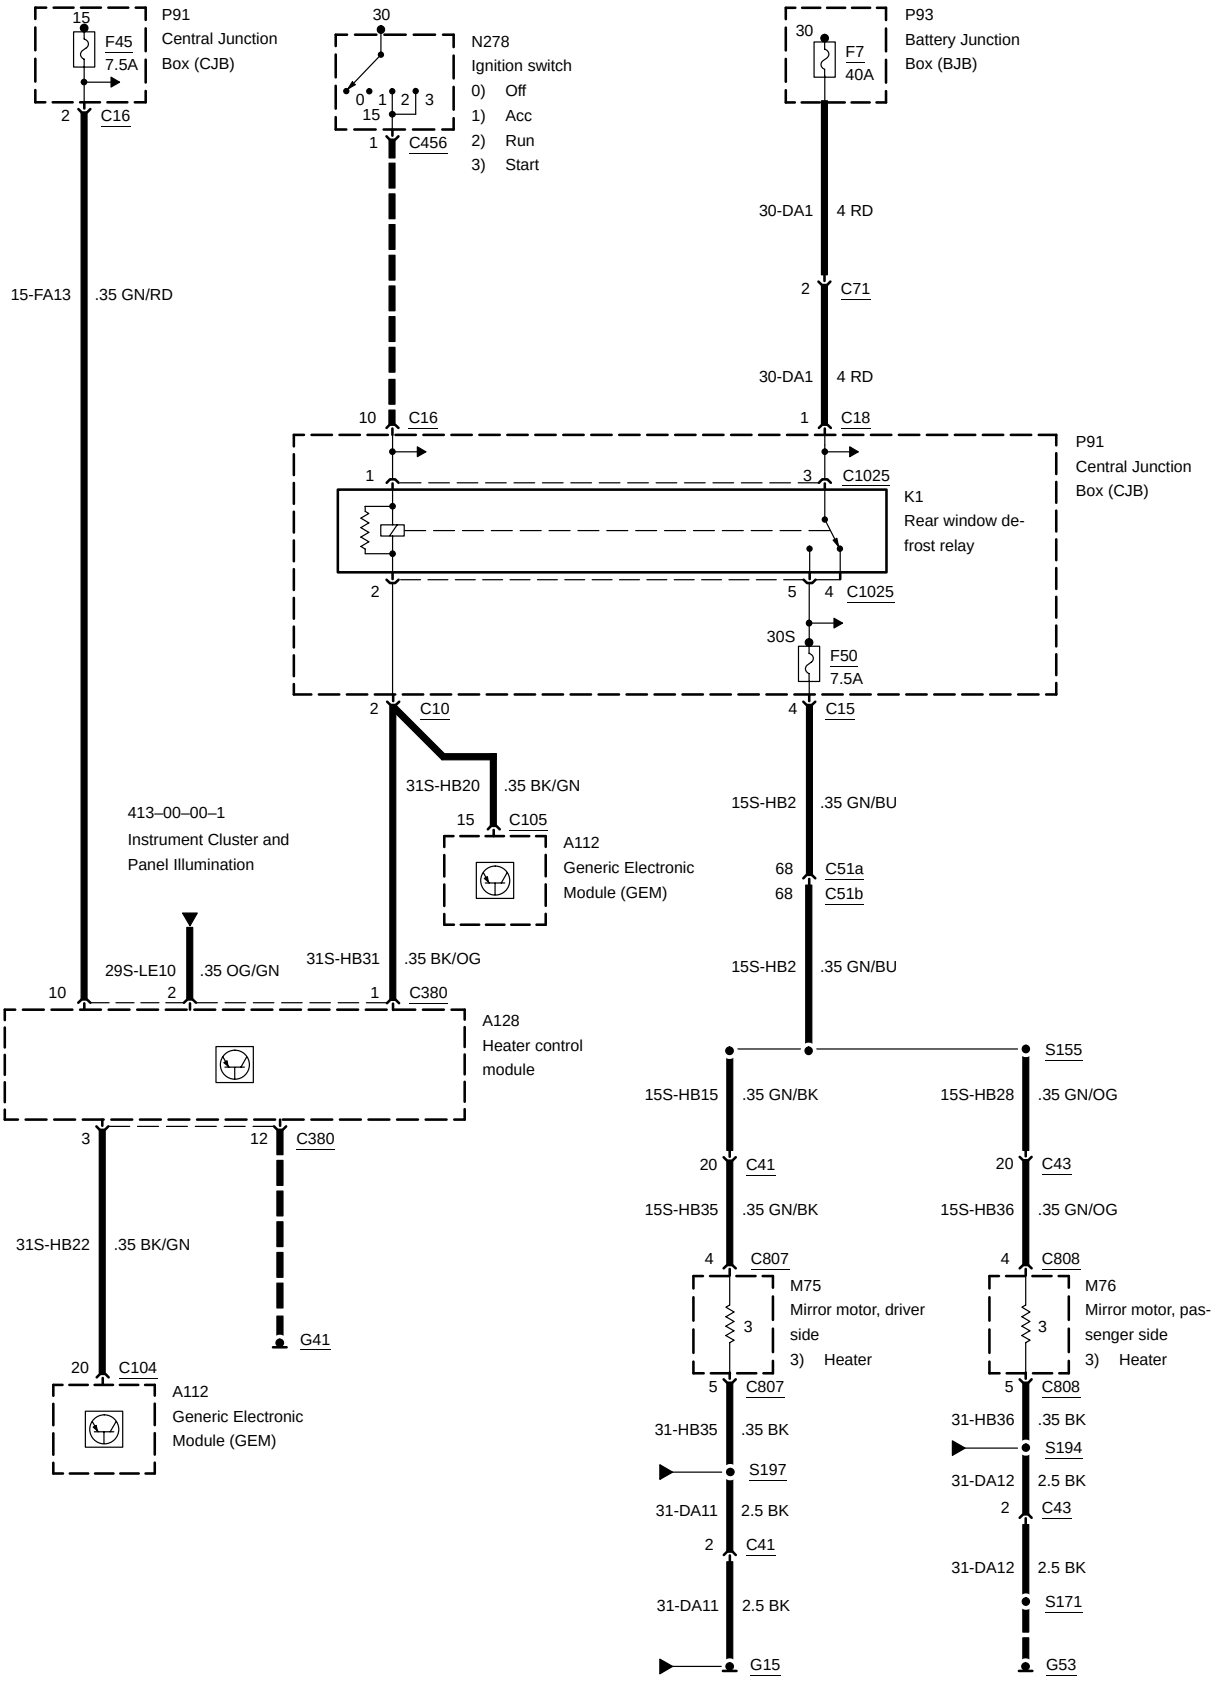
P91
Central Junction
Box (CJB)
F45
7.5A
C16
N278
Ignition switch
0) Off
1) Acc
2) Run
3) Start
C456
P93
Battery Junction
Box (BJB)
F7
40A
30-DA1 4 RD
C71
15-FA13 .35 GN/RD
C16
C18
K1
Rear window de-
frost relay
C1025
F50
7.5A
C10
C15
31S-HB20 .35 BK/GN
C105
A112
Generic Electronic
Module (GEM)
15S-HB2 .35 GN/BU
C51a
C51b
413–00–00–1
Instrument Cluster and
Panel Illumination
29S-LE10 .35 OG/GN
31S-HB31 .35 BK/OG
C380
A128
Heater control
module
31S-HB22 .35 BK/GN
G41
C104
S155
15S-HB15 .35 GN/BK
15S-HB28 .35 GN/OG
C41
C43
15S-HB35 .35 GN/BK
15S-HB36 .35 GN/OG
C807
C808
M75
Mirror motor, driver
side
3) Heater
M76
Mirror motor, pas-
senger side
3) Heater
31-HB35 .35 BK
31-HB36 .35 BK
S197
S194
31-DA11 2.5 BK
31-DA12 2.5 BK
S171
G15
G53