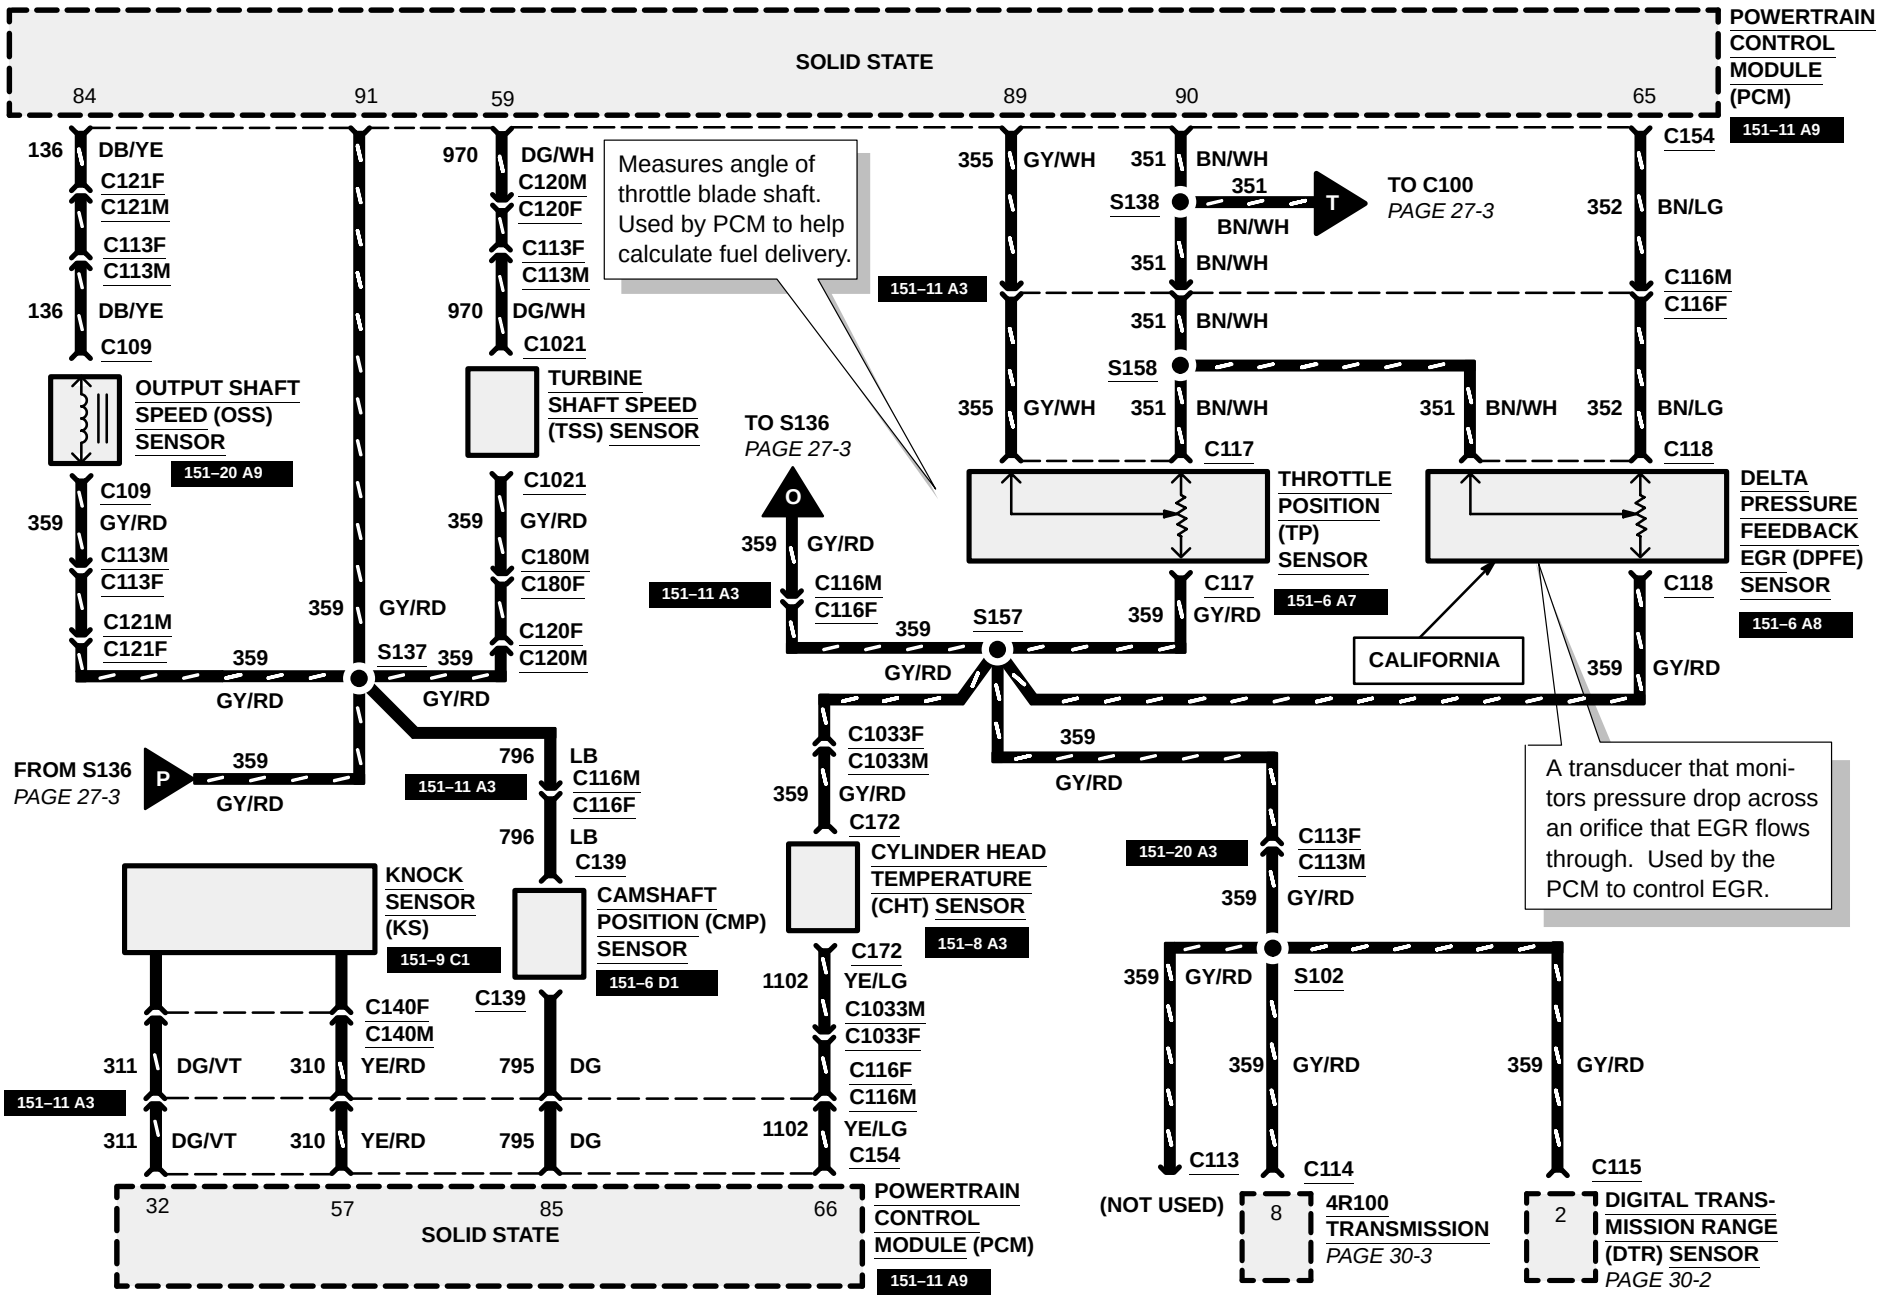
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
84
91
59
89
90
65
Measures angle of throttle blade shaft. Used by PCM to help calculate fuel delivery.
136 DB/YE
C121F
C121M
C113F
C113M
136 DB/YE
C109
OUTPUT SHAFT SPEED (OSS) SENSOR
151–20 A9
C109
359 GY/RD
C113M
C113F
C121M
C121F
359 GY/RD
359 GY/RD
970 DG/WH
C120M
C120F
C113F
C113M
970 DG/WH
C1021
TURBINE SHAFT SPEED (TSS) SENSOR
C1021
359 GY/RD
C180M
C180F
C120F
C120M
359 GY/RD
S137
359 GY/RD
FROM S136
PAGE 27-3
P
359 GY/RD
796 LB
151–11 A3
C116M
C116F
796 LB
C139
KNOCK SENSOR (KS)
151–9 C1
CAMSHAFT POSITION (CMP) SENSOR
151–6 D1
C140F
C140M
C139
311 DG/VT
310 YE/RD
795 DG
151–11 A3
311 DG/VT
310 YE/RD
795 DG
32
57
85
66
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
355 GY/WH
351 BN/WH
S138
351 BN/WH
T
TO C100
PAGE 27-3
352 BN/LG
C154
351 BN/WH
C116M
C116F
151–11 A3
351 BN/WH
S158
355 GY/WH
351 BN/WH
351 BN/WH
352 BN/LG
C117
C118
TO S136
PAGE 27-3
O
359 GY/RD
C116M
C116F
151–11 A3
THROTTLE POSITION (TP) SENSOR
151–6 A7
DELTA PRESSURE FEEDBACK EGR (DPFE) SENSOR
151–6 A8
C117
359 GY/RD
359
S157
C118
359 GY/RD
CALIFORNIA
359 GY/RD
C1033F
C1033M
359 GY/RD
C172
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
151–8 A3
C172
1102 YE/LG
C1033M
C1033F
C116F
C116M
1102 YE/LG
C154
359 GY/RD
151–20 A3
C113F
C113M
359 GY/RD
359 GY/RD
S102
359 GY/RD
359 GY/RD
C113
C114
C115
(NOT USED)
8
4R100 TRANSMISSION
PAGE 30-3
2
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 30-2
A transducer that monitors pressure drop across an orifice that EGR flows through. Used by the PCM to control EGR.