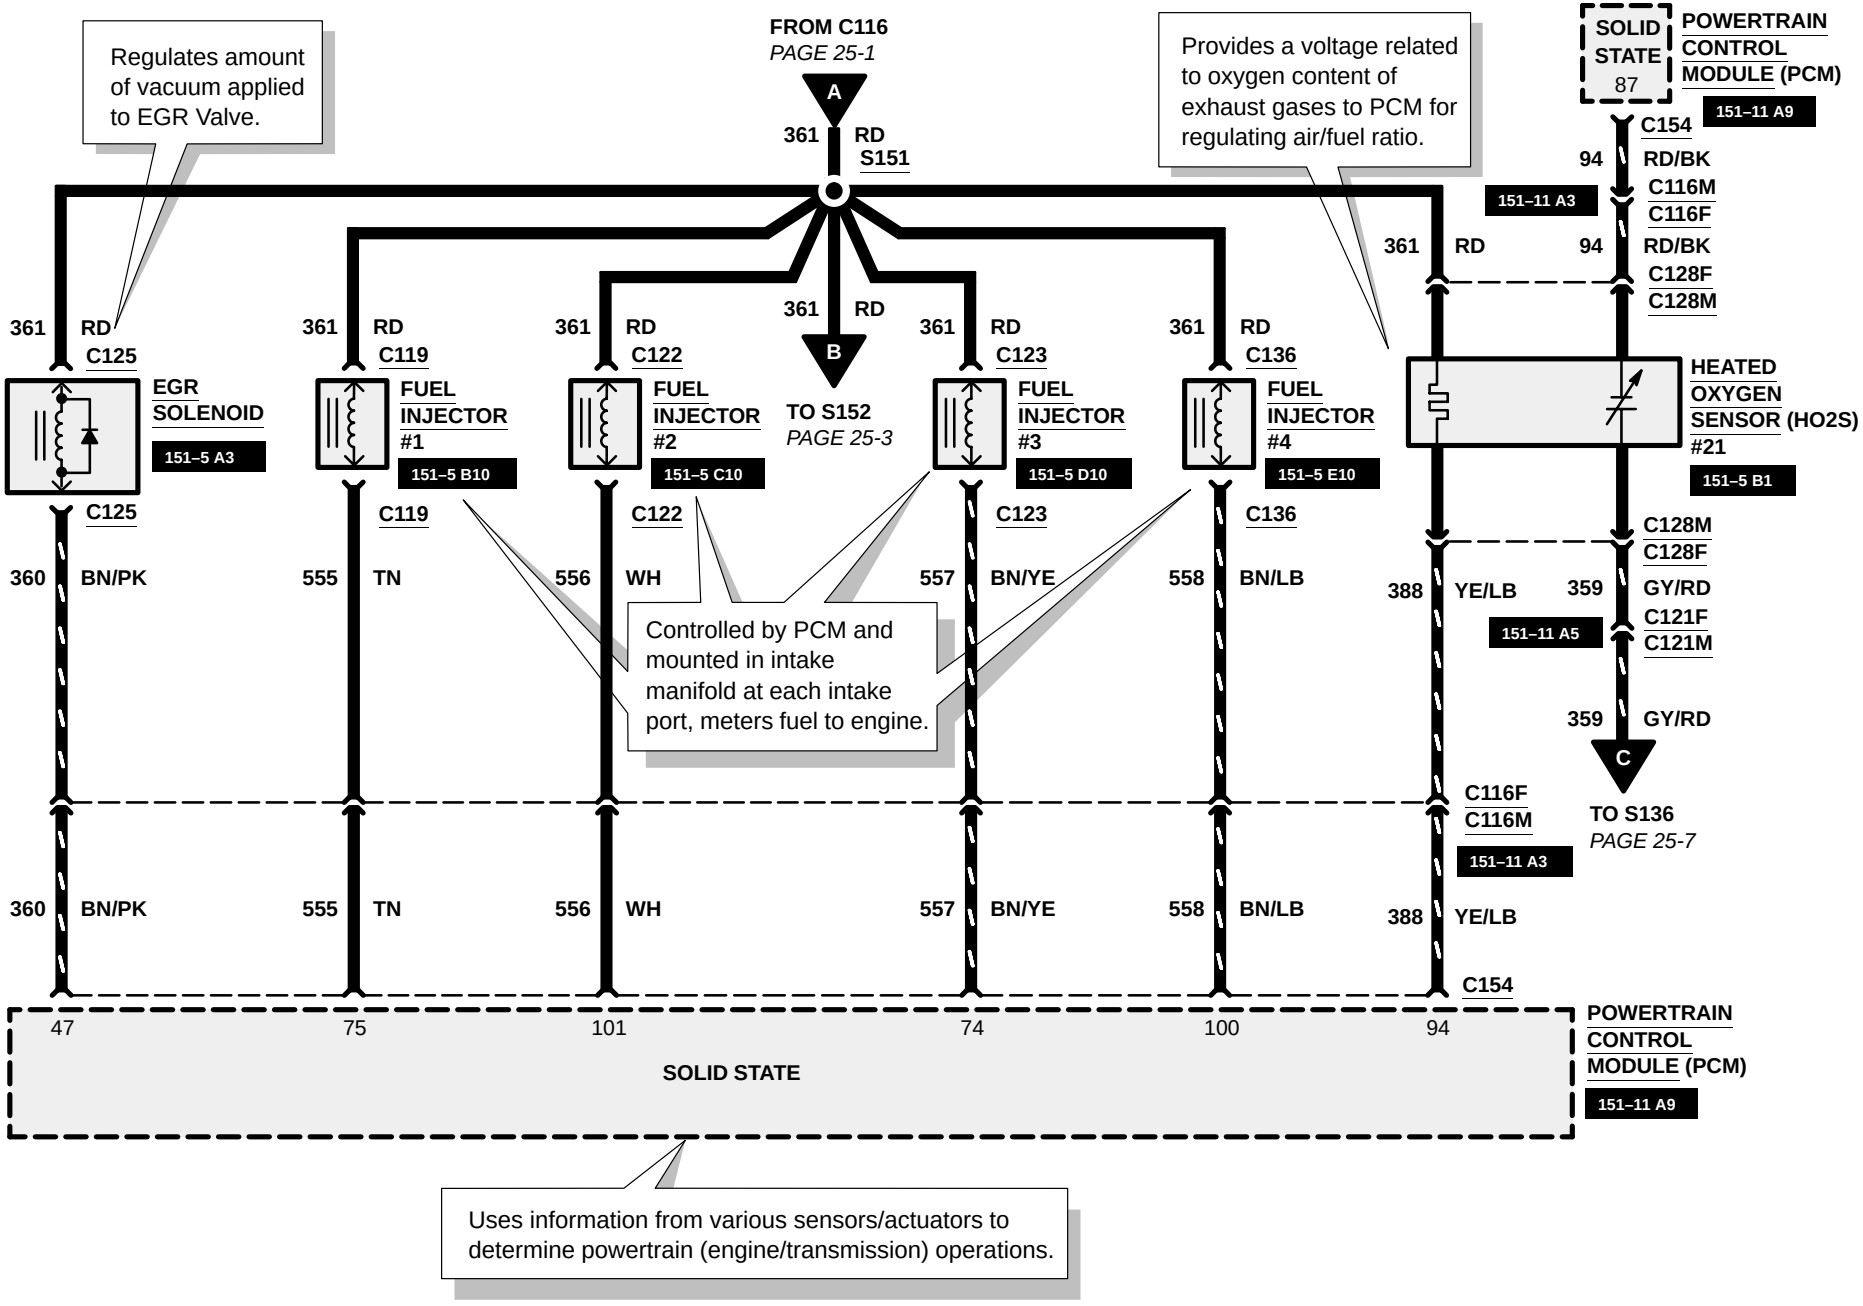
Regulates amount of vacuum applied to EGR Valve.
FROM C116
PAGE 25-1
A
361 RD S151
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
SOLID STATE 87
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
94 RD/BK
C116M
C116F
151–11 A3
361 RD
94 RD/BK
C128F
C128M
361 RD C125
EGR SOLENOID
151–5 A3
361 RD C119
FUEL INJECTOR #1
151–5 B10
361 RD C122
FUEL INJECTOR #2
151–5 C10
361 RD
B
TO S152
PAGE 25-3
361 RD C123
FUEL INJECTOR #3
151–5 D10
361 RD C136
FUEL INJECTOR #4
151–5 E10
HEATED OXYGEN SENSOR (HO2S) #21
151–5 B1
C125
C119
C122
C123
C136
C128M
C128F
360 BN/PK
555 TN
556 WH
557 BN/YE
558 BN/LB
388 YE/LB
359 GY/RD
C121F
C121M
151–11 A5
Controlled by PCM and mounted in intake manifold at each intake port, meters fuel to engine.
359 GY/RD
C
C116F
C116M
151–11 A3
TO S136
PAGE 25-7
360 BN/PK
555 TN
556 WH
557 BN/YE
558 BN/LB
388 YE/LB
C154
47
75
101
74
100
94
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.