## C488

### 14A584

N300
Window operating switch, driver side front (multiple)

F10042 (GY)

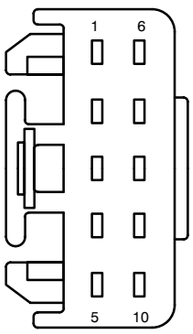


| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-AJ7 (BK) | Ground |
| 2 | – | not used |
| 3 | 32-AJ18 (WH/VT) | Switched between: Battery voltage, Ground or Open |
| 4 | – | not used |
| 5 | 33-AJ18 (YE/VT) | Switched between: Battery voltage, Ground or Open |
| 6 | 32-AJ26 (WH) | Switched between: Battery voltage, Ground or Open |
| 7 | – | not used |
| 8 | 33-AJ26 (YE) | Switched between: Battery voltage, Ground or Open |
| 9 | – | not used |
| 10 | 15-AJ7 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected) |