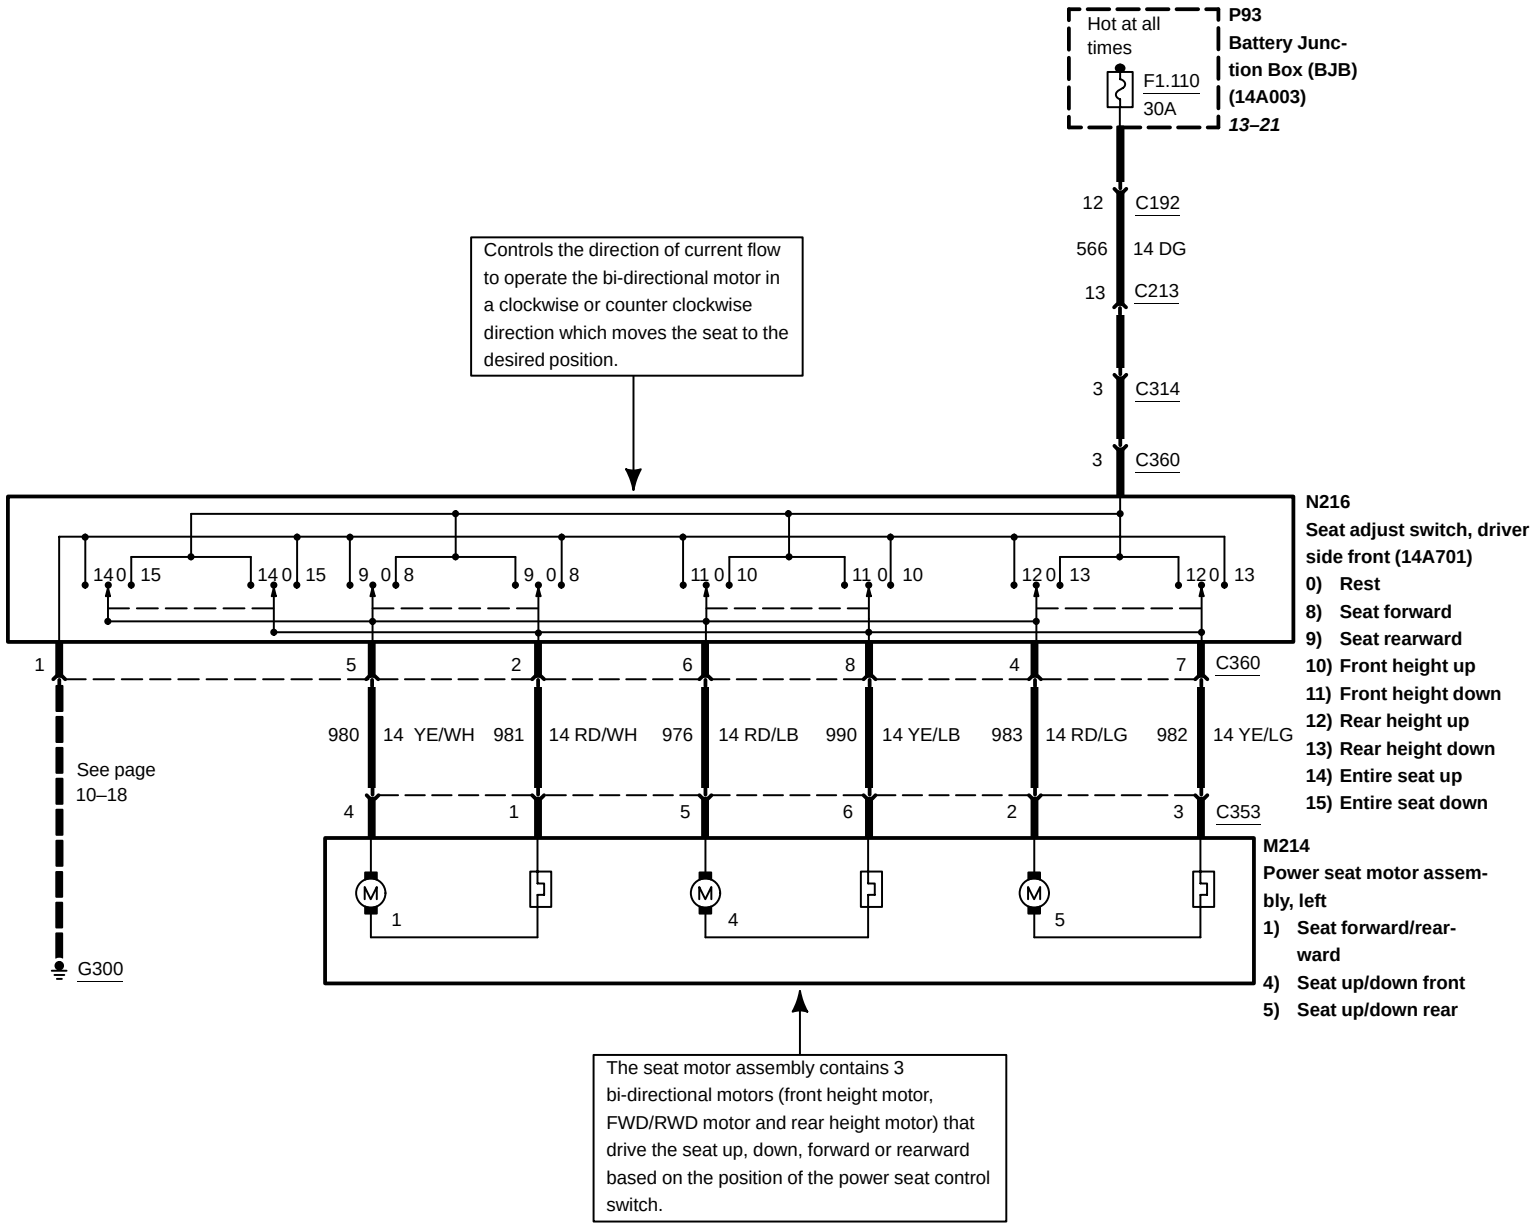
Hot at all times
F1.110
30A
P93
Battery Junction Box (BJB)
(14A003)
13–21
12 C192
566 14 DG
13 C213
3 C314
3 C360
Controls the direction of current flow to operate the bi-directional motor in a clockwise or counter clockwise direction which moves the seat to the desired position.
N216
Seat adjust switch, driver side front (14A701)
0) Rest
8) Seat forward
9) Seat rearward
10) Front height up
11) Front height down
12) Rear height up
13) Rear height down
14) Entire seat up
15) Entire seat down
140 15 140 15 9 0 8 9 0 8 11 0 10 11 0 10 12 0 13 12 0 13
1 5 2 6 8 4 7 C360
980 14 YE/WH 981 14 RD/WH 976 14 RD/LB 990 14 YE/LB 983 14 RD/LG 982 14 YE/LG
See page 10–18
4 1 5 6 2 3 C353
M214
Power seat motor assembly, left
1) Seat forward/rearward
4) Seat up/down front
5) Seat up/down rear
M 1
M 4
M 5
G300
The seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the power seat control switch.