C4158b (GY)

19B113

Subwoofer amplifier, luggage compartment left inboard

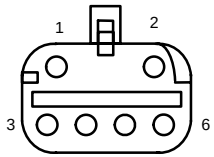

F06052

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	189 (TN/LB)	Subwoofer amplifier, luggage compartment left inboard, to, Subwoofer, luggage compartment left, +
4	187 (DB/OG)	Subwoofer amplifier, luggage compartment left inboard, to, Subwoofer, luggage compartment left, –
5	–	not used
6	–	not used

C4159a (GY)

19B113

Subwoofer amplifier, luggage compartment right inboard

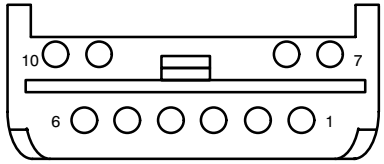

F10009

Pin	Circuit	Circuit function
1	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
	174 (GY/BK)	Radio (18806) – Subwoofer, Low, mute
2	694 (BK/LG)	Ground
3	–	not used
4	–	not used
5	829 (WH/VT)	Voltage supplied at all times (overload protected)
6	–	not used
7	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
	169 (LG/BK)	Radio (18806) – Subwoofer, Low, +
8	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
	172 (LB/RD)	Radio (18806) – Subwoofer, Low, –
9	–	not used
10	–	not used