C420a

14A005

A213
Front Electronic
Module (FEM)
(13C788)

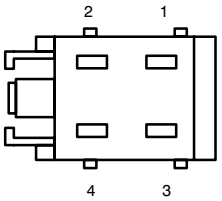

F04137

Pin	Circuit	Circuit Function
1	32-AJ27 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	33-AJ27 (YE/VT)	Switched between: Battery voltage, Ground or Open
3	31-AJ71 (BK/YE)	Ground
4	30-AJ71 (RD/YE)	Voltage supplied at all times (not overload protected)

C420b

14A005

A212
Rear Electronic
Module (REM)

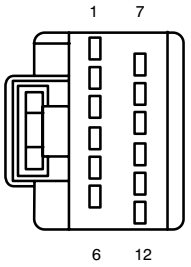

F12077

Pin	Circuit	Circuit Function
1	33-AA10 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA11 (WH/VT)	Switched between: Battery voltage, Ground or Open
3	10-AG24 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
4	–	not used
5	31S-LF21 (BK/GN)	Ground, switch
6	31S-LF10 (BK/RD)	Ground, switch
7	–	not used
8	15-RP12 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
9	–	not used
10	–	not used
11	31S-LB25 (BK/BU)	Ground, switch
12	31S-LF19 (BK/BU)	Ground, switch