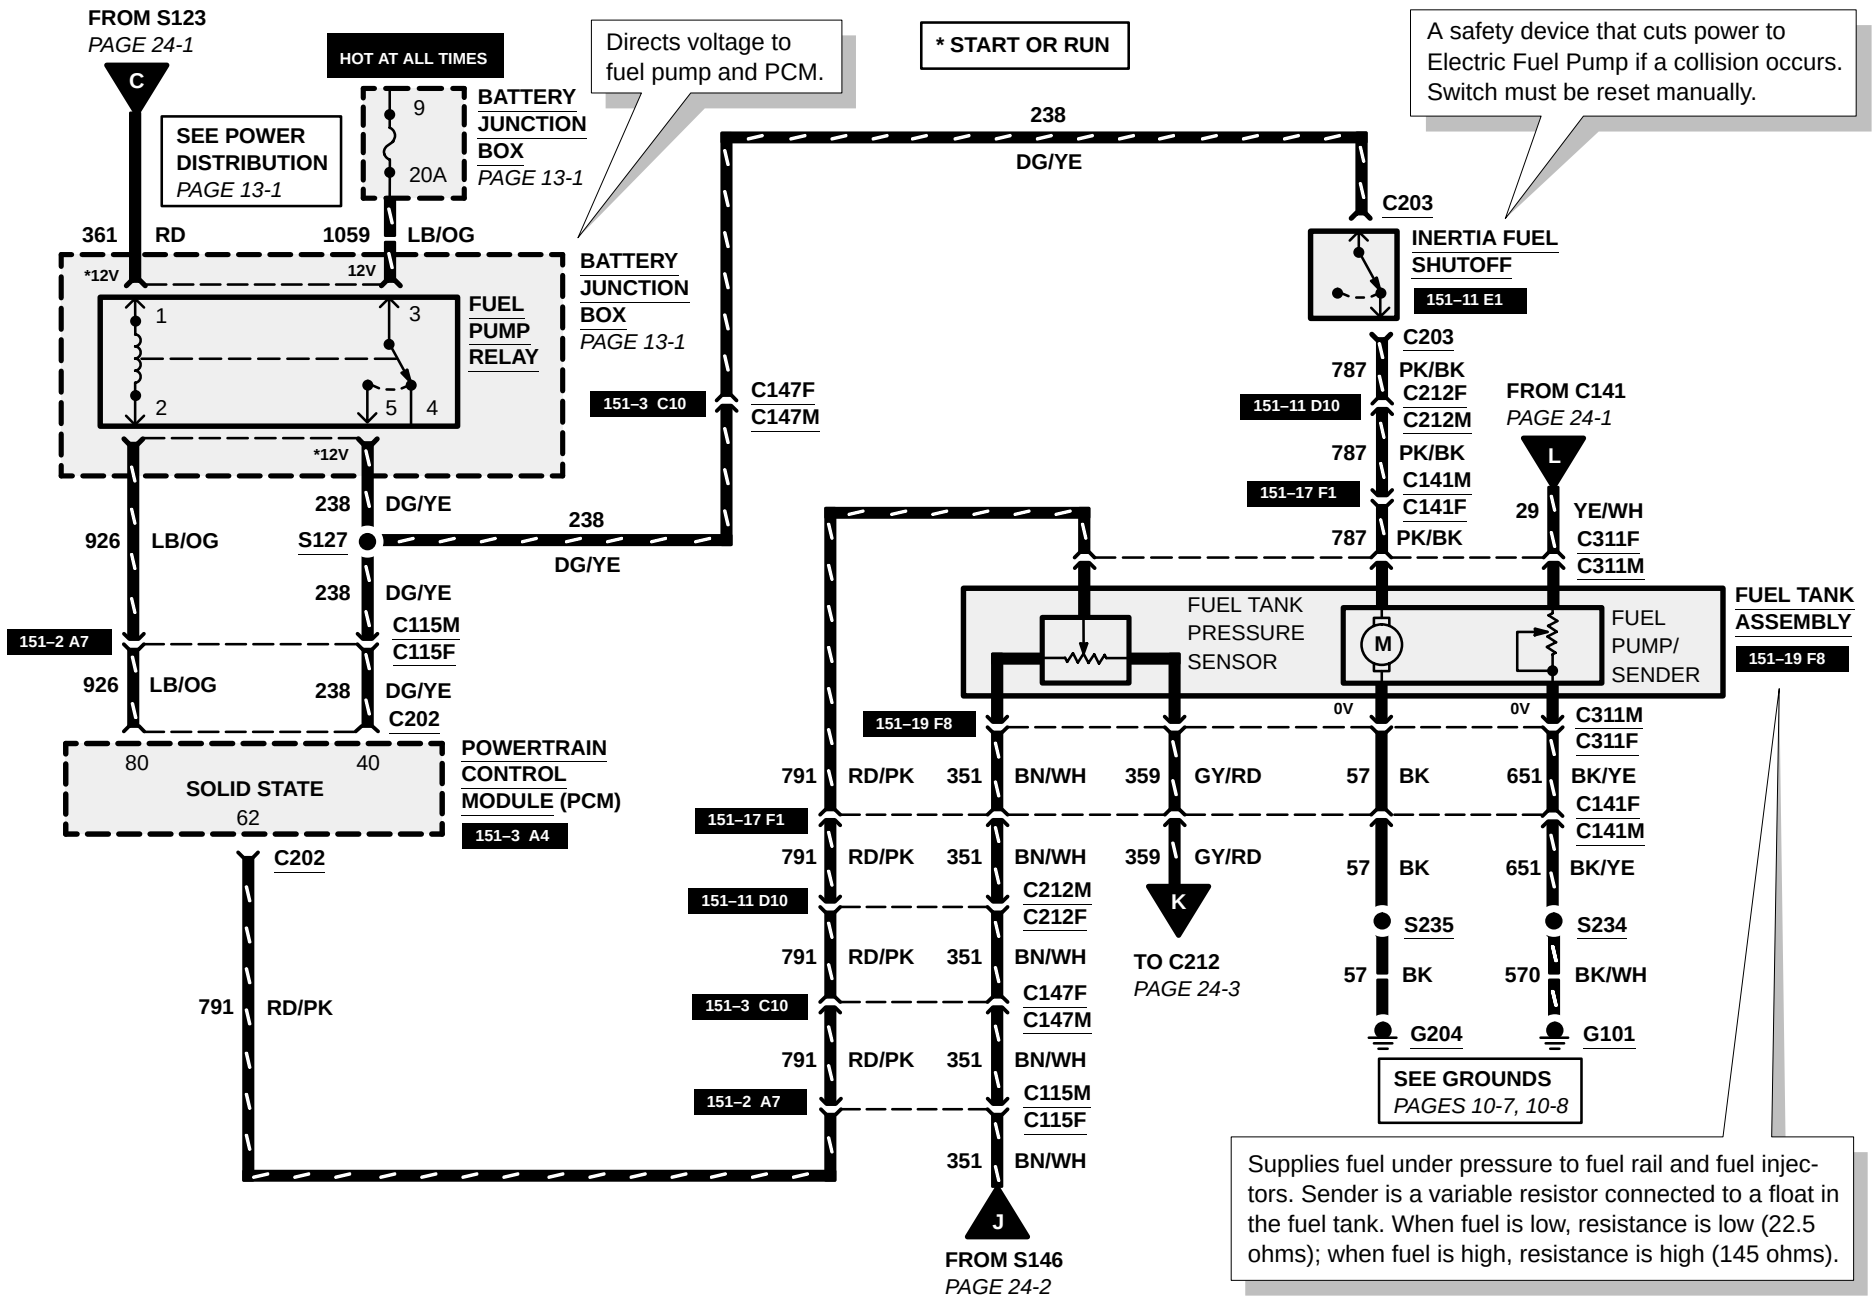
FROM S123
PAGE 24-1
C
HOT AT ALL TIMES
SEE POWER DISTRIBUTION
PAGE 13-1
9
20A
BATTERY JUNCTION BOX
PAGE 13-1
Directs voltage to fuel pump and PCM.
* START OR RUN
A safety device that cuts power to Electric Fuel Pump if a collision occurs. Switch must be reset manually.
361 RD
1059 LB/OG
*12V
12V
FUEL PUMP RELAY
1
2
3
4
5
BATTERY JUNCTION BOX
PAGE 13-1
238 DG/YE
C203
INERTIA FUEL SHUTOFF
151–11 E1
C203
787 PK/BK
C212F
C212M
151–11 D10
787 PK/BK
C141M
C141F
151–17 F1
787 PK/BK
FROM C141
PAGE 24-1
L
29 YE/WH
C311F
C311M
151–3 C10
C147F
C147M
238 DG/YE
926 LB/OG
S127
238 DG/YE
238 DG/YE
C115M
C115F
151–2 A7
926 LB/OG
238 DG/YE
C202
80
40
SOLID STATE
62
POWERTRAIN CONTROL MODULE (PCM)
151–3 A4
C202
791 RD/PK
FUEL TANK PRESSURE SENSOR
M
FUEL PUMP/ SENDER
FUEL TANK ASSEMBLY
151–19 F8
0V
0V
C311M
C311F
151–19 F8
791 RD/PK
351 BN/WH
359 GY/RD
57 BK
651 BK/YE
C141F
C141M
151–17 F1
791 RD/PK
351 BN/WH
359 GY/RD
57 BK
651 BK/YE
C212M
C212F
151–11 D10
791 RD/PK
351 BN/WH
K
TO C212
PAGE 24-3
S235
S234
C147F
C147M
151–3 C10
791 RD/PK
351 BN/WH
57 BK
570 BK/WH
791 RD/PK
351 BN/WH
C115M
C115F
151–2 A7
G204
G101
SEE GROUNDS
PAGES 10-7, 10-8
351 BN/WH
J
FROM S146
PAGE 24-2
Supplies fuel under pressure to fuel rail and fuel injectors. Sender is a variable resistor connected to a float in the fuel tank. When fuel is low, resistance is low (22.5 ohms); when fuel is high, resistance is high (145 ohms).