4.6L

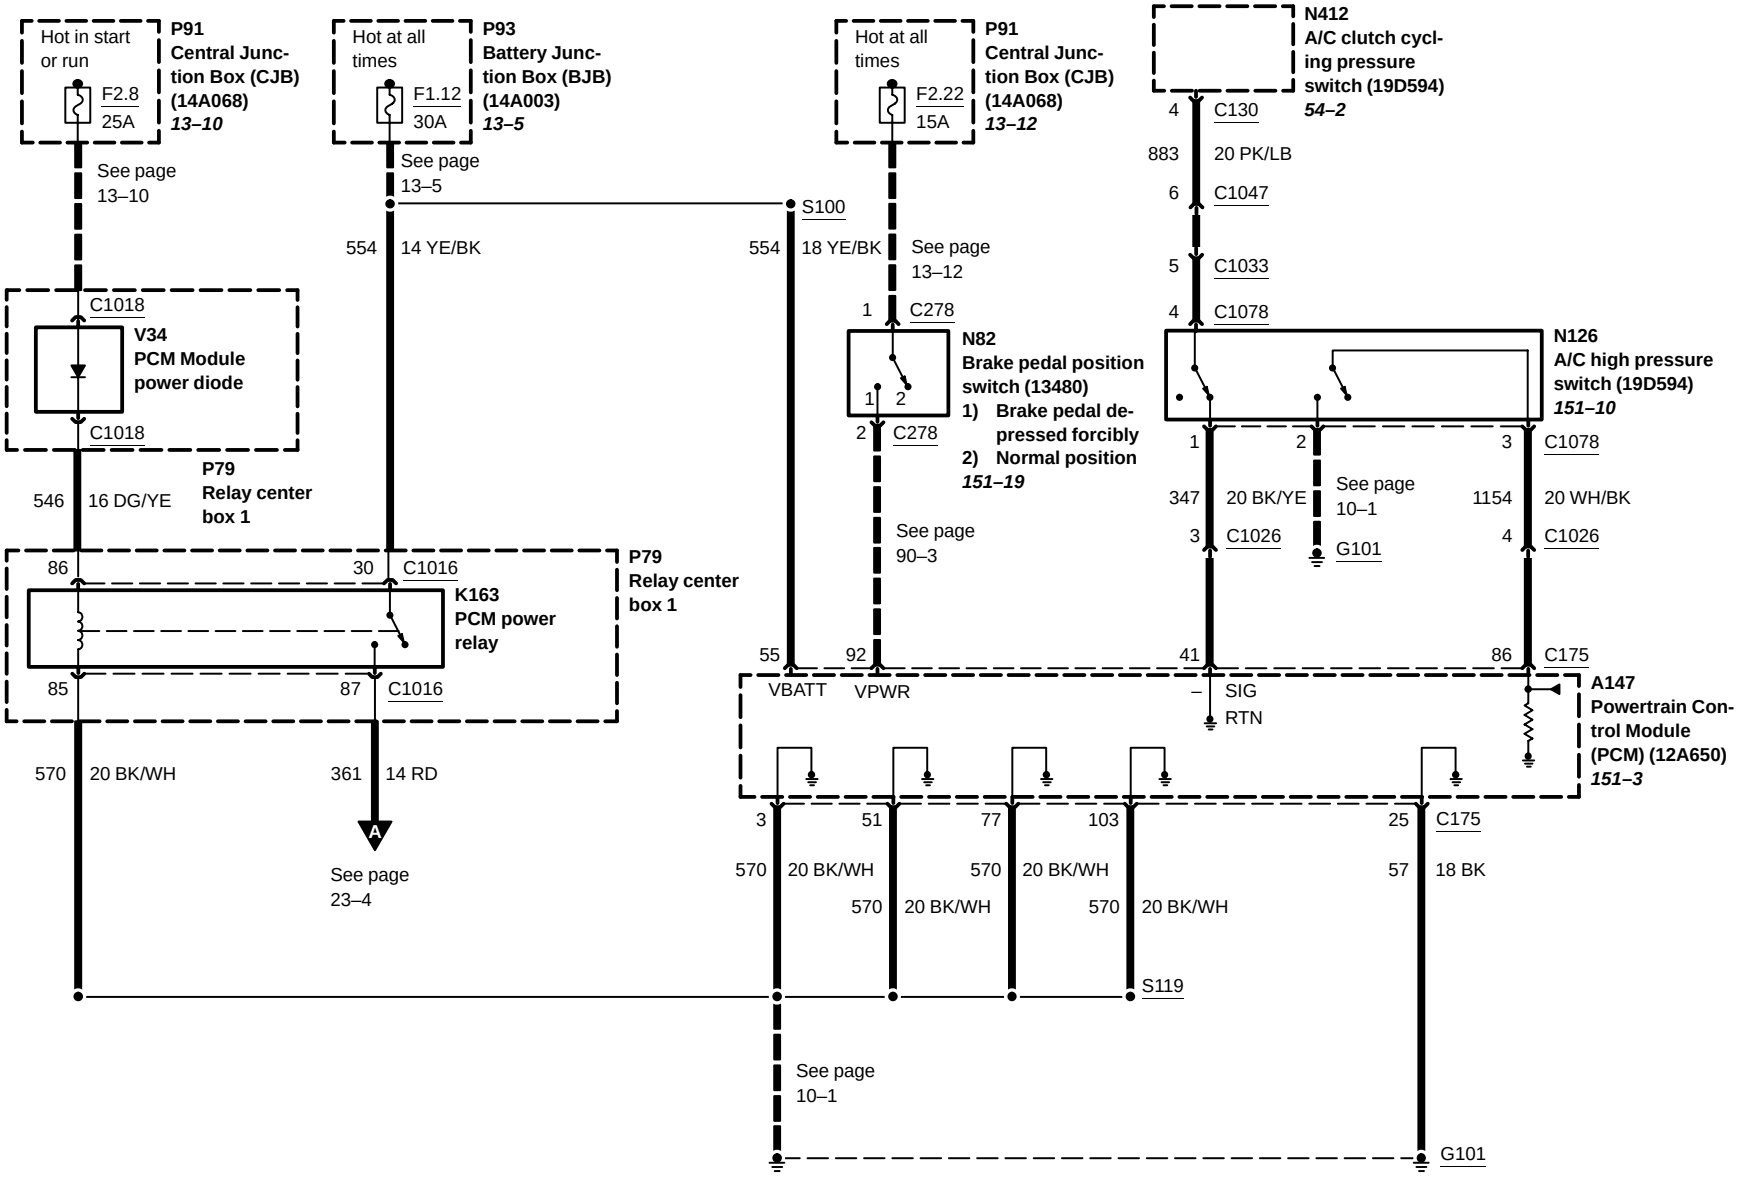
Hot in start or run
F2.8
25A
P91
Central Junction Box (CJB)
(14A068)
13–10
See page 13–10
Hot at all times
F1.12
30A
P93
Battery Junction Box (BJB)
(14A003)
13–5
See page 13–5
Hot at all times
F2.22
15A
P91
Central Junction Box (CJB)
(14A068)
13–12
N412
A/C clutch cycling pressure switch (19D594)
54–2
4 C130
883 20 PK/LB
6 C1047
5 C1033
4 C1078
S100
554 14 YE/BK
554 18 YE/BK
See page 13–12
1 C278
N82
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
151–19
2 C278
See page 90–3
C1018
V34
PCM Module power diode
C1018
546 16 DG/YE
P79
Relay center box 1
86 30 C1016
K163
PCM power relay
85 87 C1016
P79
Relay center box 1
570 20 BK/WH
361 14 RD
A
See page 23–4
N126
A/C high pressure switch (19D594)
151–10
1 2 3 C1078
347 20 BK/YE
See page 10–1
1154 20 WH/BK
3 C1026
G101
4 C1026
55 92 41 86 C175
VBATT
VPWR
SIG RTN
A147
Powertrain Control Module (PCM) (12A650)
151–3
3 51 77 103 25 C175
570 20 BK/WH
570 20 BK/WH
570 20 BK/WH
570 20 BK/WH
57 18 BK
S119
See page 10–1
G101