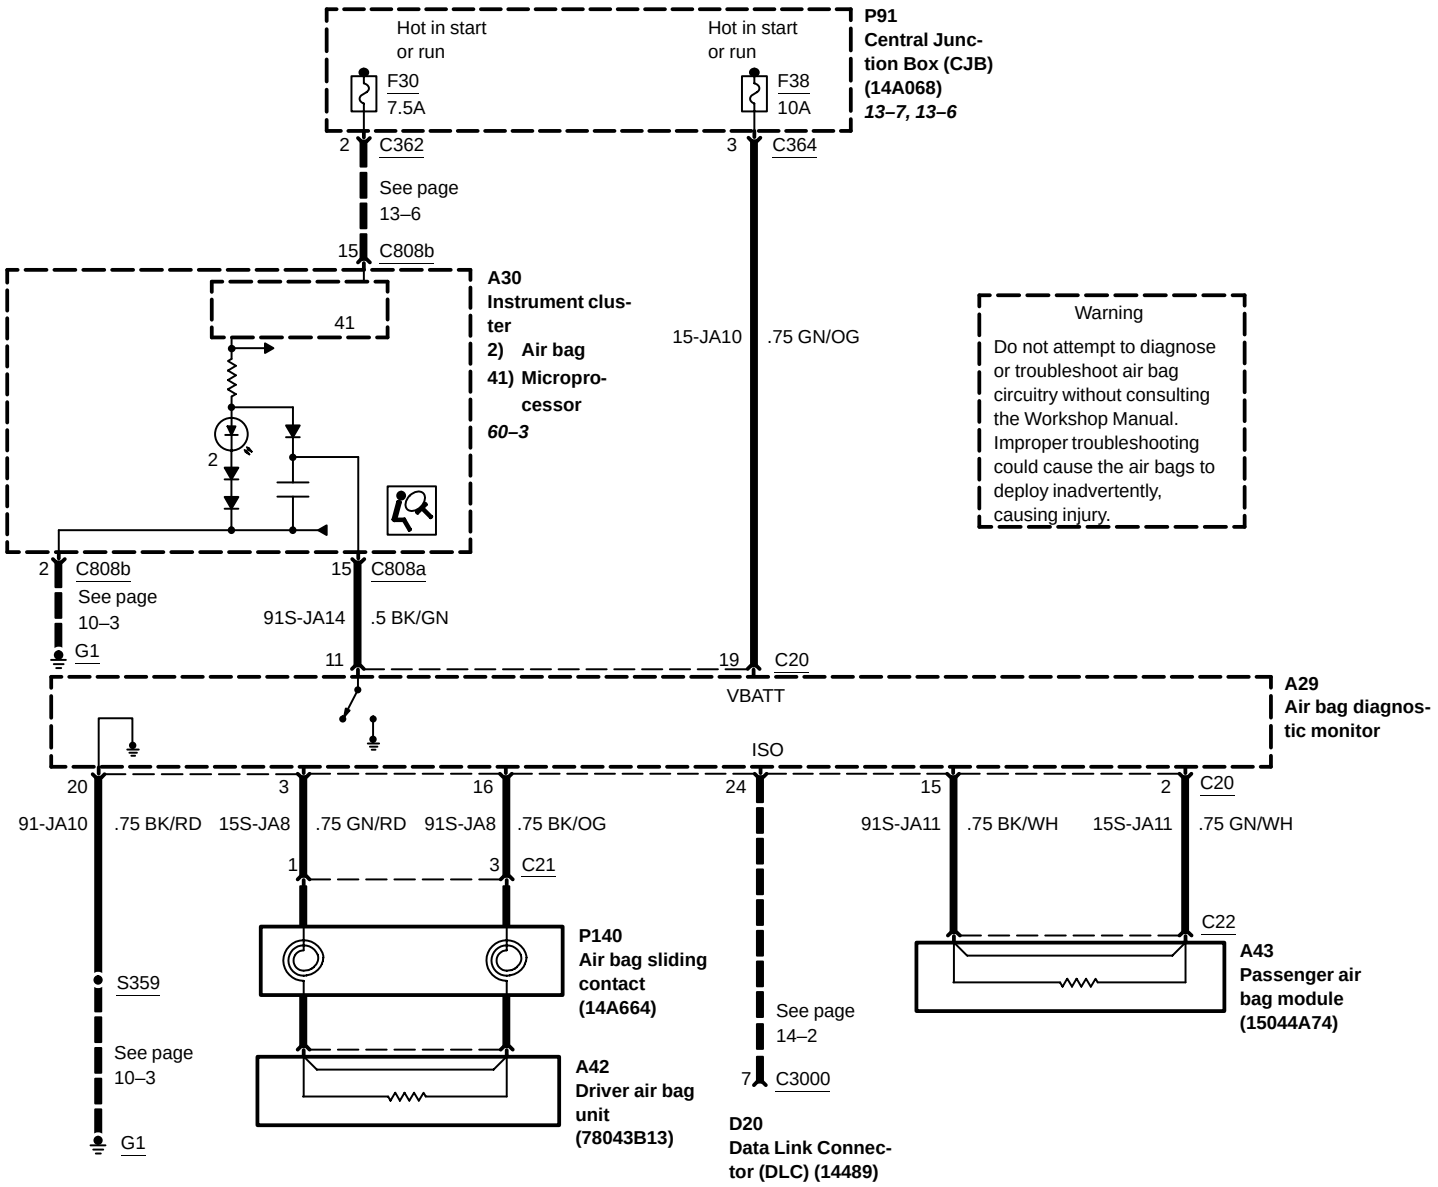
Hot in start or run
F30
7.5A
Hot in start or run
F38
10A
P91
Central Junction Box (CJB)
(14A068)
13–7, 13–6
2 C362
3 C364
See page 13–6
15 C808b
A30
Instrument cluster
2) Air bag
41) Microprocessor
60–3
41
2
15-JA10 .75 GN/OG
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
2 C808b
See page 10–3
G1
15 C808a
91S-JA14 .5 BK/GN
11
19 C20
VBATT
A29
Air bag diagnostic monitor
ISO
20
91-JA10 .75 BK/RD
3
15S-JA8 .75 GN/RD
16
91S-JA8 .75 BK/OG
24
15
91S-JA11 .75 BK/WH
2 C20
15S-JA11 .75 GN/WH
1
3 C21
P140
Air bag sliding contact
(14A664)
C22
A43
Passenger air bag module
(15044A74)
S359
See page 10–3
G1
A42
Driver air bag unit
(78043B13)
See page 14–2
7 C3000
D20
Data Link Connector (DLC) (14489)