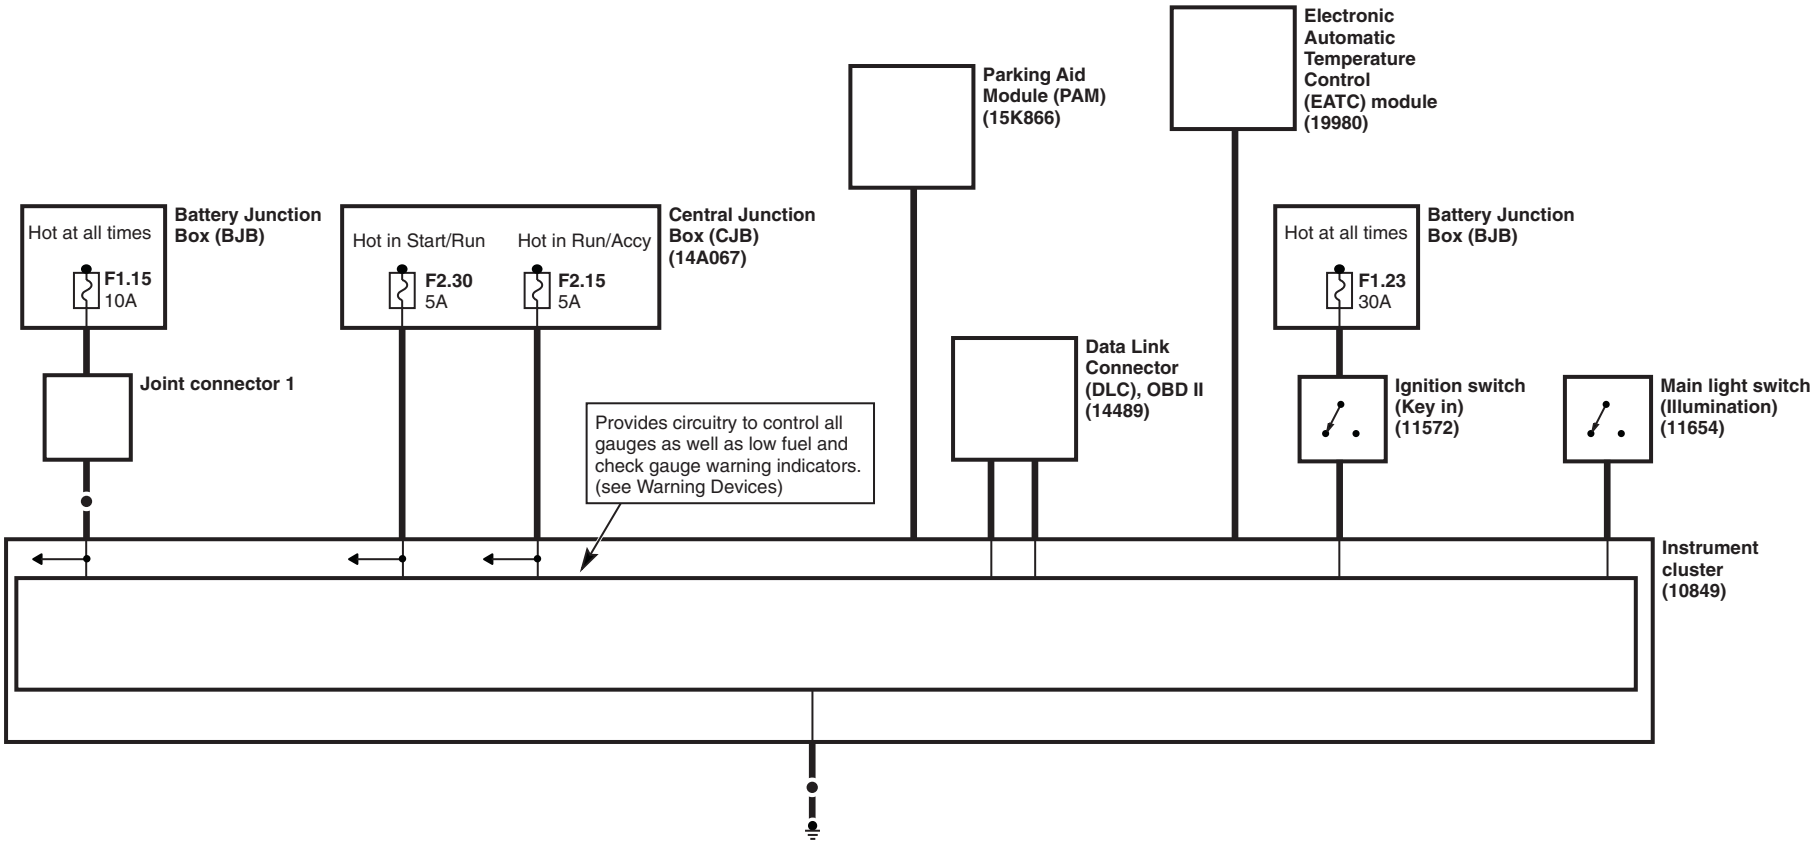
Electronic Automatic Temperature Control (EATC) module (19980)
Parking Aid Module (PAM) (15K866)
Hot at all times
Battery Junction Box (BJB)
F1.15 10A
Hot in Start/Run
Hot in Run/Accy
Central Junction Box (CJB) (14A067)
F2.30 5A
F2.15 5A
Hot at all times
Battery Junction Box (BJB)
F1.23 30A
Joint connector 1
Data Link Connector (DLC), OBD II (14489)
Ignition switch (Key in) (11572)
Main light switch (Illumination) (11654)
Provides circuitry to control all gauges as well as low fuel and check gauge warning indicators. (see Warning Devices)
Instrument cluster (10849)