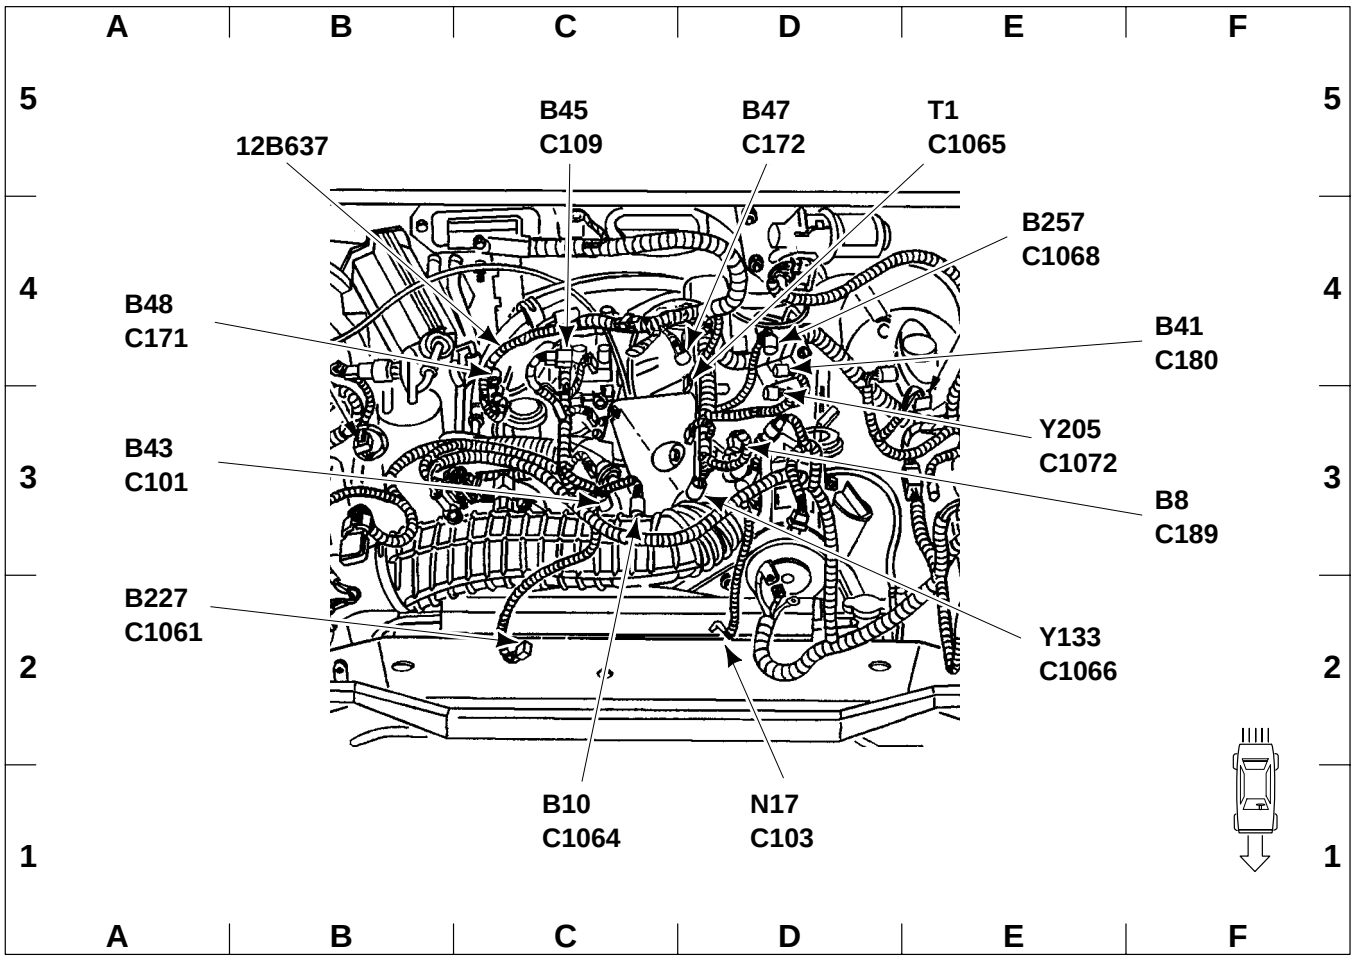

engine – 4.0L

12B637 . . . . . B 5
B8 . . . Throttle Position Sensor (TPS) . . . . . F 3
B10 . . Engine Coolant Temperature (ECT) sensor C 1
B41 . . Camshaft position sensor . . . . . F 4
B43 . . Crankshaft position sensor . . . . . A 3
B45 . . Knock sensor . . . . . C 5
B47 . . Heated Oxygen Sensor (HO2S) #21 . . . . D 5
B48 . . Heated Oxygen Sensor (HO2S) #11 . . . . A 4
B227 . Engine Coolant Temperature (ECT) sender A 2
B257 . Differential Pressure Feedback EGR (DPFE) sensor . . . . . E 4
C101 . . . . . A 3
C103 . . . . . D 1
C109 . . . . . C 5
C171 . . . . . A 4
C172 . . . . . D 5
C180 . . . . . F 4
C189 . . . . . F 3
C1061 . . . . . A 2
C1064 . . . . . C 1
C1065 . . . . . E 5
C1066 . . . . . E 2
C1068 . . . . . E 4
C1072 . . . . . E 3
N17 . . Oil pressure switch . . . . . D 1
T1 . . . Ignition coil . . . . . E 5
Y133 . Idle air control valve (IAC) . . . . . E 2
Y205 . EGR vacuum regulator solenoid . . . . . E 3