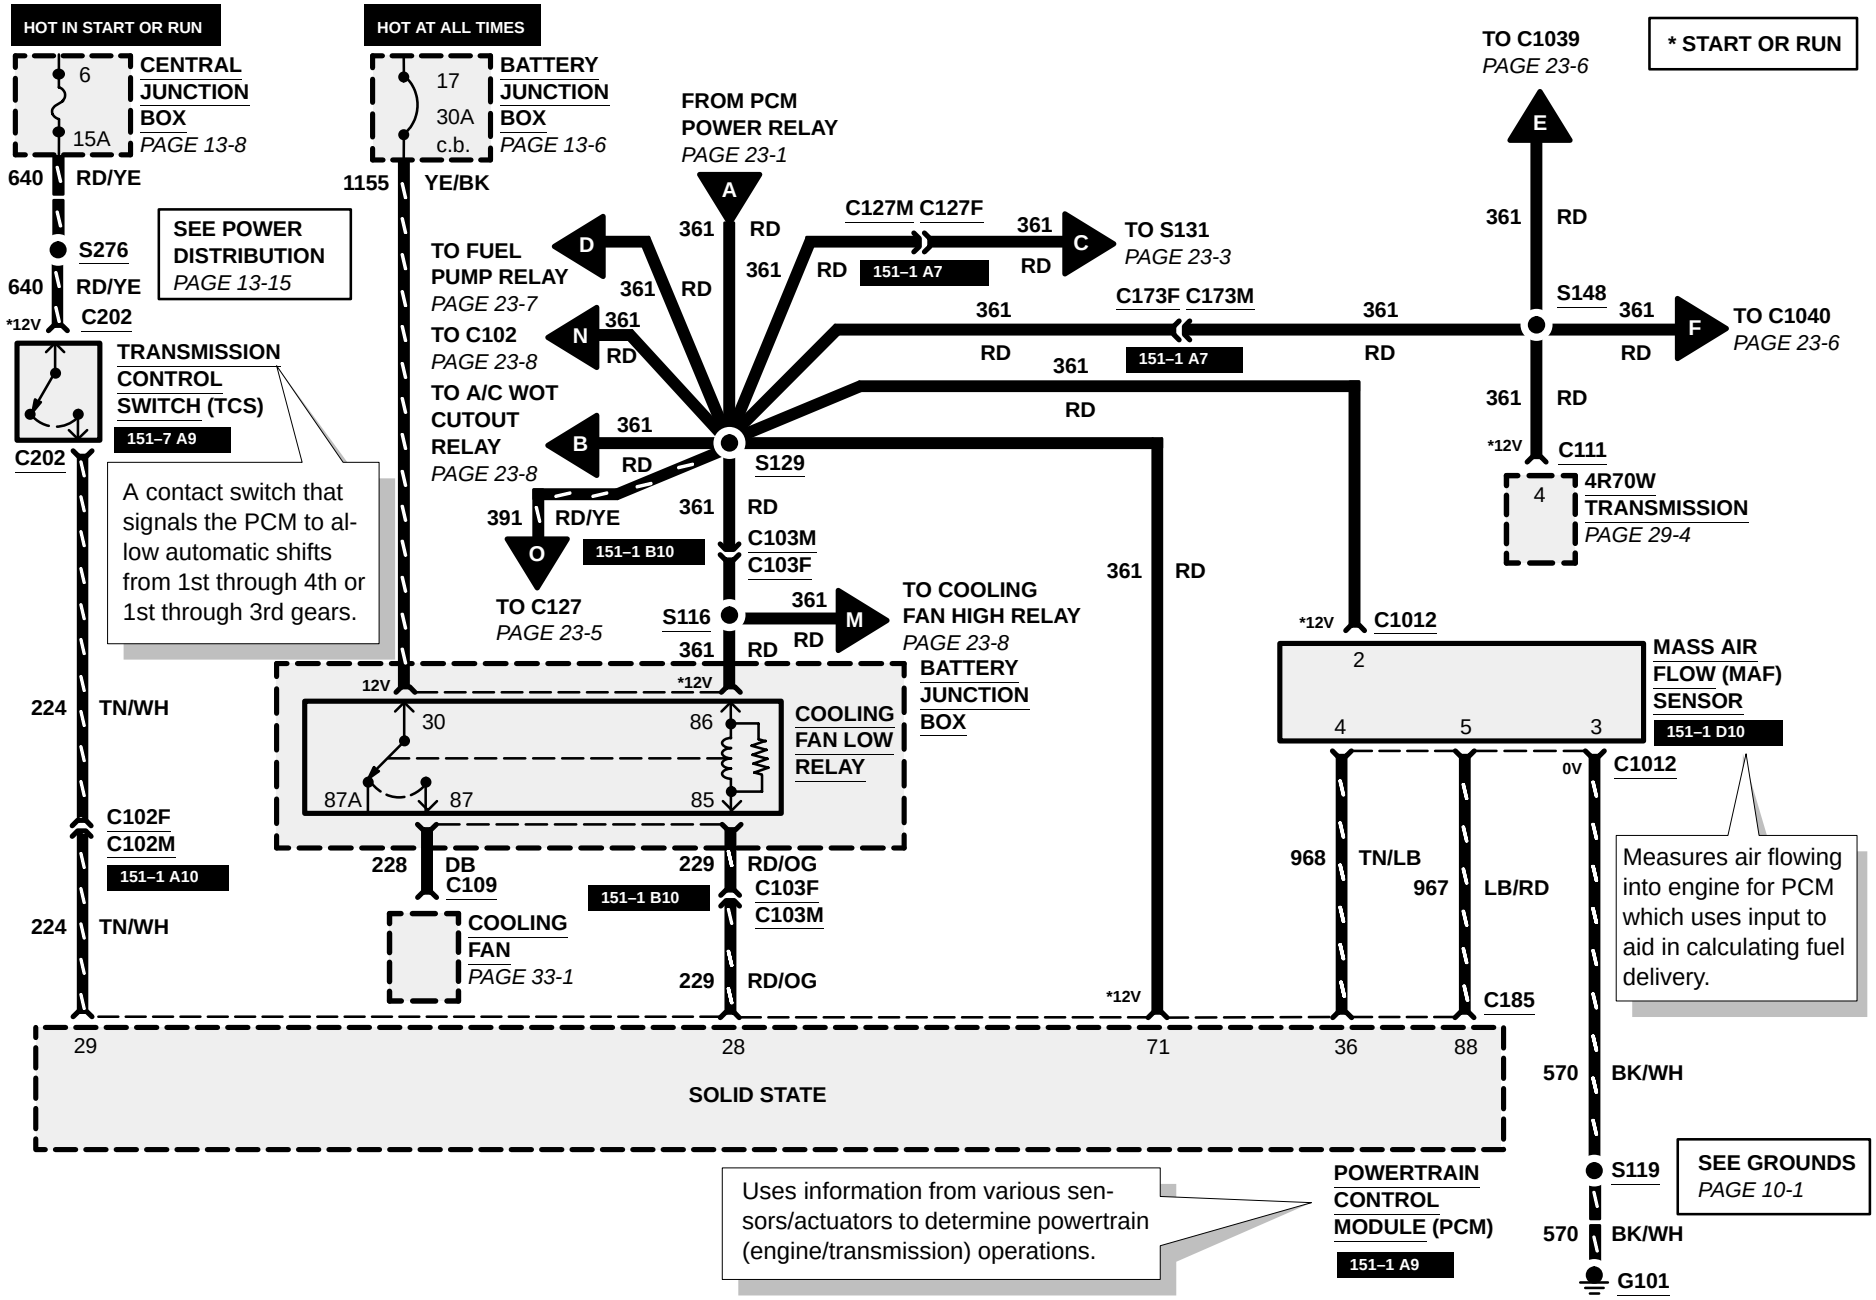
HOT IN START OR RUN
HOT AT ALL TIMES
* START OR RUN
6
15A
CENTRAL JUNCTION BOX
PAGE 13-8
640 RD/YE
S276
640 RD/YE
*12V C202
SEE POWER DISTRIBUTION
PAGE 13-15
TRANSMISSION CONTROL SWITCH (TCS)
151–7 A9
C202
A contact switch that signals the PCM to allow automatic shifts from 1st through 4th or 1st through 3rd gears.
17
30A c.b.
BATTERY JUNCTION BOX
PAGE 13-6
1155 YE/BK
FROM PCM POWER RELAY
PAGE 23-1
A
361 RD
C127M C127F
361 RD
151–1 A7
361 RD
C
TO S131
PAGE 23-3
D
361 RD
TO FUEL PUMP RELAY
PAGE 23-7
361 RD
N
TO C102
PAGE 23-8
TO A/C WOT CUTOUT RELAY
PAGE 23-8
B
361 RD
391 RD/YE
O
151–1 B10
TO C127
PAGE 23-5
S129
361 RD
C103M
C103F
S116
361 RD
M
TO COOLING FAN HIGH RELAY
PAGE 23-8
12V
*12V
BATTERY JUNCTION BOX
30
86
87A
87
85
COOLING FAN LOW RELAY
224 TN/WH
C102F
C102M
151–1 A10
224 TN/WH
228 DB
C109
COOLING FAN
PAGE 33-1
229 RD/OG
151–1 B10
C103F
C103M
229 RD/OG
C173F C173M
361 RD
151–1 A7
361 RD
E
361 RD
S148
361 RD
F
TO C1040
PAGE 23-6
361 RD
*12V
C111
4
4R70W TRANSMISSION
PAGE 29-4
TO C1039
PAGE 23-6
361 RD
*12V
C1012
2
4
5
3
MASS AIR FLOW (MAF) SENSOR
151–1 D10
0V
C1012
Measures air flowing into engine for PCM which uses input to aid in calculating fuel delivery.
968 TN/LB
967 LB/RD
C185
29
28
71
36
88
SOLID STATE
570 BK/WH
S119
SEE GROUNDS
PAGE 10-1
570 BK/WH
G101
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.
POWERTRAIN CONTROL MODULE (PCM)
151–1 A9