C1427 (BK)

12A581

Alternative Fuel Control Module
(AFCM)

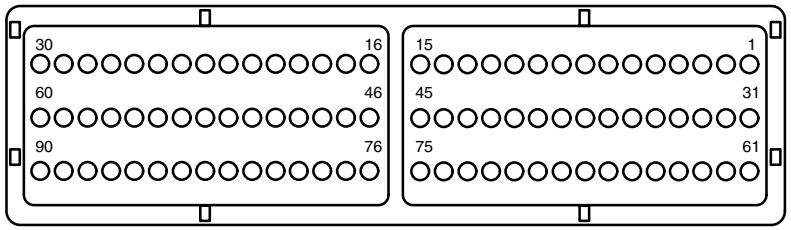

F90001

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	57 (BK)	Ground
3	57 (BK)	Ground
4	57 (BK)	Ground
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	57 (BK)	Ground
18	–	not used
19	57 (BK)	Ground
20	2109 (YE/LG)	Fuel pump cutoff relay, control
21	57 (BK)	Ground
22	–	not used
23	57 (BK)	Ground
24	2108 (BN/OG)	Alternative fuel indicator switch, indicator, control

Pin	Circuit	Circuit function
25	–	not used
26	2110 (YE/RD)	Bi–Fuel power relay, control
27	–	not used
28	–	not used
29	–	not used
30	–	not used
31	2188 (LB/TN)	Fuel rail temperature sensor, signal
32	–	not used
33	–	not used
34	–	not used
35	–	not used
36	–	not used
37	1161 (DG/OG)	Fuel tank pressure sensor, signal
38	2187 (BN/OG)	Fuel rail pressure transducer sensor, signal
39	–	not used
40	–	not used
41	–	not used
42	2189 (LB/BK)	Alternative fuel indicator switch, input
43	–	not used
44	–	not used
45	2107 (RD/LG)	Voltage supplied in Start and Run (overload protected)
46	2099 (LB/RD)	Alternate fuel injector 1, control
47	2100 (DG/OG)	Alternate fuel injector 2, control
48	2101 (LB/BK)	Alternate fuel injector 3, control
49	2102 (DG/WH)	Alternate fuel injector 4, control
50	2103 (LB/OG)	Alternate fuel injector 5, control
51	2104 (DG/YE)	Alternate fuel injector 6, control
52	2105 (LB/PK)	Alternate fuel injector 7, control
53	2106 (DG)	Alternate fuel injector 8, control
54	–	not used
55	–	not used
56	–	not used
57	–	not used
58	–	not used
59	–	not used

Pin	Circuit	Circuit function
60	2107 (RD/LG)	Voltage supplied in Start and Run (overload protected)
61	1165 (WH/RD)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 1, control
62	1166 (YE/RD)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 2, control
63	1167 (WH/BK)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 3, control
64	1168 (YE/BK)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 4, control
65	1169 (WH/LB)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 5, control
66	1170 (YE/LB)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 6, control
67	1171 (WH)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 7, control
68	1172 (YE)	Powertrain Control Module (PCM) (12A650), signal – Fuel injector 8, control
69	–	not used
70	–	not used
71	–	not used
72	–	not used
73	–	not used
74	1163 (BN)	Reference voltage
75	57 (BK)	Ground
76	555 (TN)	Fuel injector 1, control
77	556 (WH)	Fuel injector 2, control
78	557 (BN/YE)	Fuel injector 3, control
79	558 (BN/LB)	Fuel injector 4, control
80	559 (TN/BK)	Fuel injector 5, control
81	560 (LG/OG)	Fuel injector 6, control
82	561 (TN/RD)	Fuel injector 7, control
83	562 (LB)	Fuel injector 8, control
84	–	not used
85	–	not used
86	–	not used

87	914 (TN/OG)	SCP Bus +
88	915 (PK/LB)	SCP Bus –
89	1160 (BN/WH)	Signal return
90	–	not used