C478

14A583

N258
Liftgate glass ajar switch

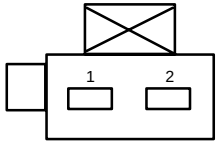

F02343

Pin	Circuit	Circuit function
1	701 (LB/BK)	Liftgate glass ajar switch
2	57 (BK)	Ground

C479

14A583

N451
Liftgate ajar switch

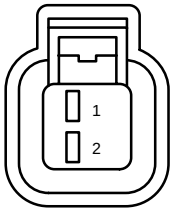

F02069

Pin	Circuit	Circuit function
1	700 (WH/VT)	Liftgate ajar switch
2	57 (BK)	Ground

C508

14631

N416
Master window/door lock/unlock switch



F12115

Pin	Circuit	Circuit function
1	313 (WH/YE)	Window switch, feed, right front, Down
2	314 (TN/LB)	Window switch, feed, right front, Up
3	1088 (PK/WH)	Door unlock, input
4	992 (WH/BK)	Master window adjust switch (14529), feed, Up
5	–	not used
6	316 (YE/LB)	Window switch, feed, left rear, Down
7	317 (GY/OG)	Window switch, feed, left rear, Up
8	170 (RD/LB)	Accessory delay relay, switched power, output
9	903 (RD)	Window motor, feed, Down
10	320 (RD/BK)	Window switch, feed, right rear, Down
11	319 (YE/BK)	Window switch, feed, right rear, Up
12	57 (BK)	Ground

C513

14631

Y213
Tweeter, left front

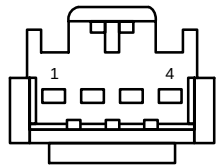

F042357

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –
3	176 (PK/LG)	Tweeter, left front, to, Speaker, left front (18808) +
4	179 (OG/RD)	Tweeter, left front, to, Speaker, left front (18808) –