## C185

**12B637**

Y112
Fuel injector 5
(9F593)

6.8L

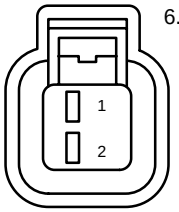


F02069

5.4L

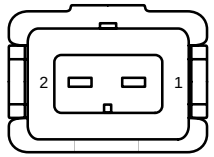


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 559 (TN/BK) | Fuel injector 5, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C186

**12B637**

Y113
Fuel injector 6
(9F593)

6.8L

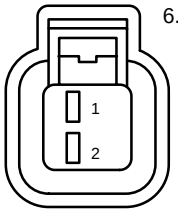


F02069

5.4L

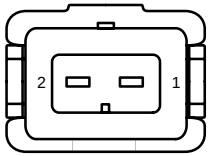


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 560 (LG/OG) | Fuel injector 6, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C187

**12B637**

Y207
Fuel injector 7
(9F593)

6.8L

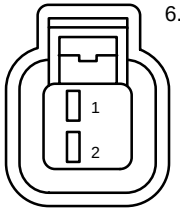


F02069

5.4L

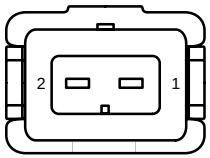


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 561 (TN/RD) | Fuel injector 7, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C188

**12B637**

Y209
Fuel injector 8
(9F593)

6.8L

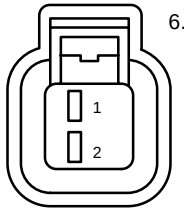


F02069

5.4L

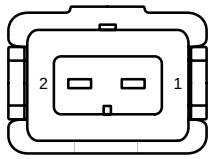


F02089

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 562 (LB) | Fuel injector 8, control |
| 2 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C192

*Diesel only
** automatic transmission

**15525**

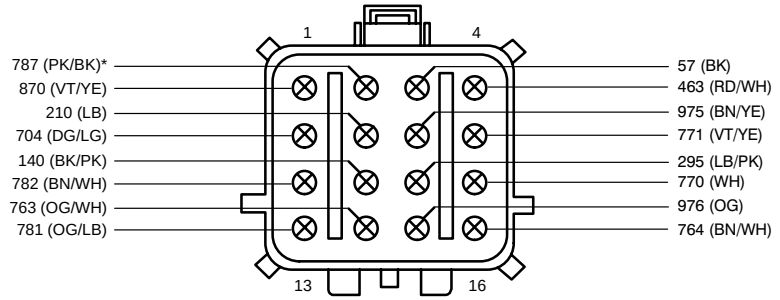


F16145

**12A581**

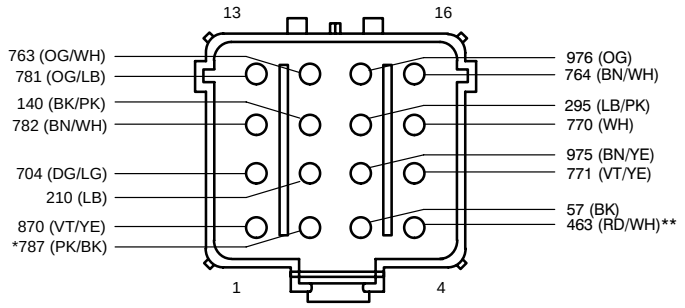


F16020