C175c

12B637

A147a
Powertrain Control
Module (PCM)
(12A659)

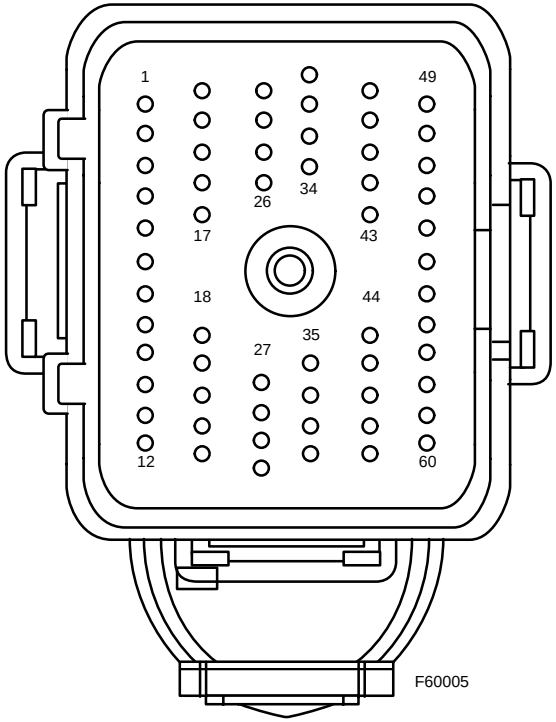

Pin	Circuit	Circuit Function
1	91S-RR6 (BN/RD)	Coil On Plug (COP) 2 (12029)
2	91S-RL10 (BN/WH)	Injector 1 (9F593)
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	91S-RJ14 (BN)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
8	91S-RJ15 (BN/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
9	91S-RL19 (BN)	Idle air control valve (IAC) (9F715)
10	–	not used

Pin	Circuit	Circuit Function
11	91S-RL14 (BN/GN)	Injector 5 (9F593)
12	91S-RR10 (BN/WH)	Coil On Plug (COP) 6 (12029)
13	91S-RR8 (BN/GN)	Coil On Plug (COP) 4 (12029)
14	91S-RL11 (BN)	Injector 2 (9F593)
15	–	not used
16	91S-RL7 (BN/GN)	EGR Vacuum Regulator (EVR)
17	9-RE8 (BN)	Sensor signal return (reference/ground)

Pin	Circuit	Circuit Function
18	–	not used
19	–	not used
20	7-RN11 (YE/BK)	Voltage D.C. supplied at all times (sensor)
21	91S-RL15 (BN/YE)	Injector 6 (9F593)
22	91S-RR7 (BN/BU)	Coil On Plug (COP) 3 (12029)
23	91S-RR9 (BN/YE)	Coil On Plug (COP) 5 (12029)
24	91S-RL12 (BN/RD)	Injector 3 (9F593)
25	–	not used
26	–	not used
27	–	not used
28	10-BA25 (GY/RD)	Generator
29	91S-RL16 (BN/WH)	Injector 7 (9F593)
30	91S-RR11 (BN)	Coil On Plug (COP) 7 (12029)
31	91S-RR5 (BN)	Coil On Plug (COP) 1 (12029)
32	91S-RL13 (BN/BU)	Injector 4 (9F593)
33	–	not used
34	–	not used
35	–	not used
36	91S-RG1 (BN)	Hydraulic fan solenoid (8K621)
37	91S-RL17 (BN)	Injector 8 (9F593)
38	91S-RR12 (BN/RD)	Coil On Plug (COP) 8 (12029)
39	–	not used

Pin	Circuit	Circuit Function
40	8-RJ33 (WH/VT)	Cylinder–head temperature sensor (6G004)
41	8-RJ7 (WH/BU)	Exhaust Pressure Transducer (EPT) sensor
42	10-RJ18 (GY/BK)	Knock sensor 1 (6G004)
43	10-RJ19 (GY/RD)	Knock sensor 2 (6G004)
44	8-RJ15 (WH/RD)	Heated Oxygen Sensor (HO2S) #21 (9F472)
45	8-RJ14 (WH)	Heated Oxygen Sensor (HO2S) #11 (9F472)
46	–	not used
47	–	not used
48	–	not used
49	8-RJ11 (WH/GN)	Fuel rail pressure transducer sensor
50	8-BA25 (WH/RD)	Generator
51	8-RJ18 (WH/BK)	Knock sensor 1 (6G004)
52	8-RJ19 (WH/RD)	Knock sensor 2 (6G004)
53	8-RJ3 (WH/VT)	Camshaft position sensor (6B288)
54	–	not used
55	10-RJ4 (GY/RD)	Crankshaft position sensor (6C315)
56	8-RJ4 (WH/RD)	Crankshaft position sensor (6C315)
57	8-RJ28 (WH)	Throttle Position Sensor (TPS) (9B989)
58	–	not used
59	–	not used
60	–	not used