C501

14N000

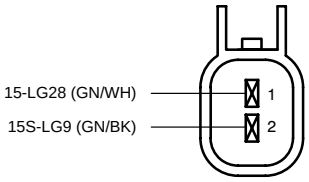

F02062

12A522

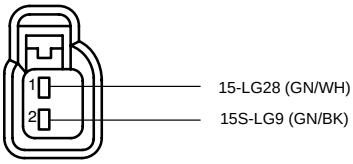

F02058

C502a (GY)

13A412

E9
Lamp assembly, left rear
2) Stop lamp

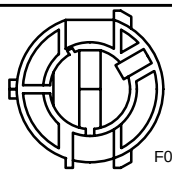

F02124

Pin	Circuit	Circuit Function
	15S-LG14A (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	31-LG14 (BK) + 31-LG14A (BK)	Ground

C502b (BN)

13A412

E9
Lamp assembly, left rear
2) Stop lamp

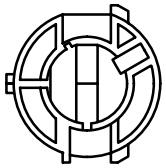

F02124

Pin	Circuit	Circuit Function
	15S-LG14B (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	31-LG14A (BK)	Ground

C502c (GY)

13A412

E9
Lamp assembly, left rear
6) Reversing lamp

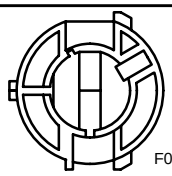

F02124

Pin	Circuit	Circuit Function
	15S-LG16 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
	31-LF13 (BK) + 31-LG16 (BK)	Ground

C502d (BK)

13A412

E9
Lamp assembly, left rear
1) Turn signal lamp
4) Tail lamp

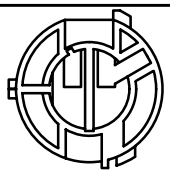

F03140

Pin	Circuit	Circuit Function
	29S-LF11A (OG/WH)	Voltage supplied at all times (overload protected), switched
	49-LG12 (BU)	Pulsed power feed (overload protected)
	31-LF11 (BK)	Ground

C502e

13A412

E9
Lamp assembly, left rear
4) Tail lamp

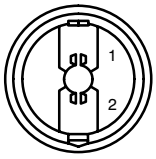

F02126

Pin	Circuit	Circuit Function
1	29S-LF11B (OG/WH)	Voltage supplied at all times (overload protected), switched
2	31-LF13 (BK)	Ground

C503a (GY)

13A412

E10
Lamp assembly, right rear
2) Stop lamp

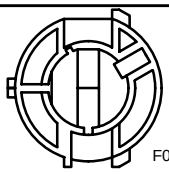

F02124

Pin	Circuit	Circuit Function
	15S-LG14A (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	31-LF14 (BK)	Ground
	31-LG14A (BK)	Ground