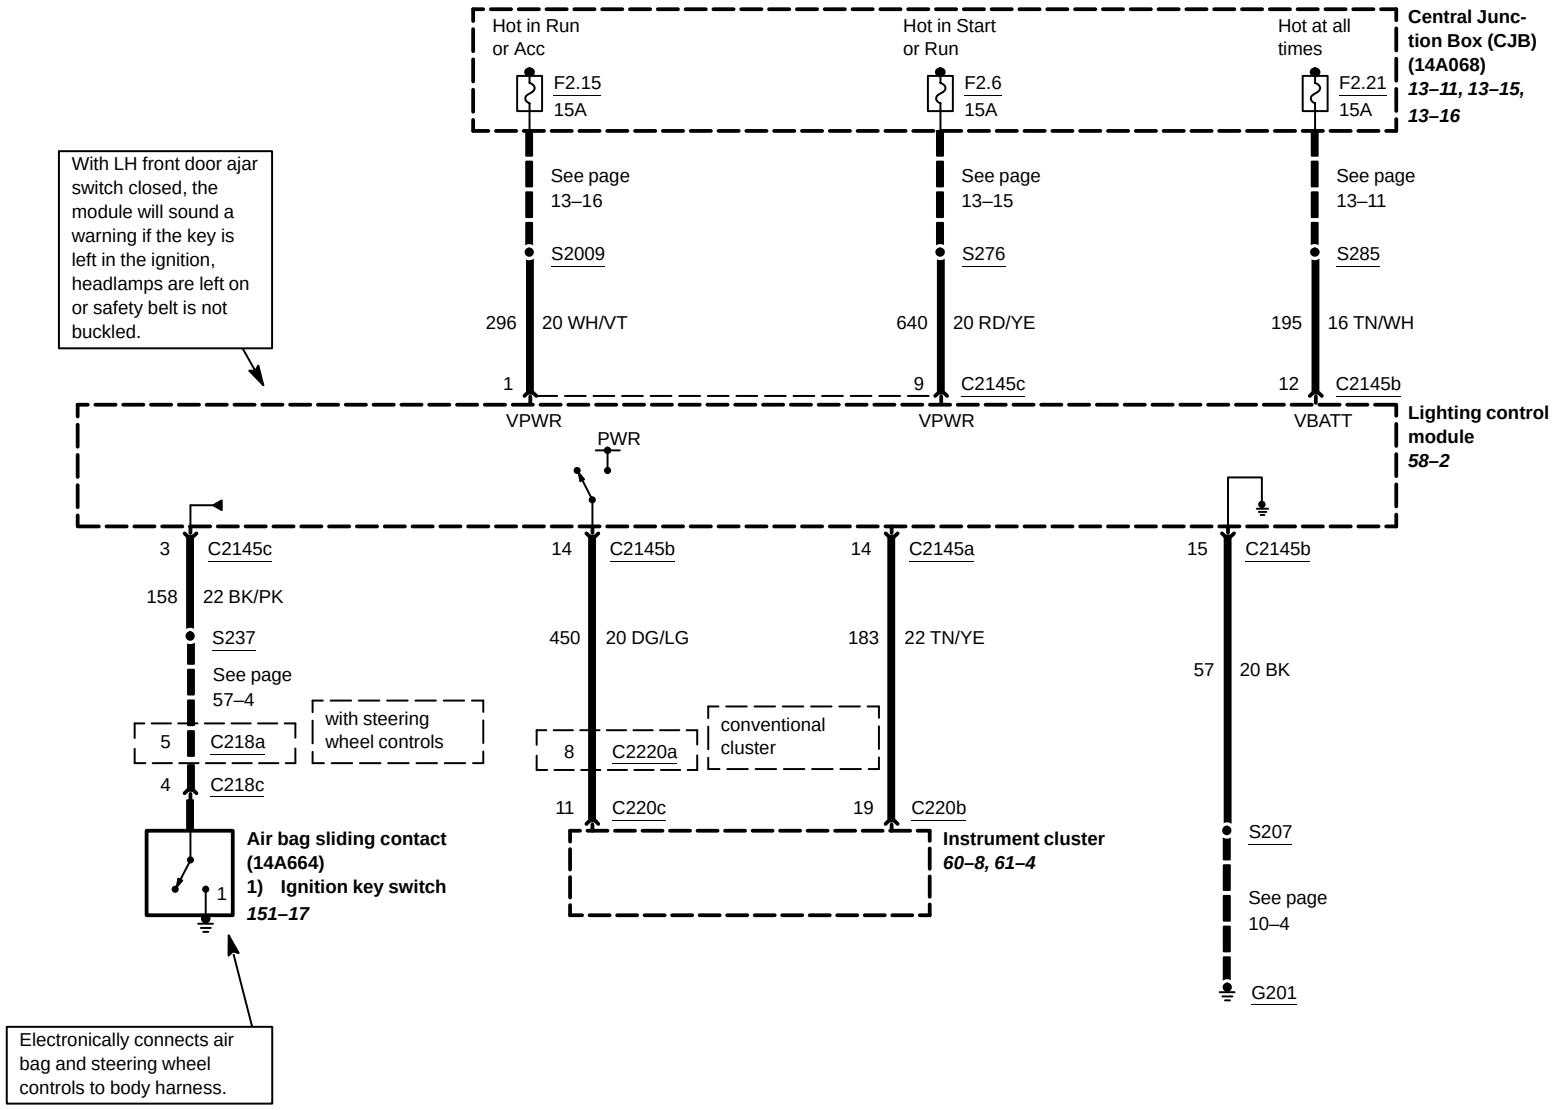
Hot in Run or Acc
F2.15 15A
Hot in Start or Run
F2.6 15A
Hot at all times
F2.21 15A
Central Junction Box (CJB) (14A068) 13–11, 13–15, 13–16
With LH front door ajar switch closed, the module will sound a warning if the key is left in the ignition, headlamps are left on or safety belt is not buckled.
See page 13–16
See page 13–15
See page 13–11
S2009
S276
S285
296 20 WH/VT
640 20 RD/YE
195 16 TN/WH
1 VPWR
9 C2145c
VPWR
12 C2145b
VBATT
Lighting control module 58–2
PWR
3 C2145c
158 22 BK/PK
S237
See page 57–4
with steering wheel controls
5 C218a
4 C218c
14 C2145b
450 20 DG/LG
8 C2220a
conventional cluster
11 C220c
14 C2145a
183 22 TN/YE
19 C220b
15 C2145b
57 20 BK
S207
See page 10–4
G201
Air bag sliding contact (14A664)
1) Ignition key switch 151–17
1
Instrument cluster 60–8, 61–4
Electronically connects air bag and steering wheel controls to body harness.