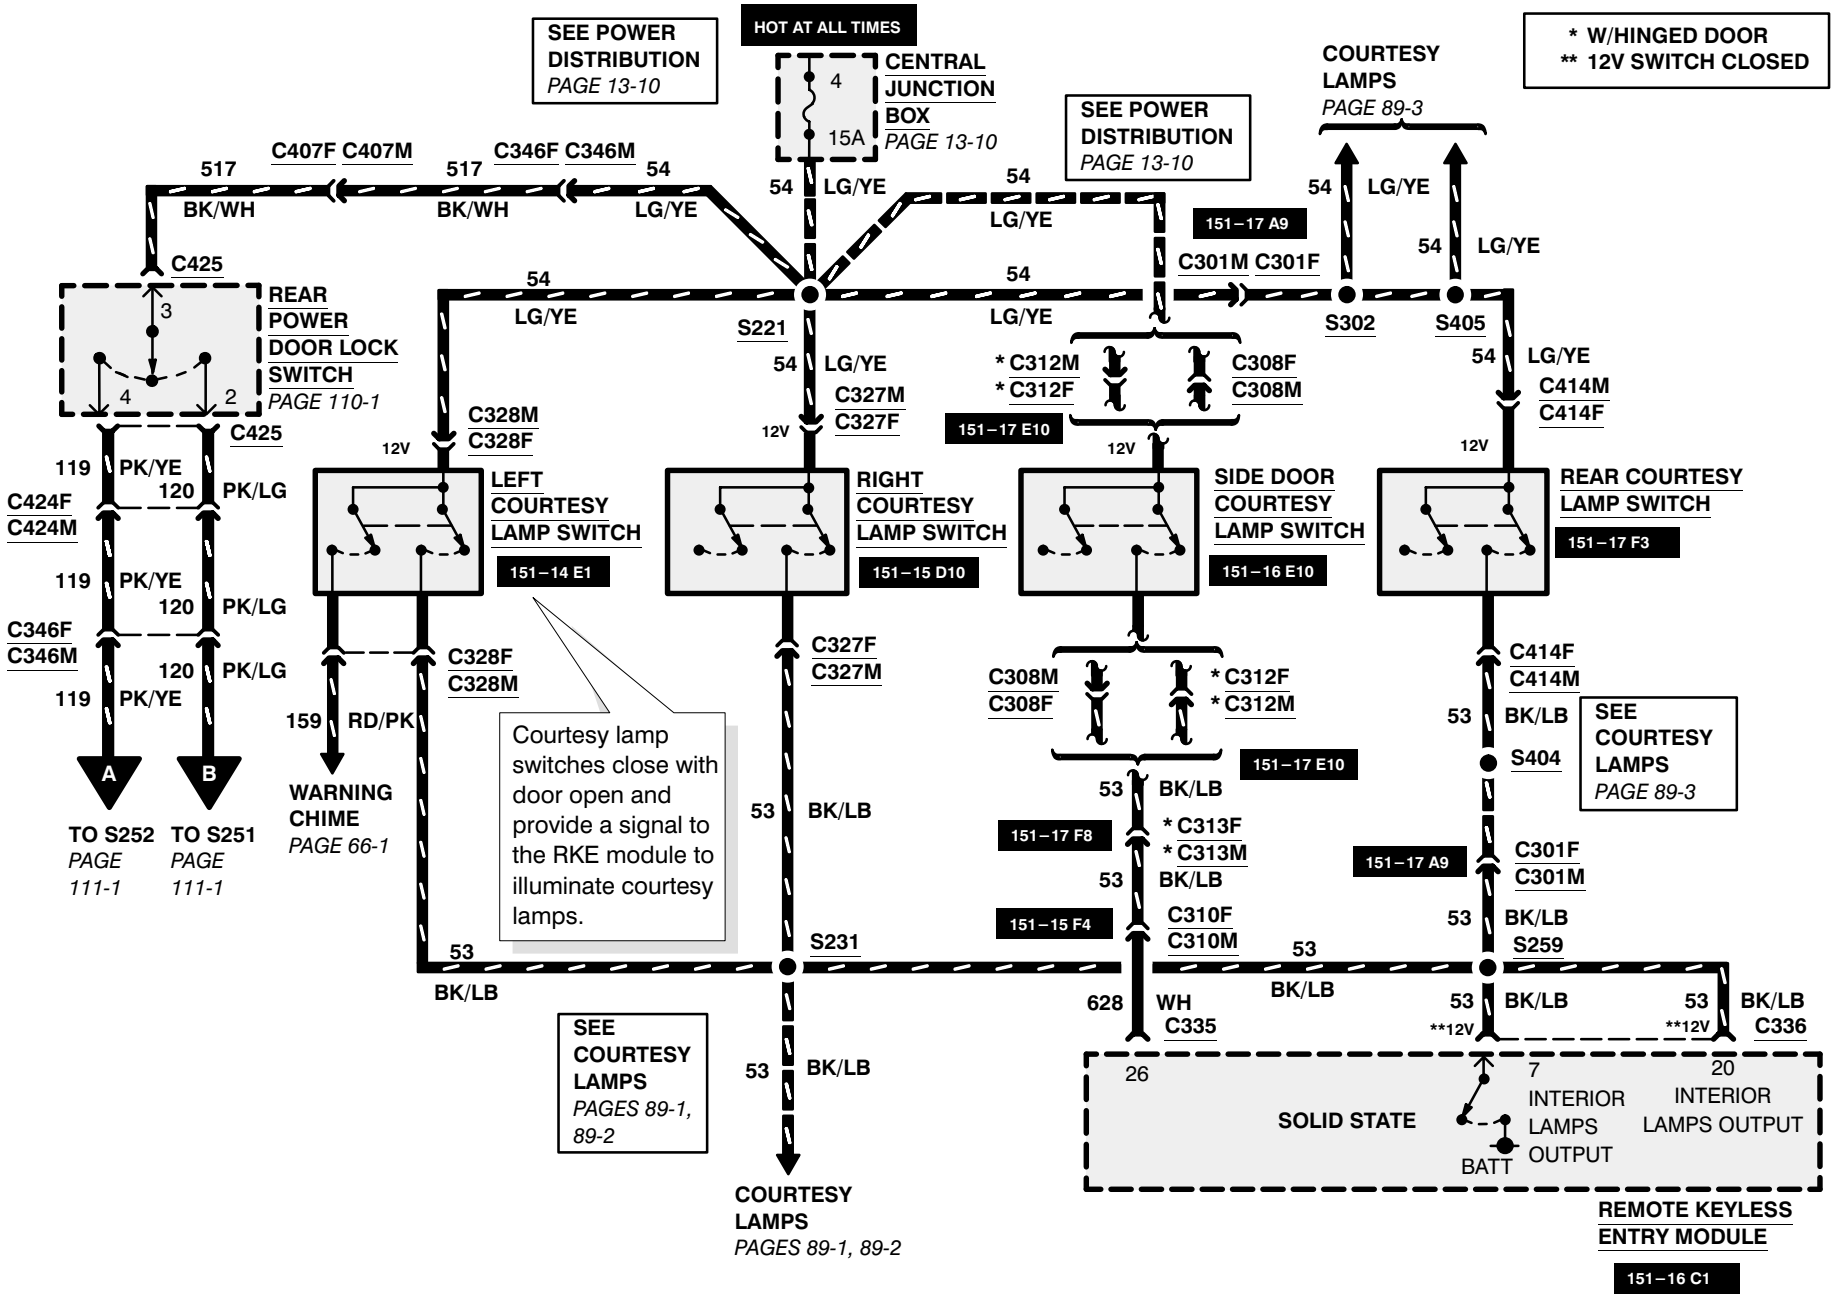
SEE POWER DISTRIBUTION PAGE 13-10
HOT AT ALL TIMES
CENTRAL JUNCTION BOX PAGE 13-10
4
15A
SEE POWER DISTRIBUTION PAGE 13-10
COURTESY LAMPS PAGE 89-3
* W/HINGED DOOR
** 12V SWITCH CLOSED
517 C407F C407M 517 C346F C346M 54
BK/WH BK/WH LG/YE
54 LG/YE
54 LG/YE
151–17 A9
54 LG/YE
54 LG/YE
C425
REAR POWER DOOR LOCK SWITCH PAGE 110-1
3
4
2
C425
54 LG/YE
54 LG/YE
C301M C301F
S302
S405
54 LG/YE
S221
54 LG/YE
* C312M
* C312F
C308F
C308M
151–17 E10
C414M
C414F
C328M
C328F
12V
C327M
C327F
12V
12V
12V
119 PK/YE
120 PK/LG
C424F
C424M
LEFT COURTESY LAMP SWITCH
151–14 E1
RIGHT COURTESY LAMP SWITCH
151–15 D10
SIDE DOOR COURTESY LAMP SWITCH
151–16 E10
REAR COURTESY LAMP SWITCH
151–17 F3
119 PK/YE
120 PK/LG
C346F
C346M
120 PK/LG
119 PK/YE
C328F
C328M
C327F
C327M
C308M
C308F
* C312F
* C312M
C414F
C414M
159 RD/PK
53 BK/LB
S404
SEE COURTESY LAMPS PAGE 89-3
Courtesy lamp switches close with door open and provide a signal to the RKE module to illuminate courtesy lamps.
151–17 E10
53 BK/LB
151–17 F8
* C313F
* C313M
53 BK/LB
151–17 A9
C301F
C301M
53 BK/LB
151–15 F4
C310F
C310M
S259
A
B
TO S252 PAGE 111-1
TO S251 PAGE 111-1
WARNING CHIME PAGE 66-1
53 BK/LB
S231
53 BK/LB
628 WH
C335
53 BK/LB
**12V
53 BK/LB
**12V
C336
SEE COURTESY LAMPS PAGES 89-1, 89-2
53 BK/LB
COURTESY LAMPS PAGES 89-1, 89-2
26
SOLID STATE
7
INTERIOR LAMPS OUTPUT
BATT
20
INTERIOR LAMPS OUTPUT
REMOTE KEYLESS ENTRY MODULE
151–16 C1