-1

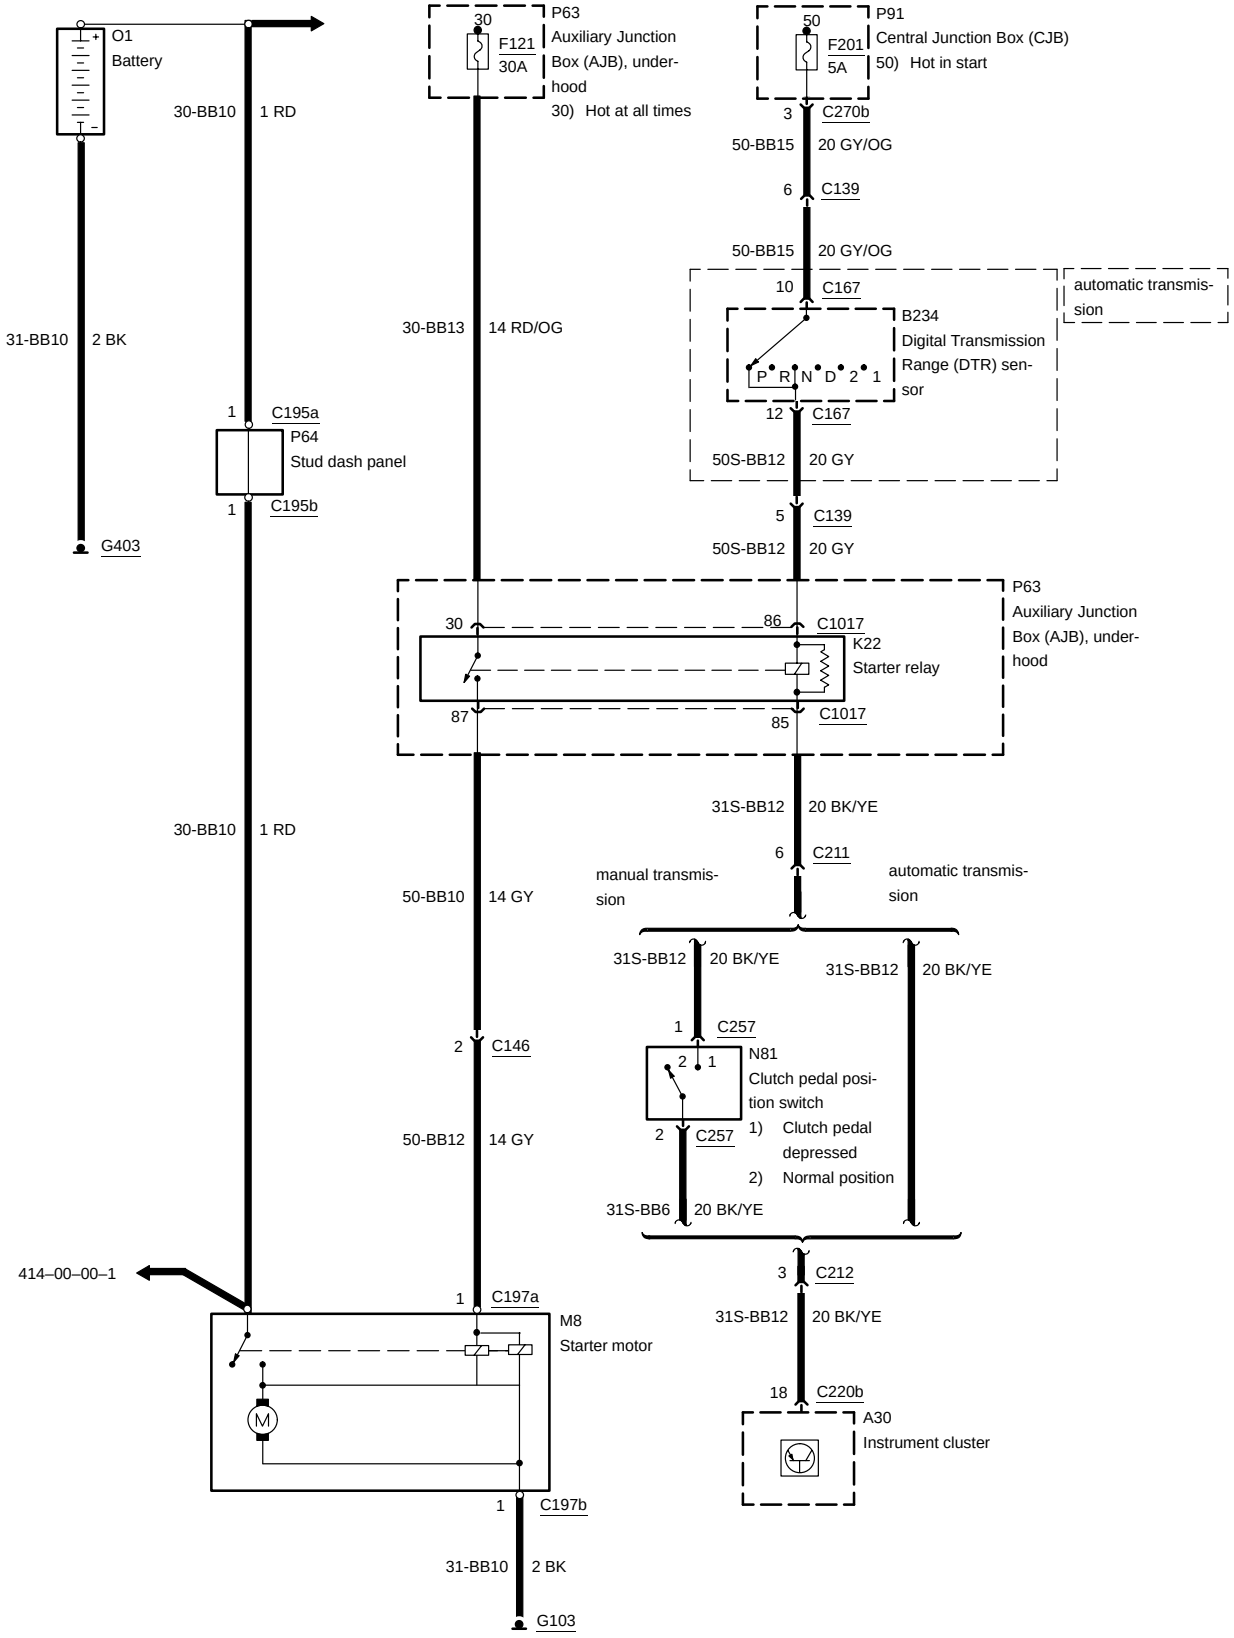
O1
Battery
30-BB10 1 RD
31-BB10 2 BK
G403
1 C195a
P64
Stud dash panel
1 C195b
30 P63
F121
30A
Auxiliary Junction Box (AJB), under-hood
30) Hot at all times
30-BB13 14 RD/OG
50 P91
F201
5A
Central Junction Box (CJB)
50) Hot in start
3 C270b
50-BB15 20 GY/OG
6 C139
50-BB15 20 GY/OG
10 C167
automatic transmis-sion
B234
Digital Transmission Range (DTR) sen-sor
P R N D 2 1
12 C167
50S-BB12 20 GY
5 C139
50S-BB12 20 GY
P63
Auxiliary Junction Box (AJB), under-hood
30
86 C1017
K22
Starter relay
87
85 C1017
31S-BB12 20 BK/YE
6 C211
manual transmis-sion
automatic transmis-sion
50-BB10 14 GY
31S-BB12 20 BK/YE
31S-BB12 20 BK/YE
1 C257
N81
Clutch pedal posi-tion switch
2 1
2 C257
1) Clutch pedal depressed
2) Normal position
31S-BB6 20 BK/YE
3 C212
31S-BB12 20 BK/YE
18 C220b
A30
Instrument cluster
2 C146
50-BB12 14 GY
414–00–00–1
1 C197a
M8
Starter motor
M
1 C197b
31-BB10 2 BK
G103