46-1 AIR BAGS

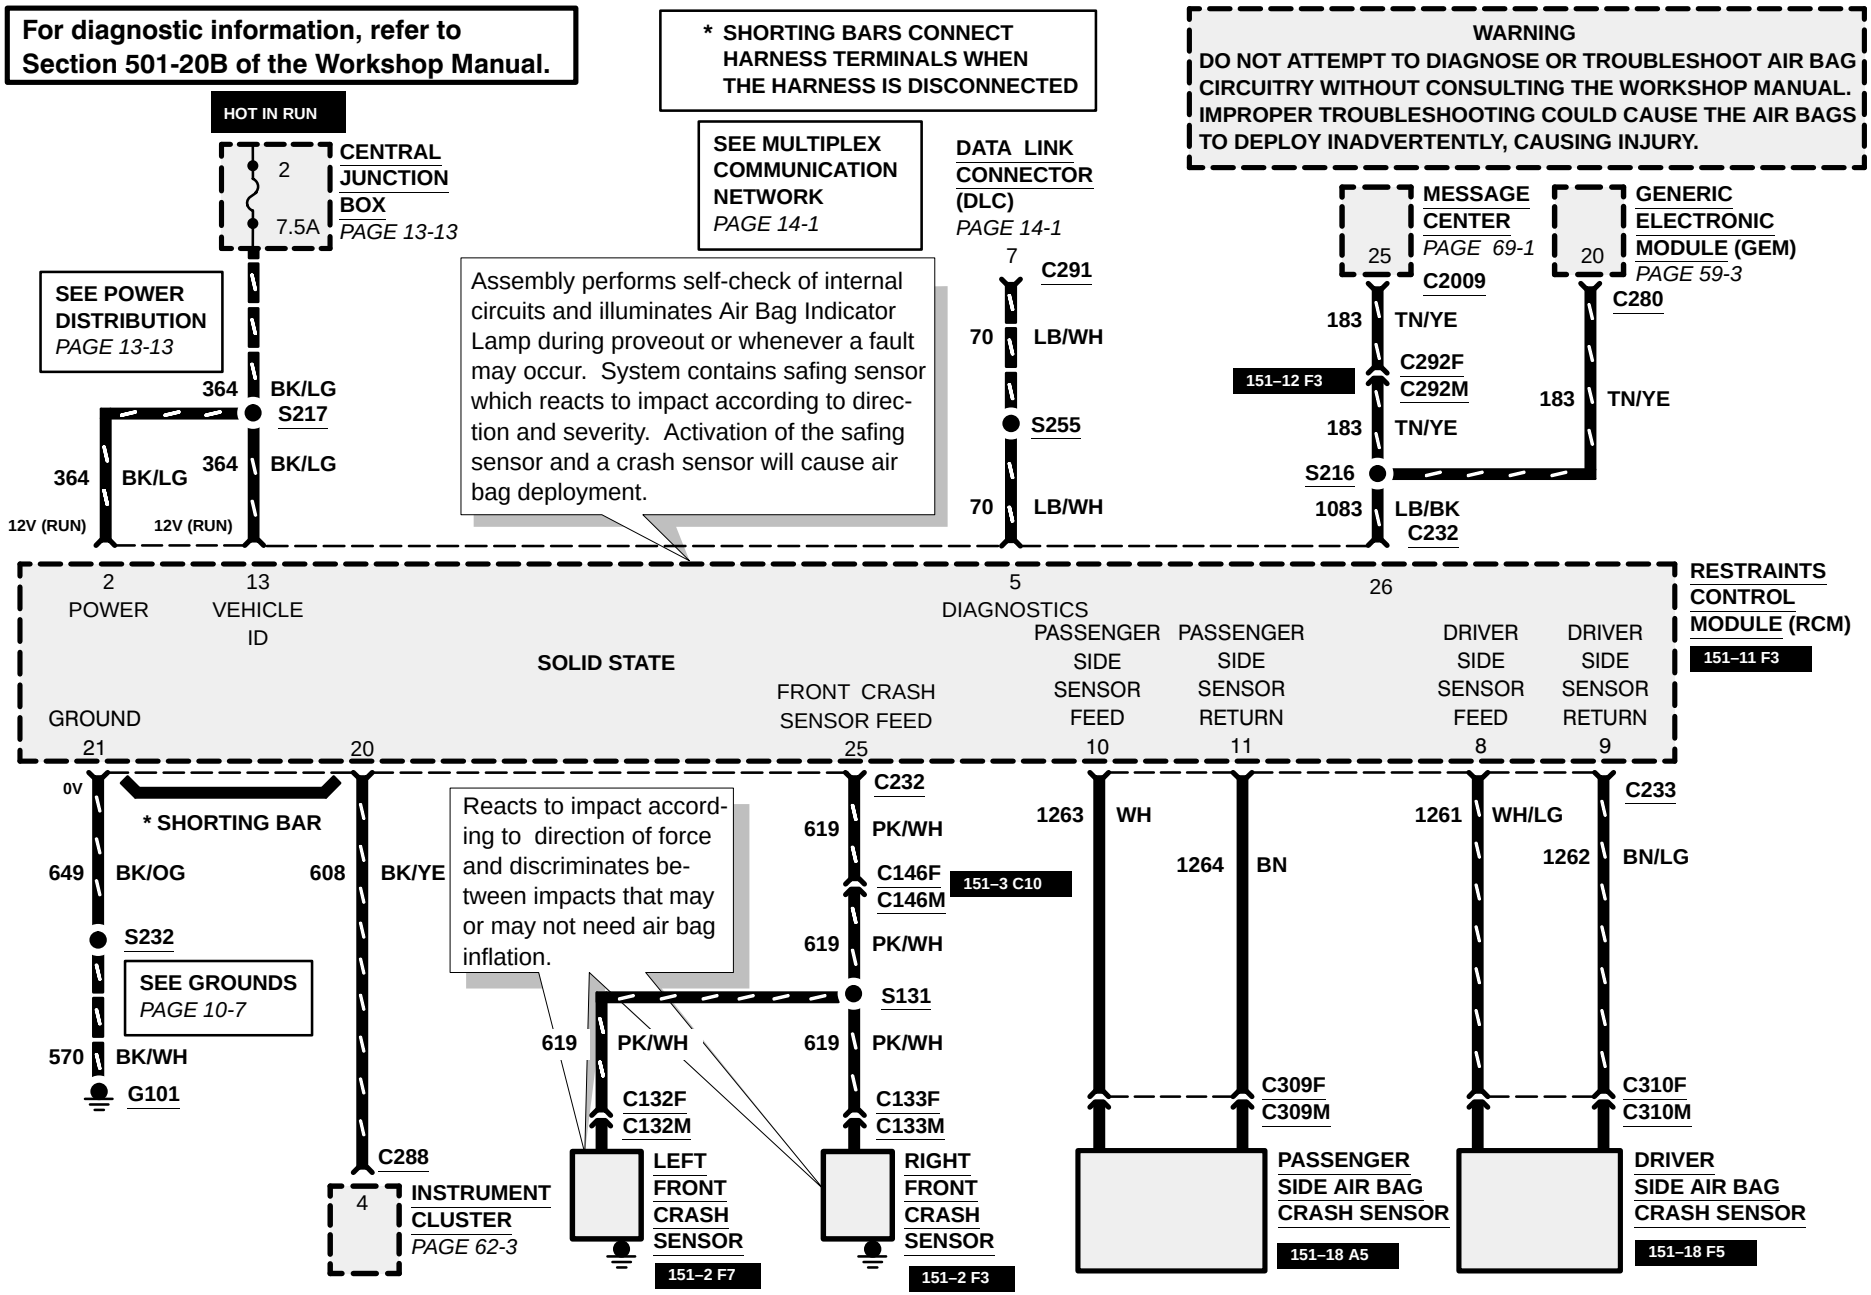
For diagnostic information, refer to Section 501-20B of the Workshop Manual.
* SHORTING BARS CONNECT HARNESS TERMINALS WHEN THE HARNESS IS DISCONNECTED
WARNING
DO NOT ATTEMPT TO DIAGNOSE OR TROUBLESHOOT AIR BAG CIRCUITRY WITHOUT CONSULTING THE WORKSHOP MANUAL. IMPROPER TROUBLESHOOTING COULD CAUSE THE AIR BAGS TO DEPLOY INADVERTENTLY, CAUSING INJURY.
HOT IN RUN
CENTRAL JUNCTION BOX PAGE 13-13
2
7.5A
SEE POWER DISTRIBUTION PAGE 13-13
SEE MULTIPLEX COMMUNICATION NETWORK PAGE 14-1
DATA LINK CONNECTOR (DLC) PAGE 14-1
MESSAGE CENTER PAGE 69-1
GENERIC ELECTRONIC MODULE (GEM) PAGE 59-3
Assembly performs self-check of internal circuits and illuminates Air Bag Indicator Lamp during proveout or whenever a fault may occur. System contains safing sensor which reacts to impact according to direction and severity. Activation of the safing sensor and a crash sensor will cause air bag deployment.
364 BK/LG
S217
364 BK/LG
364 BK/LG
12V (RUN)
12V (RUN)
7
C291
70 LB/WH
S255
70 LB/WH
25
C2009
183 TN/YE
151–12 F3
C292F
C292M
183 TN/YE
S216
1083 LB/BK
C232
20
C280
183 TN/YE
RESTRAINTS CONTROL MODULE (RCM)
151–11 F3
2 POWER
13 VEHICLE ID
SOLID STATE
5 DIAGNOSTICS
26
GROUND
21
20
FRONT CRASH SENSOR FEED
25
PASSENGER SIDE SENSOR FEED
10
PASSENGER SIDE SENSOR RETURN
11
DRIVER SIDE SENSOR FEED
8
DRIVER SIDE SENSOR RETURN
9
0V
* SHORTING BAR
649 BK/OG
608 BK/YE
S232
SEE GROUNDS PAGE 10-7
570 BK/WH
G101
C288
4
INSTRUMENT CLUSTER PAGE 62-3
Reacts to impact according to direction of force and discriminates between impacts that may or may not need air bag inflation.
C232
619 PK/WH
C146F
C146M
151–3 C10
619 PK/WH
S131
619 PK/WH
619 PK/WH
C132F
C132M
C133F
C133M
LEFT FRONT CRASH SENSOR
151–2 F7
RIGHT FRONT CRASH SENSOR
151–2 F3
1263 WH
1264 BN
C309F
C309M
PASSENGER SIDE AIR BAG CRASH SENSOR
151–18 A5
1261 WH/LG
1262 BN/LG
C233
C310F
C310M
DRIVER SIDE AIR BAG CRASH SENSOR
151–18 F5