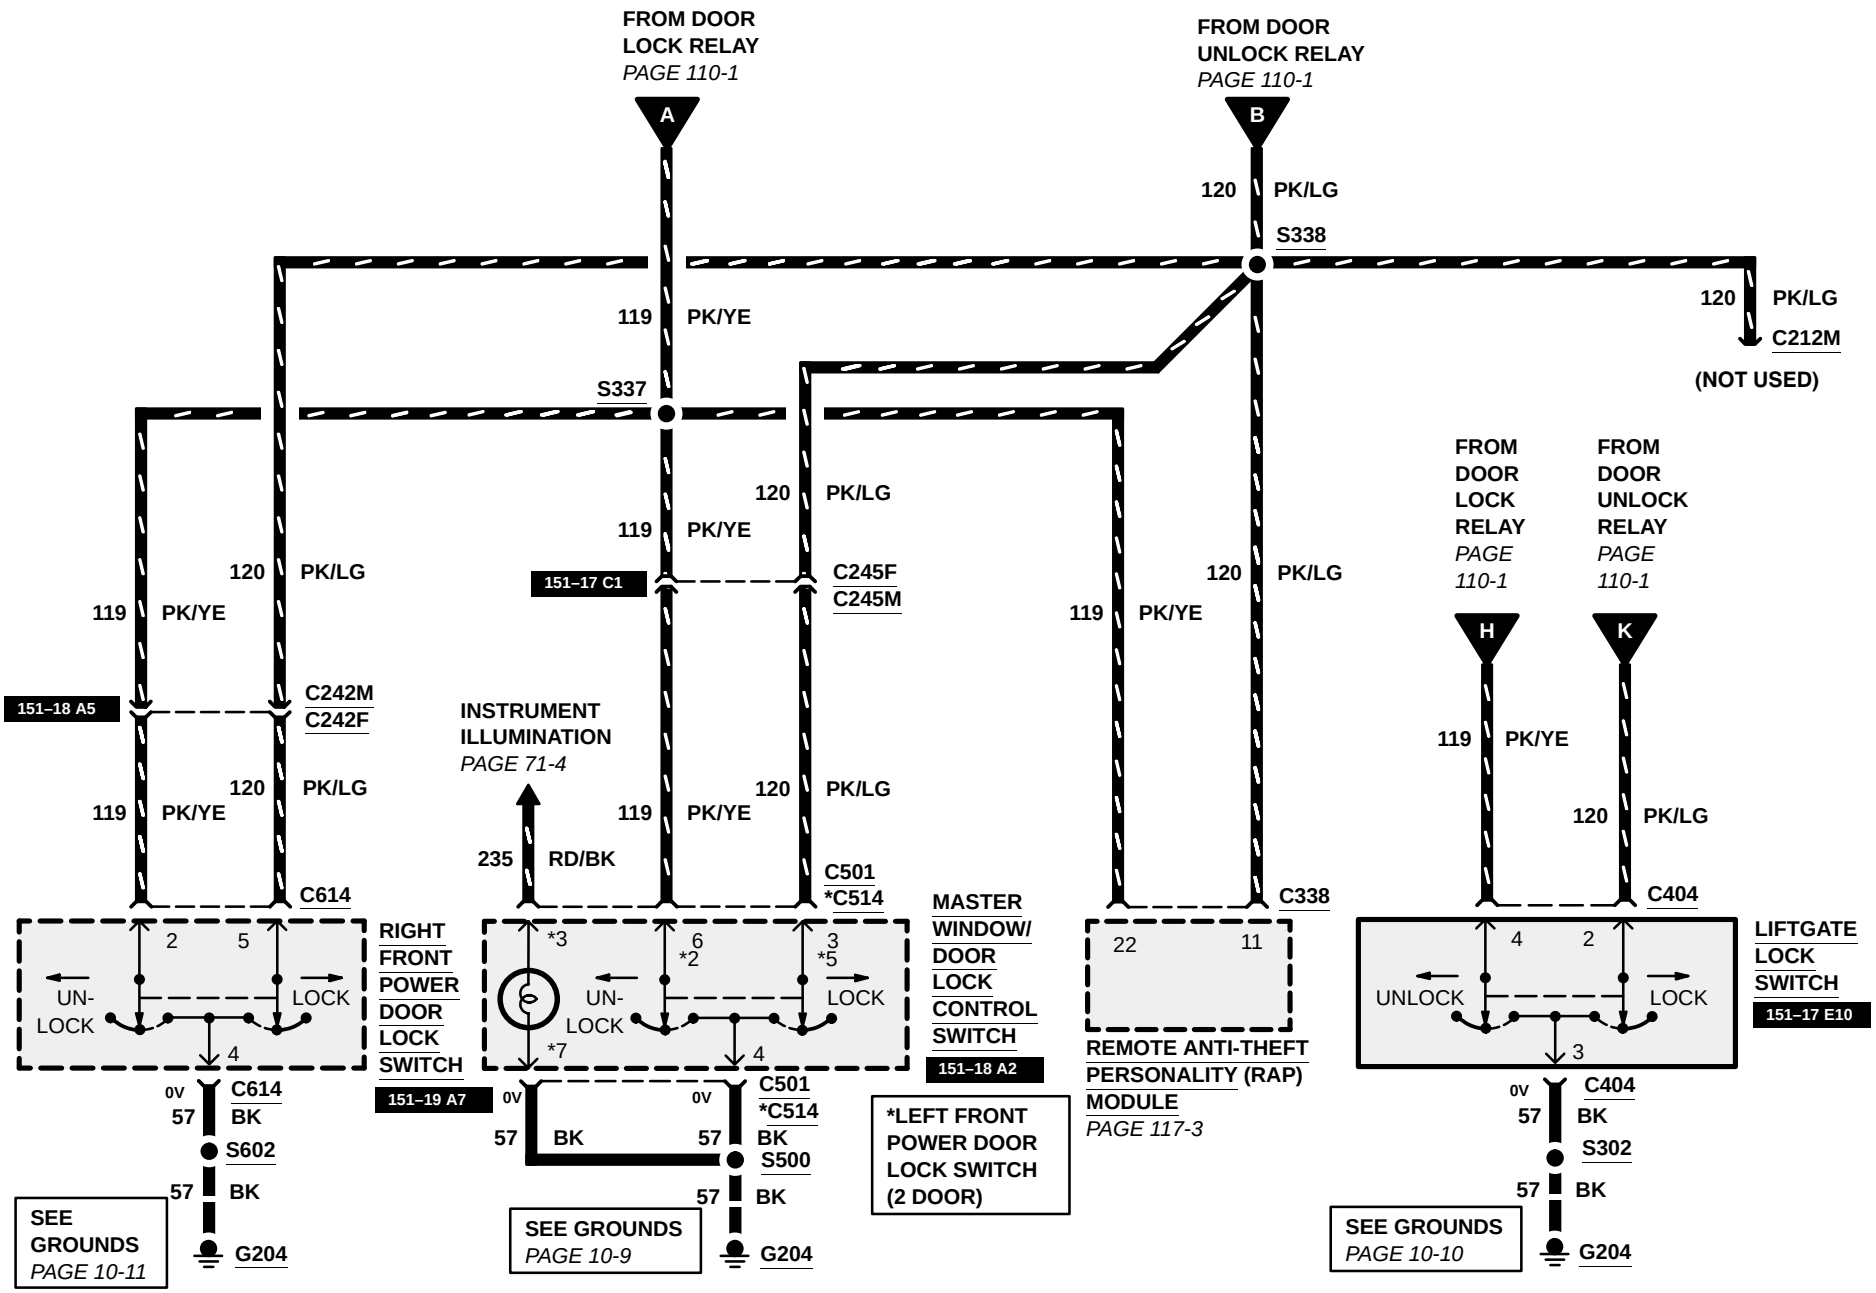
FROM DOOR LOCK RELAY
PAGE 110-1
A
FROM DOOR UNLOCK RELAY
PAGE 110-1
B
120 PK/LG
S338
120 PK/LG
C212M
(NOT USED)
119 PK/YE
S337
120 PK/LG
119 PK/YE
151–17 C1
C245F
C245M
120 PK/LG
119 PK/YE
120 PK/LG
119 PK/YE
151–18 A5
C242M
C242F
INSTRUMENT ILLUMINATION
PAGE 71-4
120 PK/LG
119 PK/YE
235 RD/BK
C501
*C514
C338
C614
RIGHT FRONT POWER DOOR LOCK SWITCH
151–19 A7
MASTER WINDOW/ DOOR LOCK CONTROL SWITCH
151–18 A2
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 117-3
FROM DOOR LOCK RELAY
PAGE 110-1
FROM DOOR UNLOCK RELAY
PAGE 110-1
H
K
119 PK/YE
120 PK/LG
C404
LIFTGATE LOCK SWITCH
151–17 E10
UN-LOCK
LOCK
UNLOCK
0V
57 BK
C614
S602
C501
*C514
S500
C404
S302
G204
SEE GROUNDS
PAGE 10-11
SEE GROUNDS
PAGE 10-9
SEE GROUNDS
PAGE 10-10
*LEFT FRONT POWER DOOR LOCK SWITCH (2 DOOR)