-9

C31 (BK)

14014

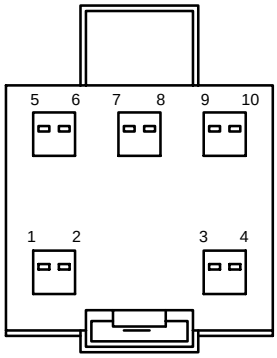

A43
Passenger air bag module

Pin	Circuit	Circuit Function
1	15S-HC11 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-HC9 (GN/BK)	Battery voltage, hot in Start and Run only (not overload protected), switched
2	15S-HC10 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	15S-HC10 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	31-HC11 (BK)	Ground
5	15S-JA34 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
6	91S-JA34 (BK/RD)	Ground, switched
7	29-AH14 (OG/YE)	Voltage supplied at all times (overload protected)
	15S-HC10 (GN/OG)	Battery voltage, hot in Start and Run only (not overload protected), switched
8	31-DA16 (BK) +	Ground
	31-HC11 (BK)	Ground
9	15S-JA38 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	91S-JA38 (BK/RD)	Ground, switched

C32

14B723
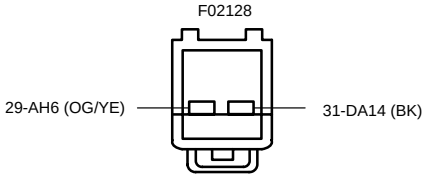
F02128