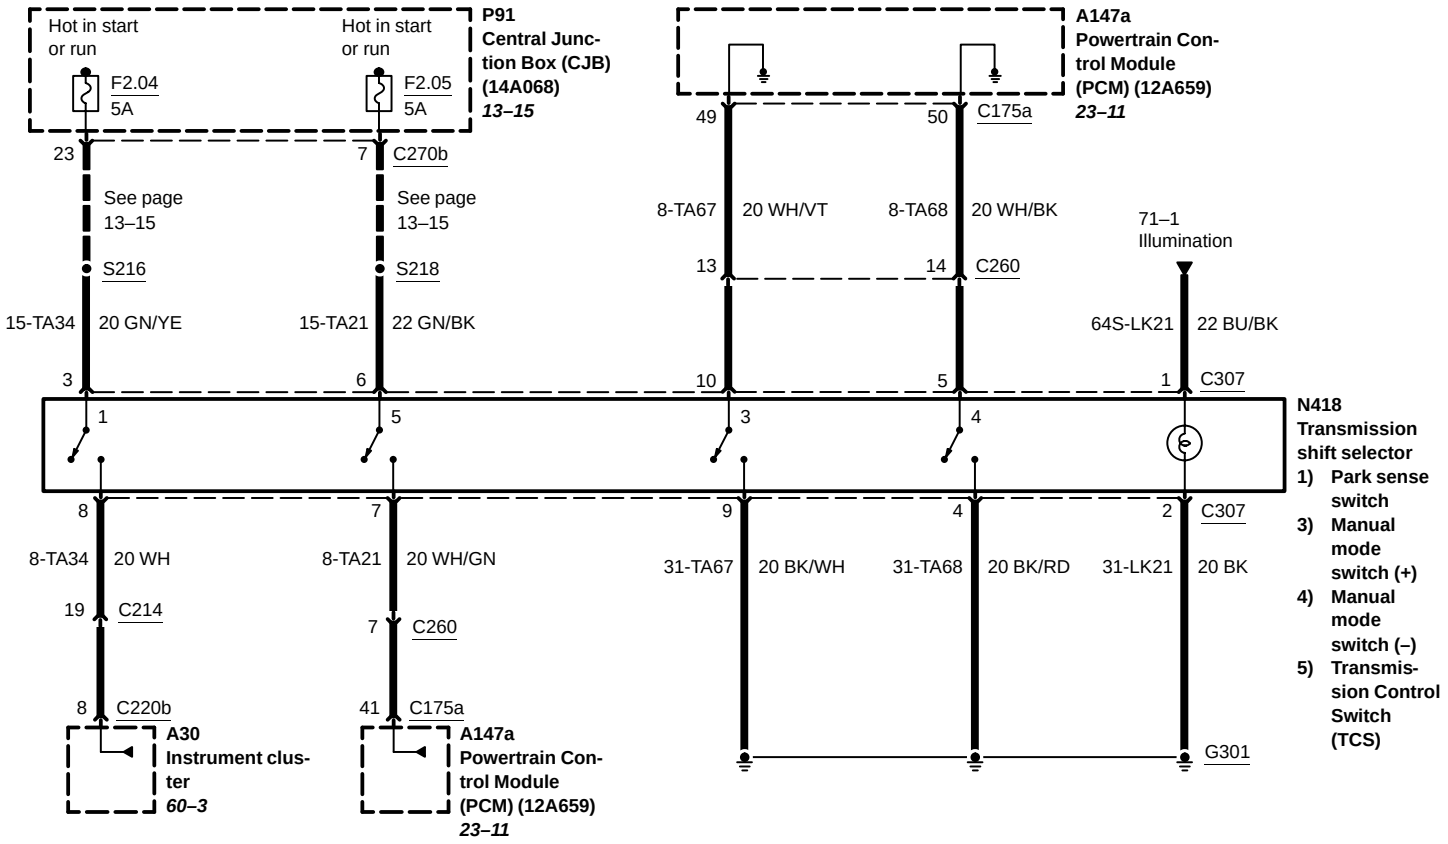
Hot in start or run
F2.04
5A
Hot in start or run
F2.05
5A
P91
Central Junction Box (CJB) (14A068)
13–15
A147a
Powertrain Control Module (PCM) (12A659)
23–11
49
50
C175a
23
7
C270b
See page 13–15
See page 13–15
8-TA67
20 WH/VT
8-TA68
20 WH/BK
71–1
Illumination
13
14
C260
S216
S218
15-TA34
20 GN/YE
15-TA21
22 GN/BK
64S-LK21
22 BU/BK
3
6
10
5
1
C307
1
5
3
4
N418
Transmission shift selector
1) Park sense switch
3) Manual mode switch (+)
4) Manual mode switch (–)
5) Transmission Control Switch (TCS)
8
7
9
4
2
C307
8-TA34
20 WH
8-TA21
20 WH/GN
31-TA67
20 BK/WH
31-TA68
20 BK/RD
31-LK21
20 BK
19
C214
7
C260
8
C220b
41
C175a
G301
A30
Instrument cluster
60–3
A147a
Powertrain Control Module (PCM) (12A659)
23–11