C700

14632



F02387

(1) 333 (YE/RD)
(2) 334 (RD/YE)

14A005



F02387

C703 (GY)

14A005

Power window motor, left rear (23394)



F02387

Pin	Circuit	Circuit function
1	333 (YE/RD)	Window motor, feed, Up
2	334 (RD/YE)	Window motor, feed, Down

C701 (BU)

14A005

Window adjust switch, left rear (14A412)

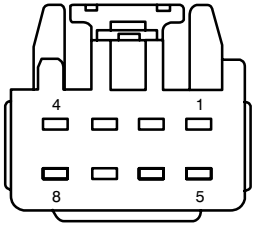

F08289

Pin	Circuit	Circuit function
1	–	not used
2	333 (YE/RD)	Window motor, feed, Up
3	316 (YE/LB)	Window switch, feed, left rear, Down
4	170 (RD/LB)	Window lockout, switched power, output
5	317 (GY/OG)	Window switch, feed, left rear, Up
6	334 (RD/YE)	Window motor, feed, Down
7	–	not used
8	–	not used

C704 (WH)

14A005

Door lock actuator, left rear (218A43)

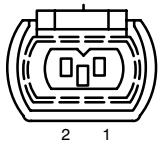

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	passenger door, Unlock, output
2	117 (PK/BK)	Door lock, output

C715a (GY)

14A005

Door ajar switch, driver side rear (14018)



F01053

Pin	Circuit	Circuit function
1	627 (BK/OG)	Door ajar indicator, control