C485 (GY)

14A005

Speaker, right rear (18808)



F02048

Pin	Circuit	Circuit function
1	803 (BN/PK)	Speaker, right rear (18808) –
2	802 (OG/RD)	Speaker, right rear (18808) +

C508 (BK)

14631

Master window/door lock/unlock switch

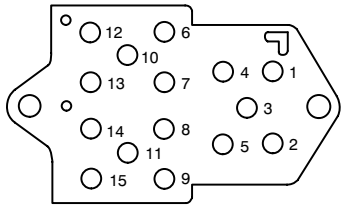

F15029

Pin	Circuit	Circuit function
1	–	not used
2	1014 (VT)	Door lock, driver side, signal +/–
3	326 (WH/VT)	Voltage supplied at all times (overload protected)
4	129 (LG)	Door unlock, driver side, signal +/–
5	–	not used
6	991 (TN/LB)	Master window adjust switch (14529) +/–
7	1205 (BK)	Ground
8	314 (TN/LB)	Window switch, right front +/–
9	1205 (BK)	Ground
10	400 (LB/BK)	Voltage in Run or Accessory (overload protected)
11	400 (LB/BK)	Voltage in Run or Accessory (overload protected)
12	1205 (BK)	Ground
13	992 (WH/BK)	Master window adjust switch (14529) +/–
14	1205 (BK)	Ground
15	313 (WH/YE)	Window switch, right front +/–

C516 (BK)

14631

Exterior rear view mirror, left



F03177

Pin	Circuit	Circuit function
A	540 (RD)	Right/Left mirror movement, Left +/–
B	541 (DB)	Up/Down mirror movement, Left +/–
C	542 (YE)	Mirror motor, feed +/–

C518 (GY)

14631

Power window motor, left front



F02651

Pin	Circuit	Circuit function
1	226 (WH/BK)	Power window motor, left front +/–
2	992 (WH/BK)	Power window motor, left front +/–

C523 (GY)

14631

Speaker, left front (18808)



F02048

Pin	Circuit	Circuit function
1	813 (LB/WH)	Speaker, left front (18808) –
2	804 (OG/LG)	Speaker, left front (18808) +