## C1295

### A2–525

R122
Cold start heater



F01143

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | G109 (WH) | switched power |

## C1296

### A2–525

K387
Cold start heater
relay

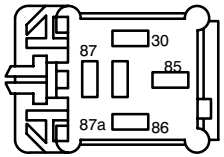


F05062

| Pin | Circuit | Circuit function |
|---|---|---|
| 30 | G109 (WH) | output |
| 85 | G007 (GY) | Cold start heater relay, control |
| 86 | G080 (WH) | Fuel pump, Power (Start or Run) |
| 87 | G002 (WH) | Voltage supplied at all times (overload protected) |
| 87a | – | not used |

## C1297

### A3–288

A237
High flow injector
assembly

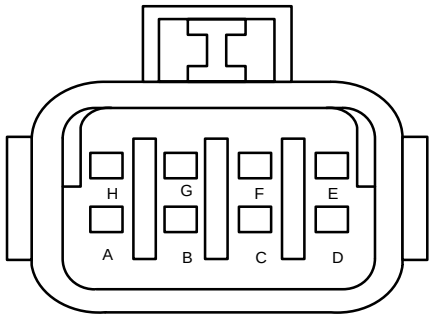


F08135

| Pin | Circuit | Circuit function |
|---|---|---|
| A | G045 (WH) | High flow injector 3, control |
| B | G047 (WH) | High flow injector 4, control |
| C | G049 (WH) | High flow injector 5, control |
| D | G051 (WH) | High flow injector 6, control |
| E | G053 (WH) | High flow injector 7, control |
| F | G055 (WH) | High flow injector 8, control |
| G | G072 (WH) | Voltage supplied in Start and Run (overload protected) |
| H | G073 (WH) | Voltage supplied in Start and Run (overload protected) |

## C1299

### 12B637

B70
Barometric Absolute
Pressure (BAP)
sensor

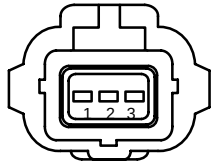


F03181

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 351 (BN/WH) | Reference, voltage |
| 2 | 359 (GY/RD) | signal, return |
| 3 | 356 (DB/LG) | Barometric Absolute Pressure (BAP) sensor, signal |