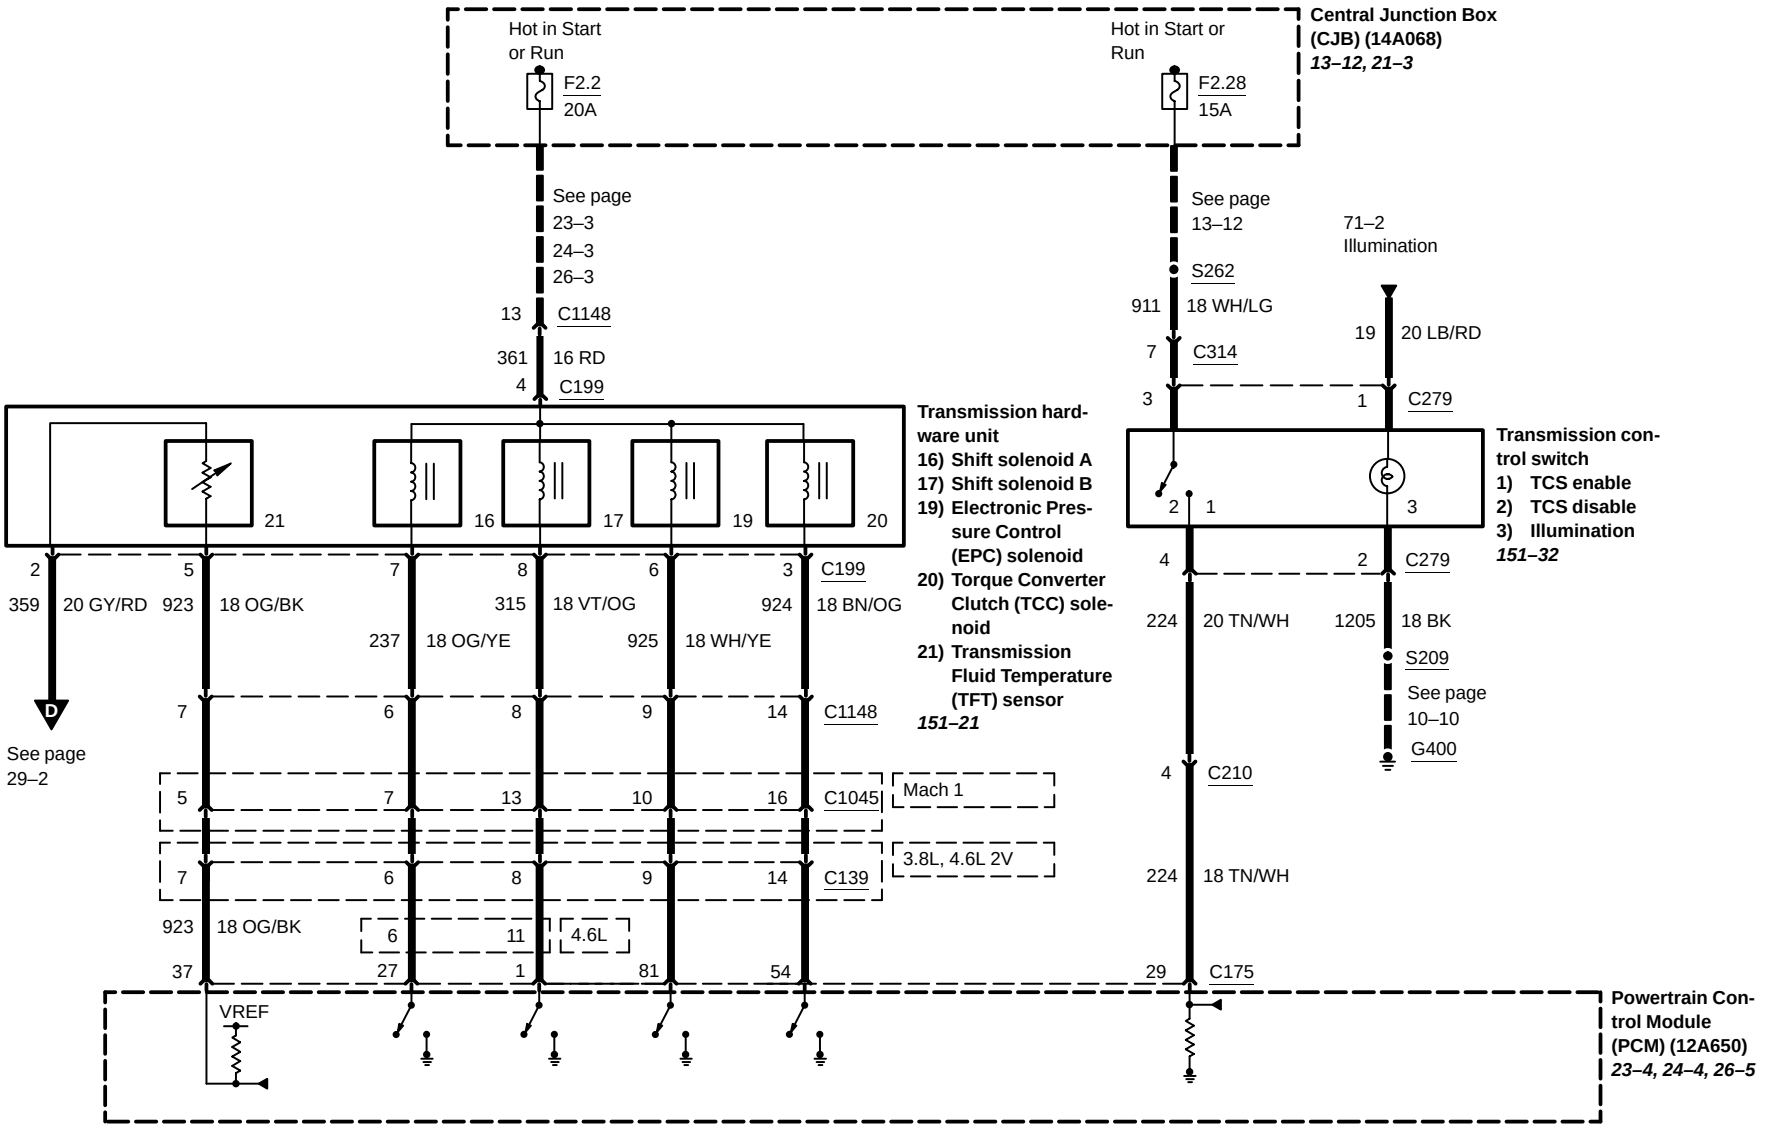
Hot in Start or Run
F2.2
20A
Hot in Start or Run
F2.28
15A
Central Junction Box (CJB) (14A068)
13–12, 21–3
See page 23–3 24–3 26–3
13
C1148
361
16 RD
4
C199
See page 13–12
S262
911
18 WH/LG
7
C314
71–2 Illumination
19
20 LB/RD
3
1
C279
Transmission hardware unit
16) Shift solenoid A
17) Shift solenoid B
19) Electronic Pressure Control (EPC) solenoid
20) Torque Converter Clutch (TCC) solenoid
21) Transmission Fluid Temperature (TFT) sensor
151–21
21
16
17
19
20
Transmission control switch
1) TCS enable
2) TCS disable
3) Illumination
151–32
2
1
3
2
5
7
8
6
3
C199
359
20 GY/RD
923
18 OG/BK
315
18 VT/OG
924
18 BN/OG
237
18 OG/YE
925
18 WH/YE
4
2
C279
224
20 TN/WH
1205
18 BK
S209
See page 10–10
G400
See page 29–2
7
6
8
9
14
C1148
4
C210
5
7
13
10
16
C1045
Mach 1
3.8L, 4.6L 2V
7
6
8
9
14
C139
224
18 TN/WH
923
18 OG/BK
6
11
4.6L
37
27
1
81
54
29
C175
VREF
Powertrain Control Module (PCM) (12A650)
23–4, 24–4, 26–5