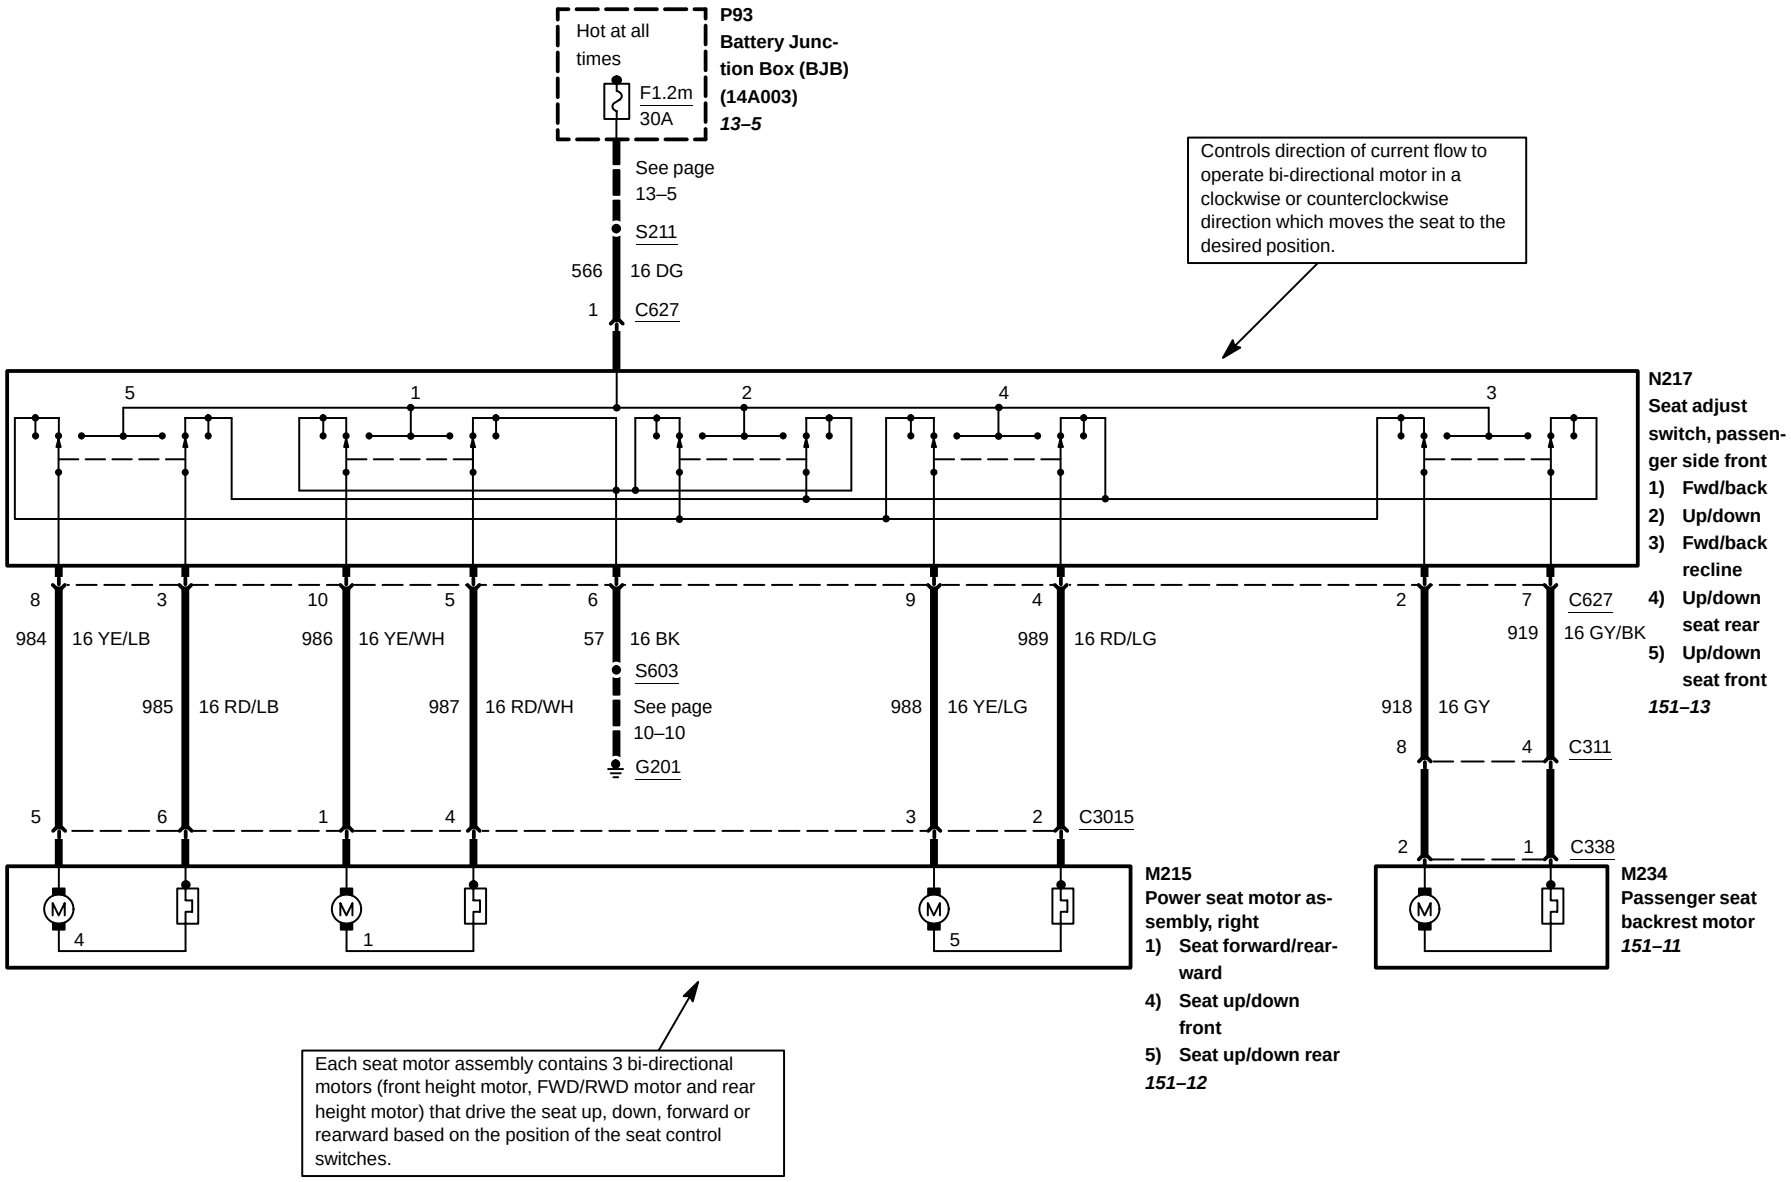
Hot at all times
F1.2m
30A
P93
Battery Junction Box (BJB)
(14A003)
13–5
See page 13–5
S211
566 16 DG
1 C627
Controls direction of current flow to operate bi-directional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
N217
Seat adjust switch, passenger side front
1) Fwd/back
2) Up/down
3) Fwd/back recline
4) Up/down seat rear
5) Up/down seat front
151–13
8 984 16 YE/LB
3 985 16 RD/LB
10 986 16 YE/WH
5 987 16 RD/WH
6 57 16 BK
S603
See page 10–10
G201
9 988 16 YE/LG
4 989 16 RD/LG
2 918 16 GY
7 919 16 GY/BK
C627
C311
C338
C3015
M215
Power seat motor assembly, right
1) Seat forward/rearward
4) Seat up/down front
5) Seat up/down rear
151–12
M234
Passenger seat backrest motor
151–11
Each seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.