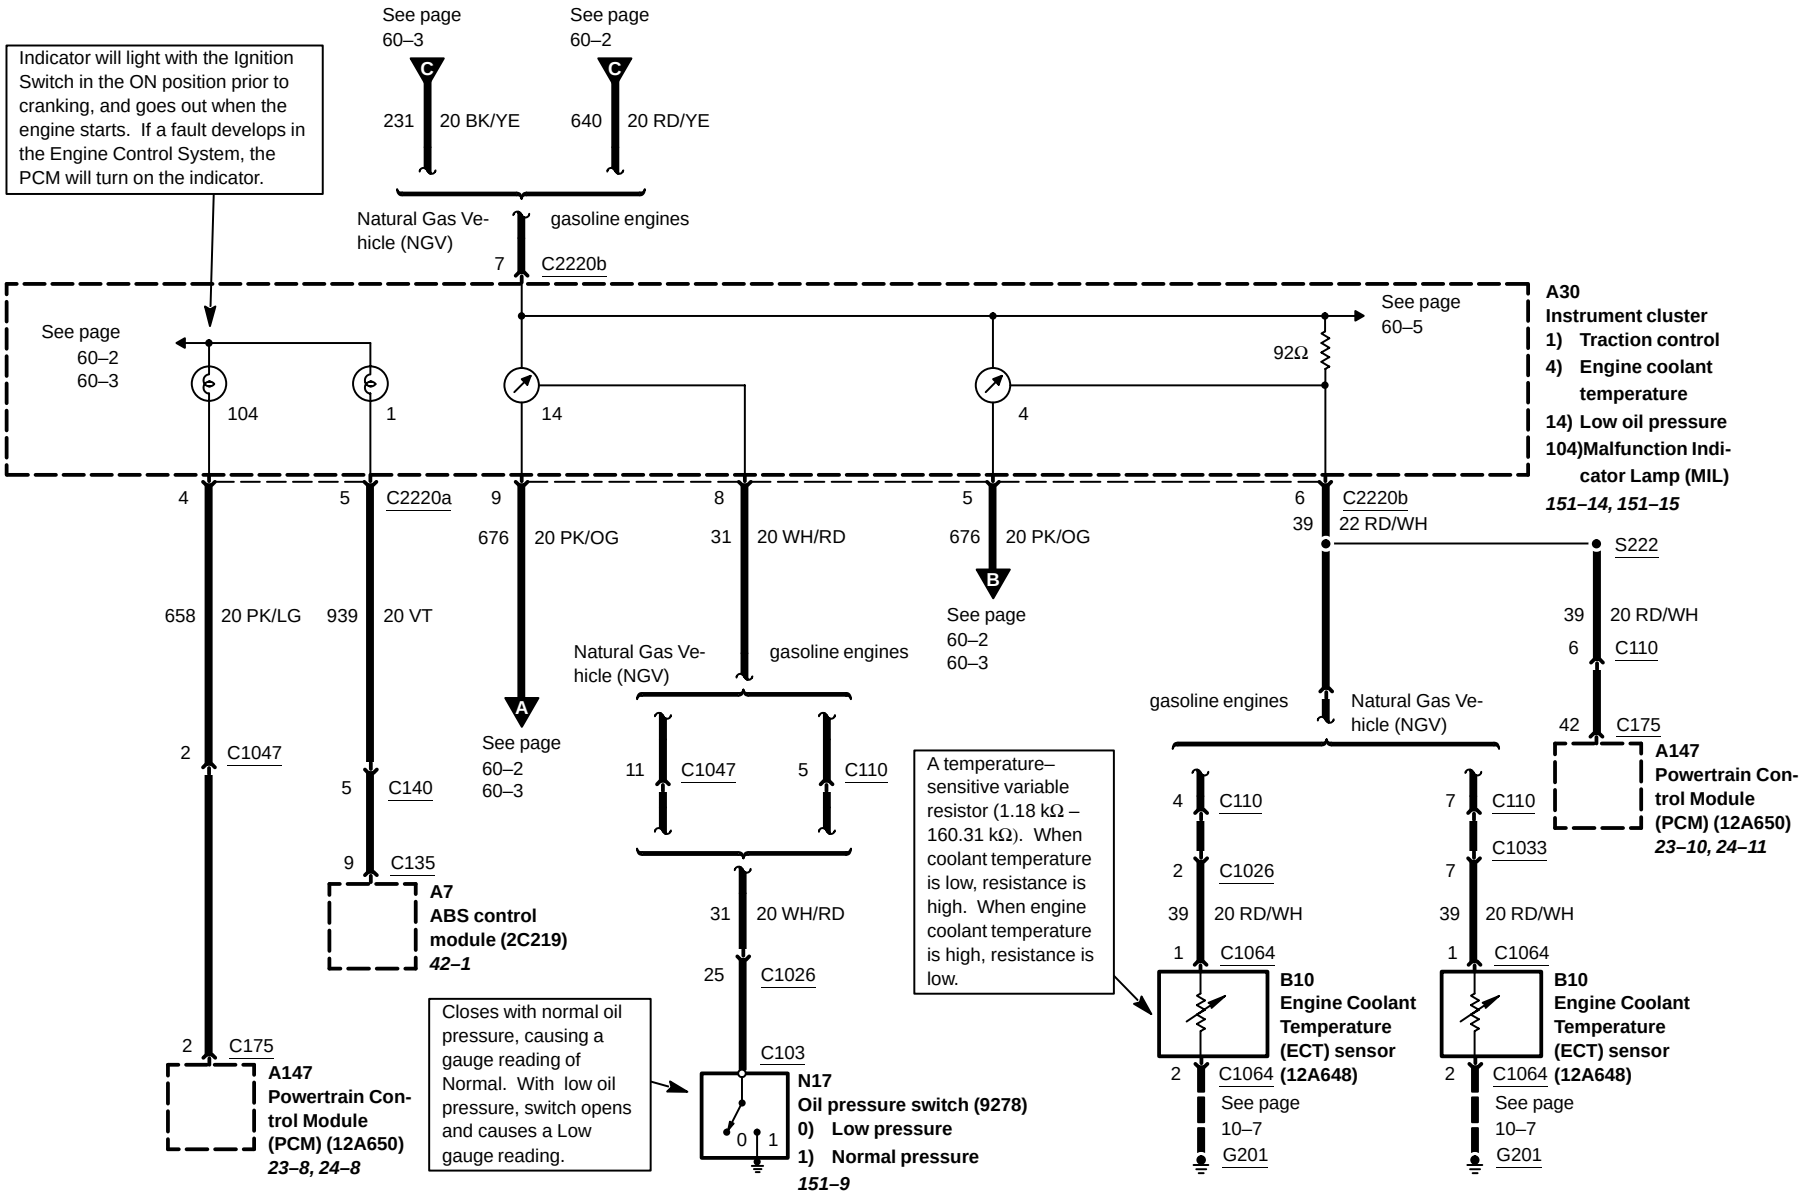
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes out when the engine starts. If a fault develops in the Engine Control System, the PCM will turn on the indicator.
See page 60–3
See page 60–2
231 20 BK/YE
640 20 RD/YE
Natural Gas Vehicle (NGV)
gasoline engines
7 C2220b
See page 60–2 60–3
See page 60–5
92Ω
A30
Instrument cluster
1) Traction control
4) Engine coolant temperature
14) Low oil pressure
104) Malfunction Indicator Lamp (MIL)
151–14, 151–15
104
1
14
4
4
5 C2220a
9
8
5
6
C2220b
39
22 RD/WH
658 20 PK/LG
939 20 VT
676 20 PK/OG
31 20 WH/RD
676 20 PK/OG
S222
39 20 RD/WH
6 C110
2 C1047
5 C140
9 C135
A7
ABS control module (2C219)
42–1
See page 60–2 60–3
See page 60–2 60–3
Natural Gas Vehicle (NGV)
gasoline engines
11 C1047
5 C110
31 20 WH/RD
25 C1026
C103
N17
Oil pressure switch (9278)
0) Low pressure
1) Normal pressure
151–9
Closes with normal oil pressure, causing a gauge reading of Normal. With low oil pressure, switch opens and causes a Low gauge reading.
A temperature–sensitive variable resistor (1.18 kΩ – 160.31 kΩ). When coolant temperature is low, resistance is high. When engine coolant temperature is high, resistance is low.
gasoline engines
Natural Gas Vehicle (NGV)
42 C175
A147
Powertrain Control Module (PCM) (12A650)
23–10, 24–11
4 C110
2 C1026
39 20 RD/WH
1 C1064
B10
Engine Coolant Temperature (ECT) sensor
2 C1064 (12A648)
See page 10–7
G201
7 C110
C1033
7
39 20 RD/WH
1 C1064
B10
Engine Coolant Temperature (ECT) sensor
2 C1064 (12A648)
See page 10–7
G201
2 C175
A147
Powertrain Control Module (PCM) (12A650)
23–8, 24–8