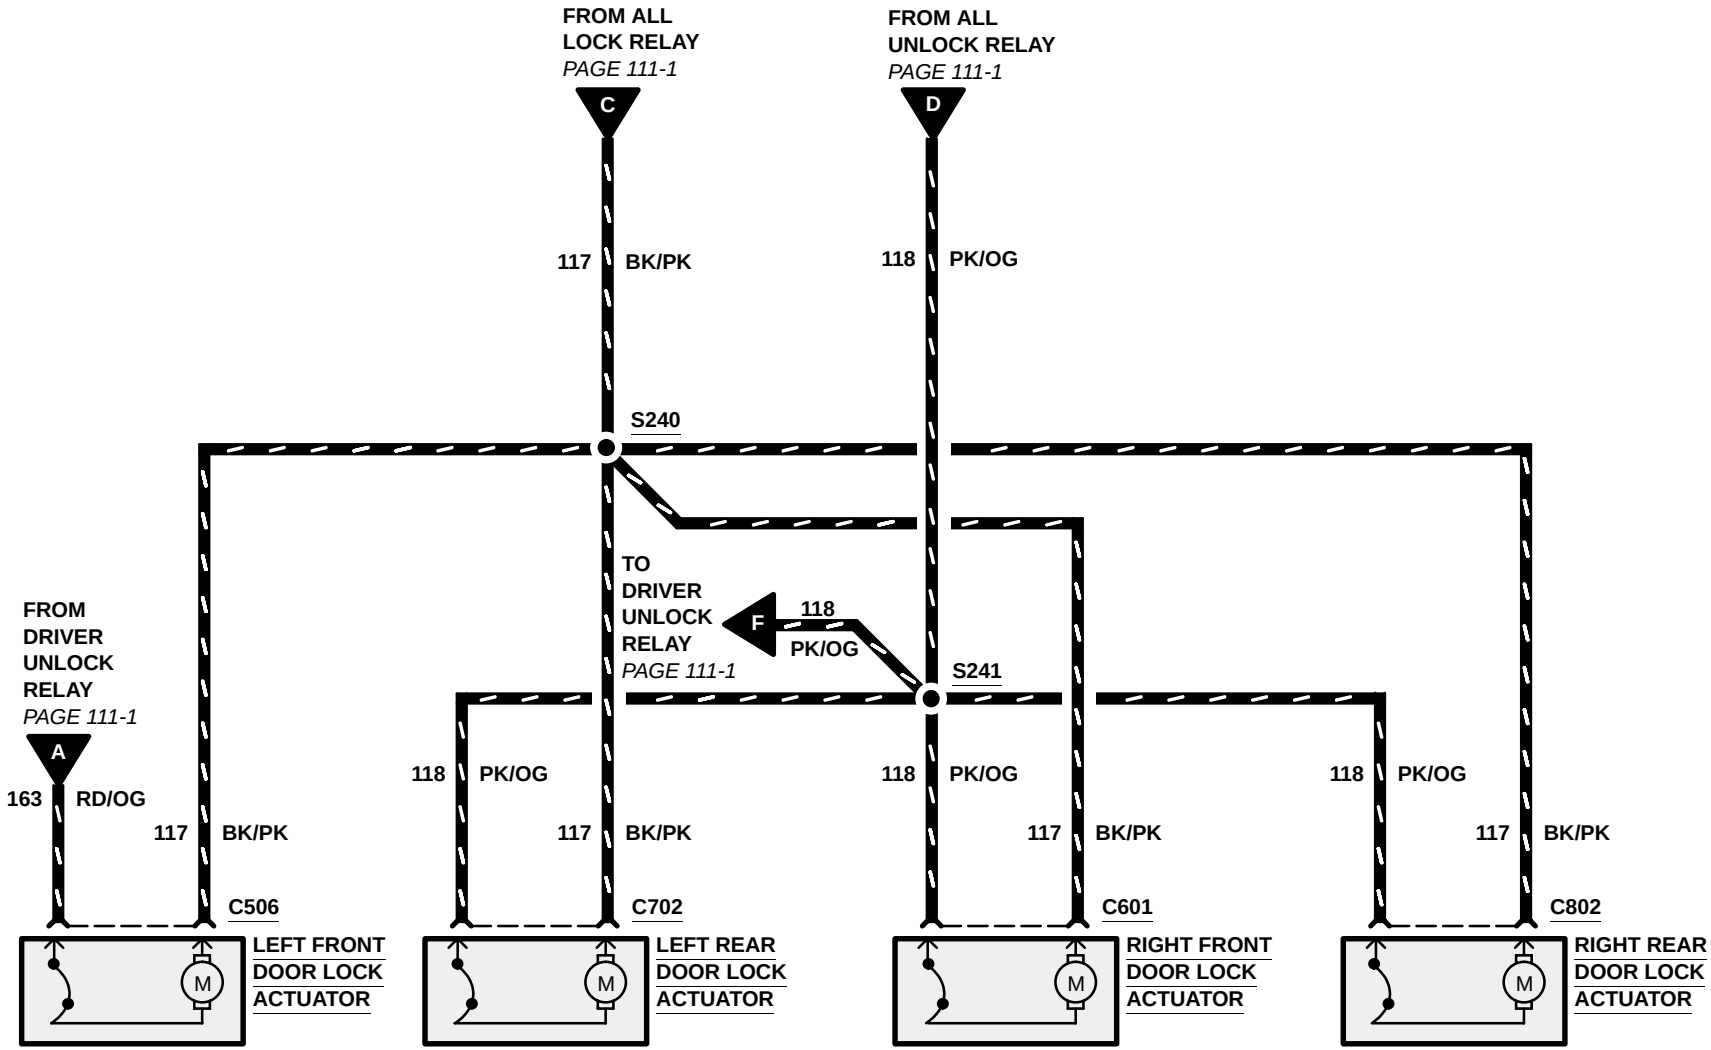
FROM ALL LOCK RELAY
PAGE 111-1
C
FROM ALL UNLOCK RELAY
PAGE 111-1
D
117 BK/PK
118 PK/OG
S240
TO DRIVER UNLOCK RELAY
PAGE 111-1
F
118 PK/OG
S241
FROM DRIVER UNLOCK RELAY
PAGE 111-1
A
163 RD/OG
118 PK/OG
117 BK/PK
118 PK/OG
117 BK/PK
118 PK/OG
117 BK/PK
C506
C702
C601
C802
M
LEFT FRONT DOOR LOCK ACTUATOR
LEFT REAR DOOR LOCK ACTUATOR
RIGHT FRONT DOOR LOCK ACTUATOR
RIGHT REAR DOOR LOCK ACTUATOR