-50

F40005

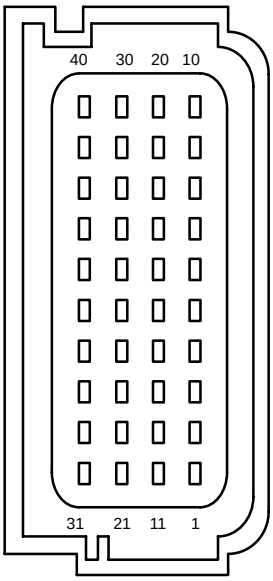

C423

14014

A29
Air bag diagnostic monitor

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	15S-JA38 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
18	91S-JA38 (BK/RD)	Ground, switched
19	15S-J34 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched
20	91S-JA34 (BK/RD)	Ground, switched
21	–	not used
22	–	not used
23	9-JA55 (BN/YE)	Sensor signal return (reference/ground)
24	–	not used
25	7-JA53 (YE/RD)	Voltage D.C. supplied at all times (sensor)
26	31S-GE52 (BK/RD)	Ground, switched

Pin	Circuit	Circuit Function
27	15S-JA33 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
28	91S-JA33 (BK/BU)	Ground, switched
29	91S-JA37 (BK/GN)	Ground, switched
30	15S-JA37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
31	–	not used
32	–	not used
33	–	not used
34	9-JA53 (BN/RD)	Sensor signal return (reference/ground)
35	–	not used
36	9-JA54 (BN)	Sensor signal return (reference/ground)
37	9-JA39 (BN)	Sensor signal return (reference/ground)
38	8-JA39 (WH)	Sensor signal
39	9-JA40 (BN/WH)	Sensor signal return (reference/ground)
40	8-JA40 (WH/VT)	Sensor signal