C776

9H589

Y109
Injector 2



F02058

Pin	Circuit	Circuit Function
1	31S-RL11 (BK/YE)	Ground, switched
2	15-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)

C777

9H589

Y110
Injector 3



F02058

Pin	Circuit	Circuit Function
1	31S-RL12 (BK/BU)	Ground, switched
2	15-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)

C778

9H589

Y111
Injector 4



F02058

Pin	Circuit	Circuit Function
1	31S-RL13 (BK/OG)	Ground, switched
2	15-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)

C779 (GY)

9H589

B10
Engine Coolant Temperature (ECT) sensor

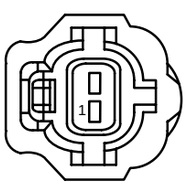

F02027

Pin	Circuit	Circuit Function
1	8-RJ5 (WH)	Sensor signal
2	9-RJ5 (BN)	Sensor signal return (reference/ground)

C780

12A522

Y33
Electr. Vacuum Regulator (EVR) solenoid valve

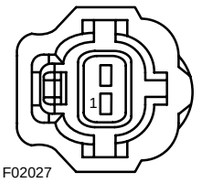

F02027

Pin	Circuit	Circuit Function
1	15-PA25 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-PA25 (BK/GN)	Ground, switched

C782

14A584

M122
Window regulator motor, driver side front

F02065

Pin	Circuit	Circuit Function
1	33-AJ26 (YE)	Switched between: Battery voltage, Ground or Open
2	32-AJ26 (WH)	Switched between: Battery voltage, Ground or Open

C783

14A584

M123
Window regulator motor, passenger side front

F02065

Pin	Circuit	Circuit Function
1	33-AJ17 (YE/VT)	Switched between: Battery voltage, Ground or Open
2	32-AJ17 (WH/VT)	Switched between: Battery voltage, Ground or Open

C784

14A584

M132
Window regulator motor, LH side rear

F02065

M133
Window regulator motor, RH side rear

Pin	Circuit	Circuit Function
1	33-AJ31 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	32-AJ31 (WH/RD)	Switched between: Battery voltage, Ground or Open