PIN	CIRCUIT	CIRCUIT FUNCTION
98	–	NOT USED
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C109	29-6
C112	29-5
C177	29-5
C286	62-7
C287	62-7
C2001	41-4
C2008	69-3

4.0L SOHC

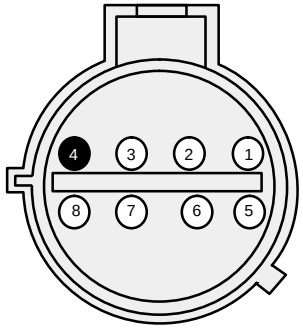

C311

FUEL TANK ASSEMBLY (HARNESS SIDE)

PIN	CIRCUIT	CIRCUIT FUNCTION
1	351 (BN/WH)	Power to Engine Sensors
2	791 (RD/BK)	Fuel Tank Pressure Sensor to PCM
3	359 (GY/RD)	Sensor Signal Return
4	–	NOT USED
5	651 (BK/YE)	Dedicated Ground
6	787 (PK/BK)	Fuel Pump Power
7	57 (BK)	Ground
8	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender

REVISED