C4023

Main Chassis Harness

Air ABS ECU #2

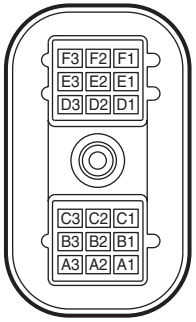

3554088C1

Pin	Circuit	Circuit Function
A1	689 (DB)	ABS to modulator, right rear
A2	—	Not used
A3	—	Not used
B1	604 (OG/RD)	ABS to modulator, right rear
B2	—	Not used
B3	—	Not used
C1	630 (WH/PK)	ABS to modulator, right rear
C2	—	Not used
C3	—	Not used
D1	609 (OG/YE)	ABS to modulator, left rear
D2	301 (OG/RD)	Traction solenoid
D3	304 (YE/WH)	Traction solenoid
E1	620 (VT/LB)	ABS to modulator, left rear
E2	524 (PK/BK)	RH rear sensor, (low) to module
E3	523 (RD/PK)	RH rear sensor, (high) to module
F1	619 (PK/WH)	ABS to modulator, left rear
F2	519 (LG/BK)	LH rear sensor, (low) to module
F3	518 (LG/RD)	LH rear sensor, (high) to module

C4024

Main Chassis Harness

Air ABS ECU #1

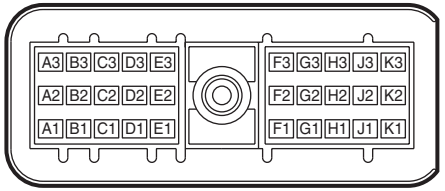

3554087C1

Pin	Circuit	Circuit Function
A1	530 (LG/YE)	ABS controller to chassis ground
A2	530 (LG/YE)	ABS controller to chassis ground
A3	530 (LG/YE)	ABS controller to chassis ground
B1	534 (YE/LG)	ABS pump motor feed
B2	—	Not used
B3	—	Not used
C1	601 (LB/PK)	ABS to modulator, right
C2	960 (BK/LB)	Traction assist on/off indicator to ABS control module
C3	1827 (YE)	Diagnostic
D1	608 (BK/YE)	ABS to modulator, right
D2	—	Not used
D3	1828 (GN)	Diagnostic
E1	600 (DB)	ABS to modulator, right
E2	42 (RD/WH)	Switch to warning lamp
E3	603 (DG)	Failure warning light
F1	602 (RD/LG)	ABS to modulator, left
F2	959 (GY)	Traction assist switch feed to ABS control module
F3	—	Not used
G1	618 (VT/LG)	ABS to modulator, left
G2	712 (OG)	Diagnostics data link
G3	716 (YE)	Diagnostics data link
H1	617 (PK/OG)	ABS to modulator, left
H2	514 (YE/RD)	RH front sensor, (hi) to module
H3	516 (YE/BK)	RH front sensor, (low) to module
J1	521 (TN/OG)	LH front sensor, (high) to module
J2	522 (TN/BK)	LH front sensor, (low) to module
J3	—	Not used
K1	—	Not used
K2	534 (YE/LG)	ABS pump motor feed
K3	534 (YE/LG)	ABS pump motor feed