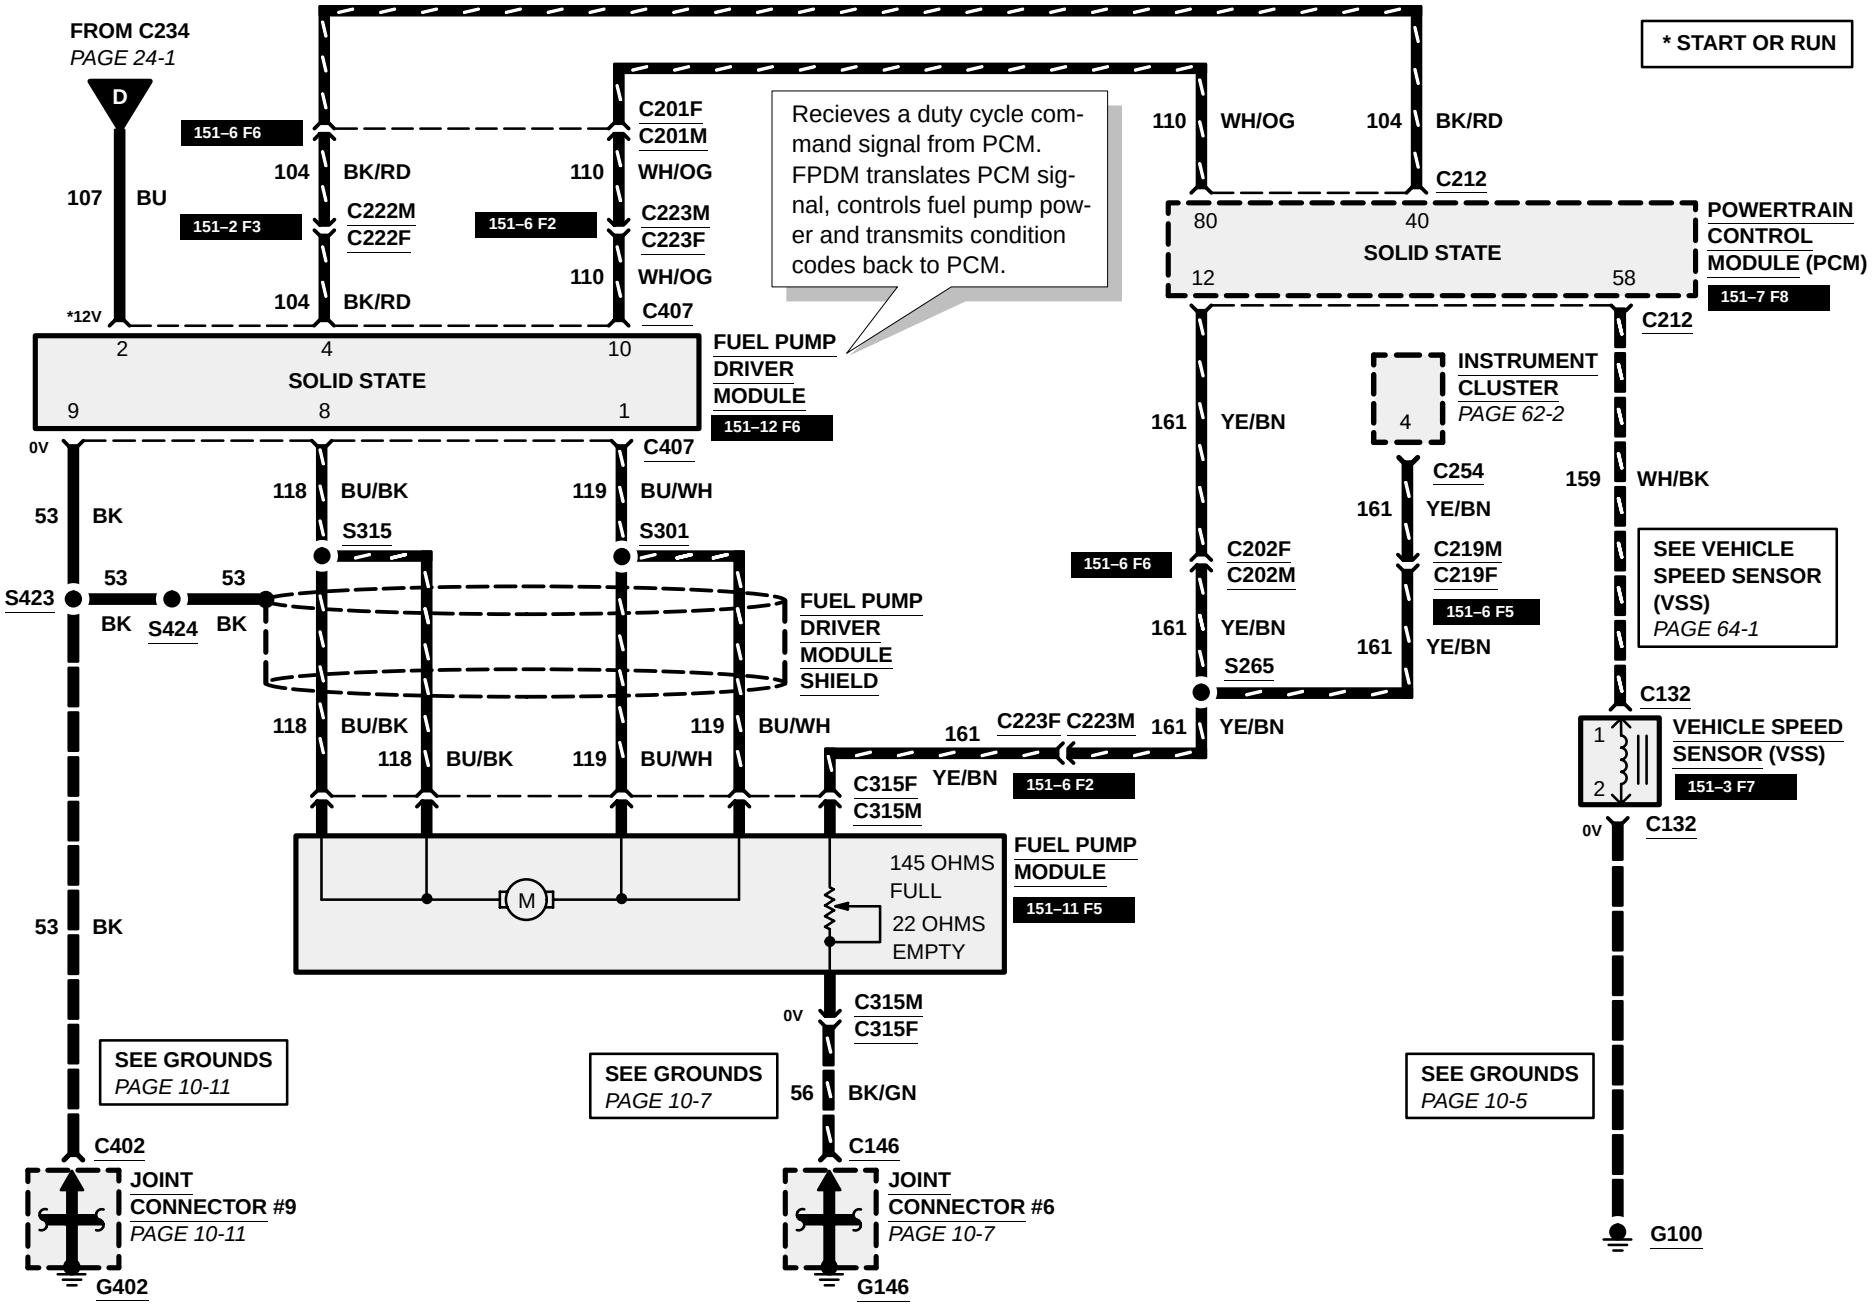
FROM C234
PAGE 24-1
D
151–6 F6
107 BU
151–2 F3
104 BK/RD
C222M
C222F
104 BK/RD
*12V
C201F
C201M
110 WH/OG
C223M
C223F
151–6 F2
110 WH/OG
C407
Recieves a duty cycle command signal from PCM. FPDM translates PCM signal, controls fuel pump power and transmits condition codes back to PCM.
110 WH/OG
104 BK/RD
C212
80
40
SOLID STATE
12
58
POWERTRAIN CONTROL MODULE (PCM)
151–7 F8
* START OR RUN
2
4
10
SOLID STATE
9
8
1
FUEL PUMP DRIVER MODULE
151–12 F6
C212
INSTRUMENT CLUSTER
PAGE 62-2
4
161 YE/BN
C254
161 YE/BN
159 WH/BK
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
0V
C407
118 BU/BK
119 BU/WH
53 BK
S315
S301
S423
53 BK
S424
53 BK
151–6 F6
C202F
C202M
161 YE/BN
C219M
C219F
151–6 F5
161 YE/BN
FUEL PUMP DRIVER MODULE SHIELD
S265
C132
118 BU/BK
119 BU/WH
161 C223F C223M 161 YE/BN
1
2
VEHICLE SPEED SENSOR (VSS)
151–3 F7
118 BU/BK
119 BU/WH
C315F
C315M
161 YE/BN
151–6 F2
0V
C132
145 OHMS FULL
22 OHMS EMPTY
FUEL PUMP MODULE
151–11 F5
M
53 BK
C315M
C315F
0V
SEE GROUNDS
PAGE 10-11
SEE GROUNDS
PAGE 10-7
56 BK/GN
SEE GROUNDS
PAGE 10-5
C402
C146
JOINT CONNECTOR #9
PAGE 10-11
JOINT CONNECTOR #6
PAGE 10-7
G100
G402
G146