C4211a

14A488

Navigation amplifier

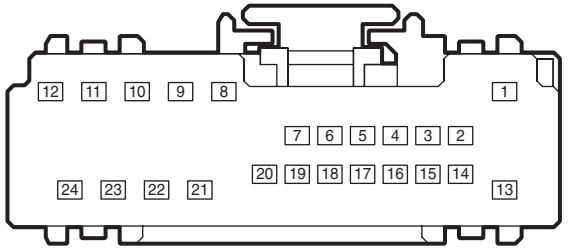

2L1T-14A464-CA (F)

Pin	Circuit	Circuit Function
1	1001 (WH/YE)	Fused battery feed to module, GEM-input
2	280 (LG)	Speaker voice coil feed front (lh channel) amplifier input
3	857 (WH/OG)	Left front amp input return
4	168 (RD/BK)	Radio- sub-woofer high audio (-)
5	167 (BN/OG)	Radio- sub-woofer high audio (+)
6	277 (LB/BK)	Amplifier speaker switch to left rear speaker
7	859 (YE)	Left rear amp input return
8	—	not used
9	—	not used
10	—	not used
11	—	not used
12	1205 (BK)	General ground (type 4 ground)
13	1001 (WH/YE)	Fused battery feed to module, GEM-input
14	279 (WH/RD)	Speaker voice coil feed front (rh channel) amplifier input
15	858 (BN)	Right front amp input return
16	—	not used
17	—	not used
18	278 (VT/WH)	Amplifier speaker switch feed to right rear speaker
19	855 (LB)	Right rear amp input return
20	—	not used
21	—	not used
22	173 (DG/VT)	Radio- sub-woofer high audio mute
23	—	not used
24	1205 (BK)	General ground (type 4 ground)

C4211b

14A488

Navigation amplifier

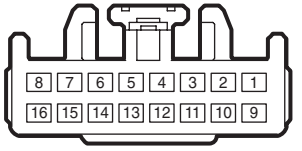

97BG-14489-YTB (F)

Pin	Circuit	Circuit Function
1	805 (WH/LG)	Speaker voice coil feed-front (right channel)
2	811 (DG/OG)	Speaker switch ground to right front speaker
3	804 (OG/LG)	Speaker voice coil feed-front (left channel)
4	813 (LB/WH)	Speaker switch ground to left front speaker
5	—	not used
6	—	not used
7	—	not used
8	—	not used
9	803 (BN/PK)	Amplifier/speaker switch ground to right rear speaker
10	802 (OG/RD)	Amplifier/speaker switch feed to right rear speaker
11	800 (GY/LB)	Amplifier/speaker switch feed to left rear speaker
12	801 (TN/YE)	Amplifier/speaker switch ground to left rear speaker
13	189 (TN/LB)	Radio-amplifier to sub-woofer b (-)
14	187 (DB/OG)	Radio-amplifier to sub-woofer b (+)
15	179 (OG/RD)	Radio-amplifier to sub-woofer a (-)
16	176 (PK/LG)	Radio-amplifier to sub-woofer a (+)