81-1 INTERVAL WIPER/WASHER

2001 CONTINENTAL

For diagnostic information, refer to Section 501-16 of the Workshop Manual.

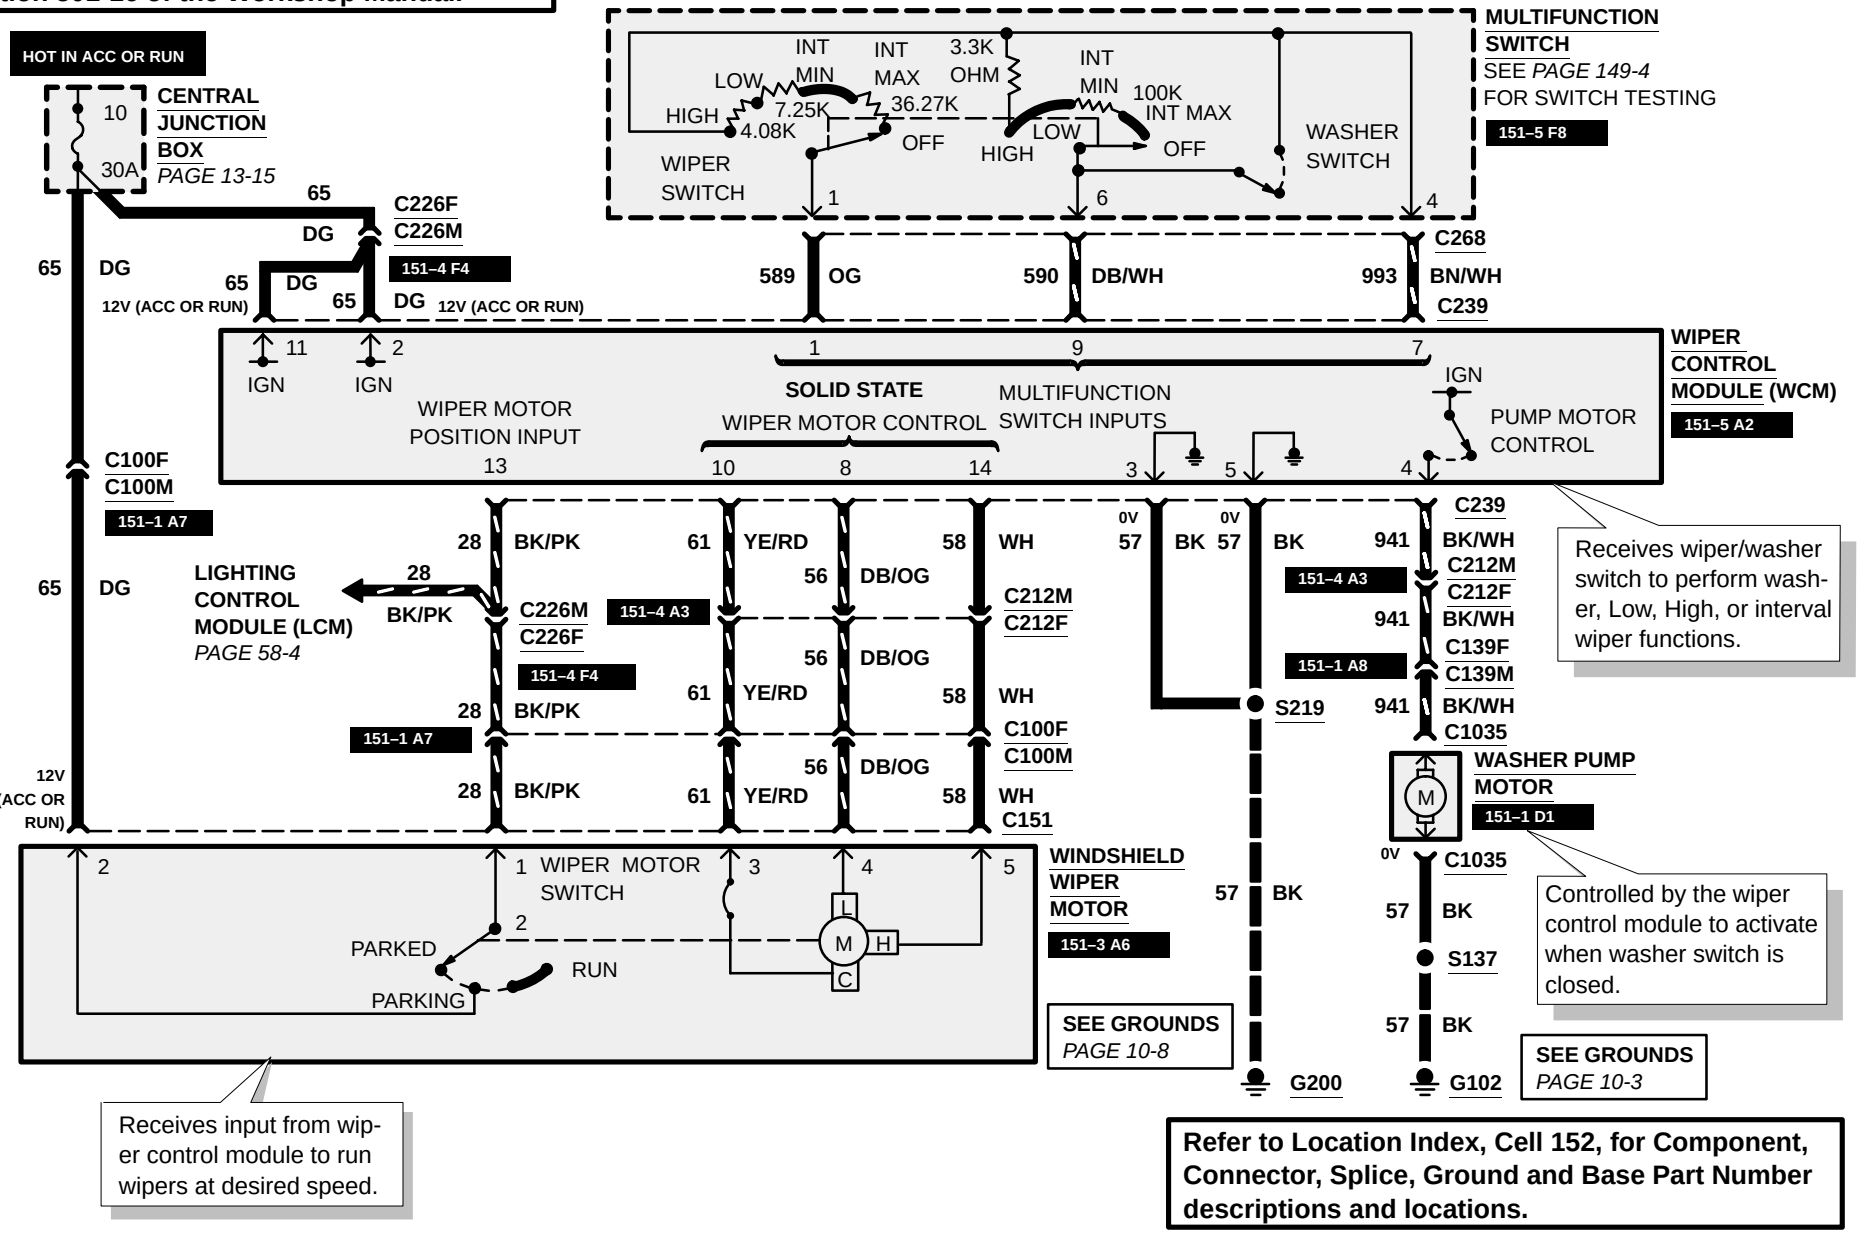

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.