C220c

14401

A30
Instrument cluster

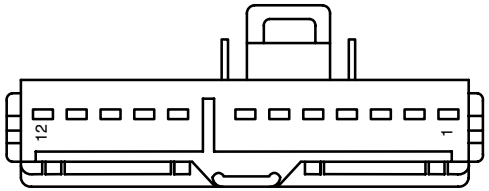

F12129

Pin	Circuit	Circuit function
1	617 (PK/OG)	Air bag crash sensor #1, feed
2	–	not used
3	–	not used
4	–	not used
5	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)
6	1044 (WH/YE)	Voltage supplied in Start and Run (overload protected)
7	904 (LG/RD)	Generator/Battery indicator, control
8	–	not used
9	977 (VT/WH)	Brake indicator, control
10	162 (LG/RD)	Parking brake switch (15A851)
11	–	not used
12	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C250

14401

N278
Ignition switch
(11572)

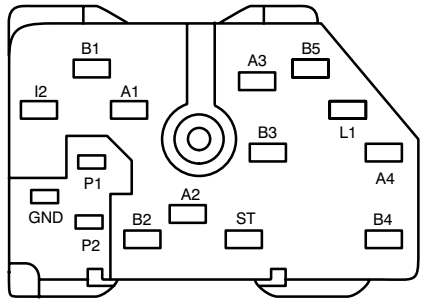

F15009

Pin	Circuit	Circuit function
A1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
A2	730 (GY/LB)	Fused battery feed
A3	1040 (RD/BK)	Voltage in Run (overload protected)
A4	687 (GY/YE)	Voltage in Run (overload protected)
B1	37 (YE)	Voltage supplied at all times (overload protected)
B2	1053 (LB/PK)	Generator/Battery indicator, to, Air suspension compressor relay
B3	37 (YE)	Voltage supplied at all times (overload protected)
B4	1050 (LG/VT)	Voltage supplied at all times (overload protected)
B5	1050 (LG/VT)	Voltage supplied at all times (overload protected)
GND	–	not used
I1	964 (DB/LG)	fused feed, Accessory
I2	–	not used
P1	–	not used
P2	–	not used
ST	32 (RD/LB)	Voltage supplied in Start (overload protected)