C1001

14290

K316
Wiper high/low relay

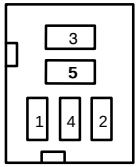

F05064

Pin	Circuit	Circuit function
1	75S-KA2	Voltage: Ignition switch in Accessory or Run, Switched
2	91S-KA16 (BN/GN)	Ground, Switched
3	75S-KA12 (YE/VT)	Voltage: Ignition switch in Accessory or Run, Switched
4	75S-KA10 (YE/GN)	Voltage: Ignition switch in Accessory or Run, Switched
5	75S-KA11 (YE/BK)	Voltage: Ignition switch in Accessory or Run, Switched

C1002

14290

K140
Wiper run/park relay

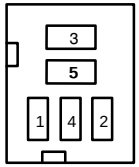

F05064

Pin	Circuit	Circuit function
1	75S-KA2	Voltage: Ignition switch in Accessory or Run, Switched
2	91S-KA39 (BN/YE)	Ground, Switched
3	75S-KA12 (YE/VT)	Voltage: Ignition switch in Accessory or Run, Switched
4	31S-KA12 (BK/WH)	Ground, Switched
5	75S-KA2	Voltage: Ignition switch in Accessory or Run, Switched