C503

14A005

Memory set switch (14776)

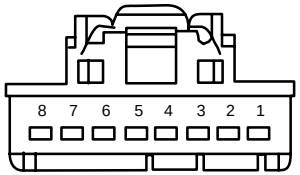

F08279

Pin	Circuit	Circuit function
1	272 (WH/OG)	Memory set switch (14776), Illumination, input
2	267 (BN/LG)	Memory seat switch, position, (1)
3	–	not used
4	–	not used
5	270 (BN/OG)	Memory set switch (14776)
6	268 (BK/OG)	Memory seat switch, position (2)
7	676 (PK/OG)	Ground
8	–	not used

C504a

14A005

Master window adjust switch (14529)

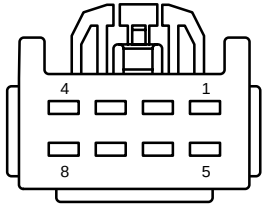

F08167

Pin	Circuit	Circuit function
1	–	not used
2	57 (BK)	Ground
3	313 (WH/YE)	Window switch, feed, right front, Up
4	314 (TN/LB)	Window switch, feed, right front, Down
5	–	not used
6	400 (LB/BK)	Accessory relay, switched power, output
7	991 (TN/LB)	Master window adjust switch (14529), feed, Down
8	992 (WH/BK)	Master window adjust switch (14529), feed, Up