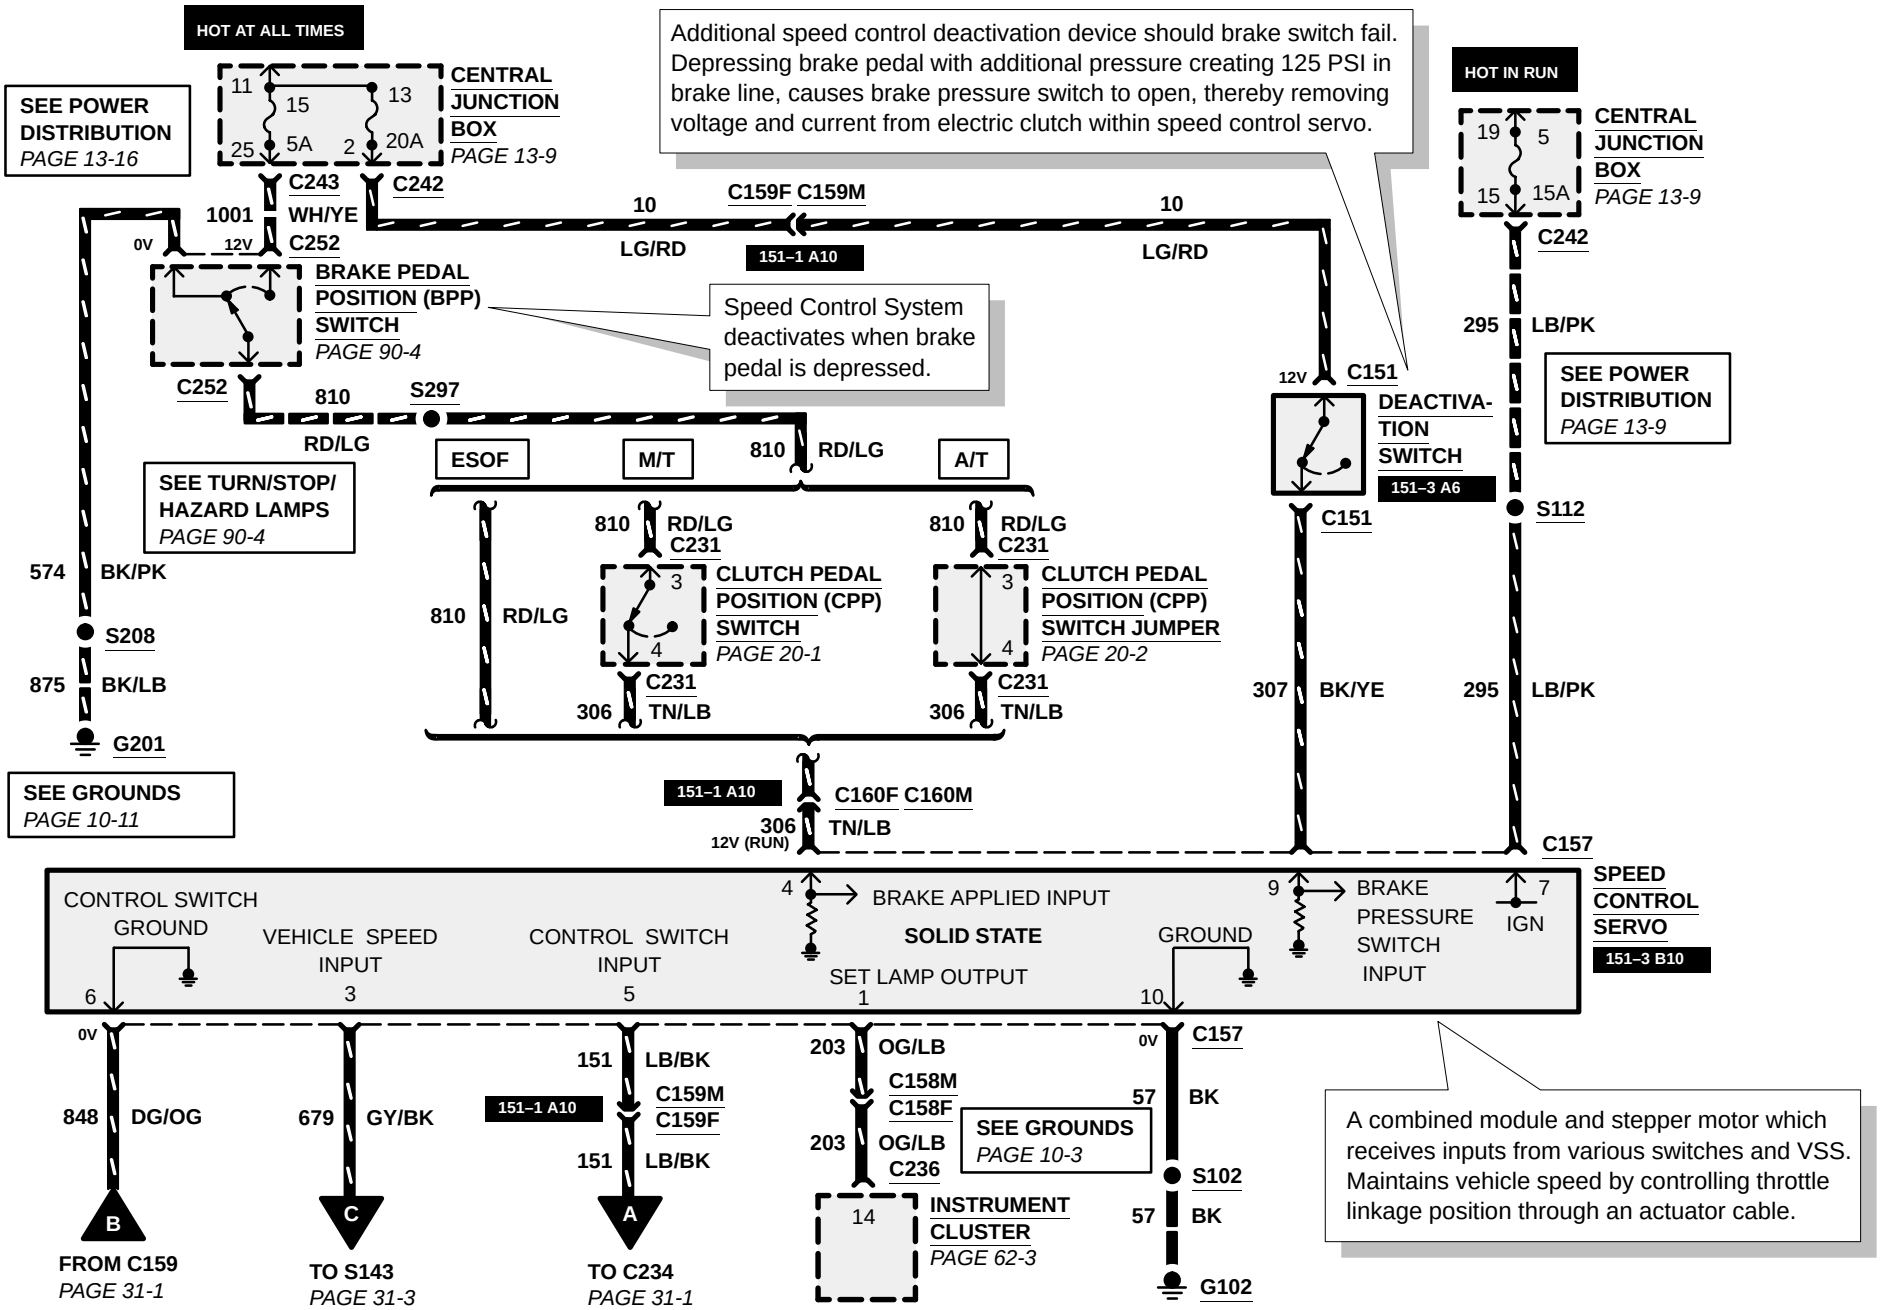
HOT AT ALL TIMES
SEE POWER DISTRIBUTION PAGE 13-16
CENTRAL JUNCTION BOX PAGE 13-9
11
15
13
25
5A
2
20A
C243
C242
1001
WH/YE
C252
0V
12V
BRAKE PEDAL POSITION (BPP) SWITCH PAGE 90-4
C252
810
RD/LG
S297
SEE TURN/STOP/ HAZARD LAMPS PAGE 90-4
574
BK/PK
S208
875
BK/LB
G201
SEE GROUNDS PAGE 10-11
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125 PSI in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
Speed Control System deactivates when brake pedal is depressed.
10
LG/RD
C159F C159M
151–1 A10
10
LG/RD
ESOF
M/T
A/T
810
RD/LG
810
RD/LG
C231
CLUTCH PEDAL POSITION (CPP) SWITCH PAGE 20-1
3
4
306
TN/LB
C231
810
RD/LG
C231
CLUTCH PEDAL POSITION (CPP) SWITCH JUMPER PAGE 20-2
3
4
306
TN/LB
C231
151–1 A10
C160F C160M
306
TN/LB
12V (RUN)
HOT IN RUN
CENTRAL JUNCTION BOX PAGE 13-9
19
5
15
15A
C242
295
LB/PK
SEE POWER DISTRIBUTION PAGE 13-9
12V
C151
DEACTIVATION SWITCH
151–3 A6
C151
307
BK/YE
S112
295
LB/PK
C157
CONTROL SWITCH GROUND
6
VEHICLE SPEED INPUT
3
CONTROL SWITCH INPUT
5
4
BRAKE APPLIED INPUT
SOLID STATE
SET LAMP OUTPUT
1
GROUND
10
9
BRAKE PRESSURE SWITCH INPUT
7
IGN
SPEED CONTROL SERVO
151–3 B10
0V
848
DG/OG
B
FROM C159 PAGE 31-1
679
GY/BK
C
TO S143 PAGE 31-3
151
LB/BK
151–1 A10
C159M
C159F
151
LB/BK
A
TO C234 PAGE 31-1
203
OG/LB
C158M
C158F
203
OG/LB
C236
SEE GROUNDS PAGE 10-3
14
INSTRUMENT CLUSTER PAGE 62-3
0V
C157
57
BK
S102
57
BK
G102
A combined module and stepper motor which receives inputs from various switches and VSS. Maintains vehicle speed by controlling throttle linkage position through an actuator cable.