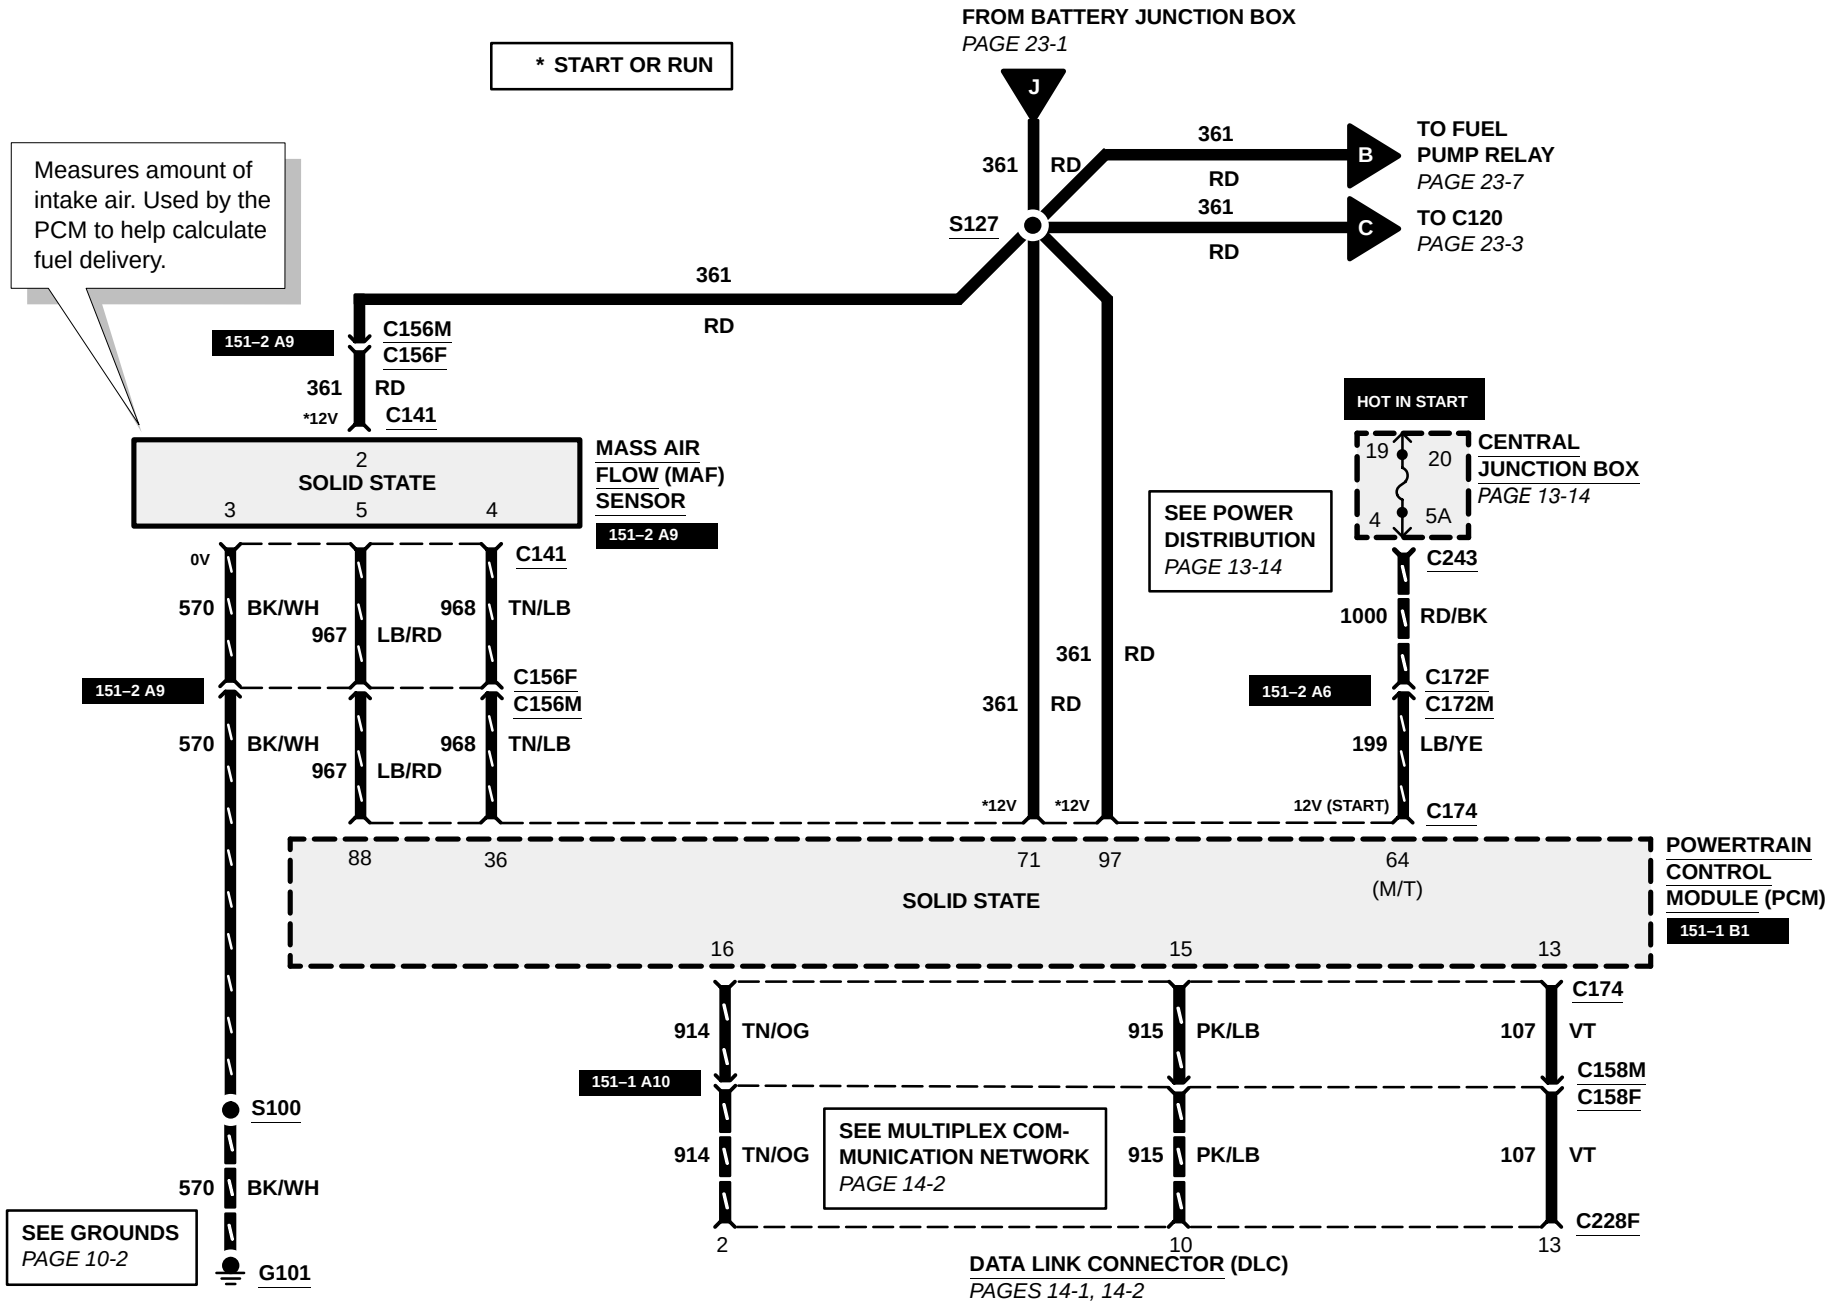
FROM BATTERY JUNCTION BOX
PAGE 23-1
* START OR RUN
J
361 RD
S127
361 RD
B
TO FUEL PUMP RELAY
PAGE 23-7
361 RD
C
TO C120
PAGE 23-3
Measures amount of intake air. Used by the PCM to help calculate fuel delivery.
361 RD
151–2 A9
C156M
C156F
361 RD
*12V
C141
2
SOLID STATE
3 5 4
MASS AIR FLOW (MAF) SENSOR
151–2 A9
HOT IN START
19 20
4 5A
CENTRAL JUNCTION BOX
PAGE 13-14
SEE POWER DISTRIBUTION
PAGE 13-14
C243
1000 RD/BK
0V
570 BK/WH
967 LB/RD
968 TN/LB
C141
361 RD
151–2 A9
C156F
C156M
570 BK/WH
967 LB/RD
968 TN/LB
361 RD
151–2 A6
C172F
C172M
199 LB/YE
*12V
*12V
12V (START)
C174
88 36 71 97 64
(M/T)
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 B1
16 15 13
914 TN/OG
915 PK/LB
107 VT
C174
151–1 A10
C158M
C158F
914 TN/OG
915 PK/LB
107 VT
SEE MULTIPLEX COMMUNICATION NETWORK
PAGE 14-2
C228F
2 10 13
DATA LINK CONNECTOR (DLC)
PAGES 14-1, 14-2
S100
570 BK/WH
SEE GROUNDS
PAGE 10-2
G101