## C1058

### 14290

K309
Low speed fan control relay

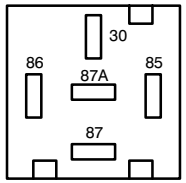


F05107

| Pin | Circuit | Circuit function |
|---|---|---|
| 30 | 30 (BK/LG) | Voltage supplied at all times (overload protected) |
| | 60 (BK/LG) | Voltage supplied at all times (overload protected) |
| 85 | 386 (LB) | Low speed fan control relay, control |
| | 228 (DB) | Low speed fan control relay, control |
| 86 | 296 (WH/VT) | Voltage supplied in Start and Run (overload protected) |
| 87 | 538 (GY/RD) | Low speed fan control relay, switched power |
| | 229 (RD/OG) | Low speed fan control relay, output |
| 87A | – | not used |

## C1062

### 14290

N76
Dual pressure switch

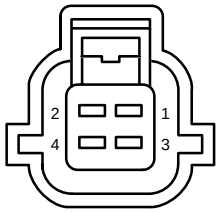


F04255

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 198 (DG/OG) | Dual pressure switch, signal |
| 2 | 347 (BK/YE) | Dual pressure switch, signal |
| 3 | 571 (BK/OG) | Ground |
| 4 | 441 (RD/YE) | A/C pressure switch, to A/C cycling switch |

## C1064

### 9H589

B10
Engine Coolant Temperature (ECT) sensor (12A648)

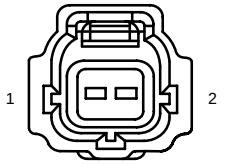


F02091

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 354 (LG/RD) | Engine Coolant Temperature (ECT) sensor (12A648), input |
| 2 | 89 (OG) | signal, return |

## C1065

### 12A522

T1
Ignition coil

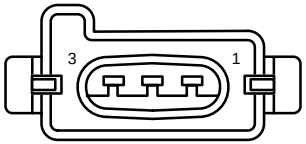


F03203

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1030 (DG/VT) | Ignition coil |
| 2 | 296 (WH/VT) | Voltage supplied in Start and Run (overload protected) |
| 3 | 1024 (LG/WH) | Ignition coil |

## C1066

### 9H589

B10
Engine Coolant Temperature (ECT) sensor (12A648)

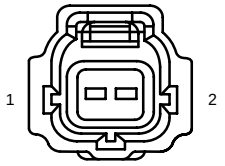


F02091

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 100 (WH/RD) | PCM power relay, output |
| 2 | 264 (WH/LB) | Idle air control valve (IAC) (9F715), control |