C400 (GY)

14N104

E9
Lamp assembly, left rear (13405)

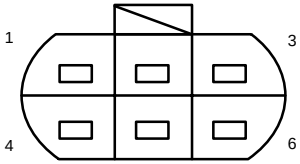

F06151

Pin	Circuit	Circuit function
1	LC14 (PK/WH)	Tail lamp relay, switched output
2	LB12 (RD/GN)	Turn lamps, Left, switched power
3	LR12 (BU/RD)	Voltage supplied in reverse
4	LBE2 (BK)	Ground
5	LQ12 (YE/BK)	Brake pedal position switch (13480), input
6	–	not used

C401 (GY)

14A333

E10
Lamp assembly, right rear (13404)

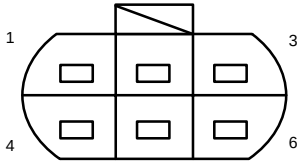

F06151

Pin	Circuit	Circuit function
1	LC13 (PK/WH)	Tail lamp relay, switched output
2	LB11 (RD/WH)	Turn lamps, Right, switched power
3	LR11 (BU/RD)	Voltage supplied in reverse
4	LBE1 (BK)	Ground
5	LQ11 (YE/BK)	Brake pedal position switch (13480), input
6	–	not used

C402 (BK)

14N104

M116
Power window motor, left rear (23394)



F02125

Pin	Circuit	Circuit function
1	RW04 (RD/BK)	Window motor, feed, Open
2	RW05 (RD/YE)	Window motor, feed, closed